



JAGUAR

XK 120

SPARE PARTS CATALOGUE

LEFT- AND RIGHT-HAND DRIVE
OPEN 2-SEATER, FIXED HEAD
AND DROP HEAD COUPE MODELS

ENGINE NUMBERS

RIGHT-HAND DRIVE or LEFT-HAND DRIVE - W.1001 ONWARDS
RIGHT-HAND DRIVE or LEFT-HAND DRIVE - F.1001 ONWARDS

NOTE: Suffix /7 or /8 of Engine Number denotes Compression Ratio.
Suffix "S" of Engine Number denotes fitment of Special Equipment.

CHASSIS NUMBERS

RIGHT-HAND DRIVE	OPEN 2-SEATER	-	660001 ONWARDS
LEFT-HAND DRIVE	OPEN 2-SEATER	-	670001 ONWARDS
RIGHT-HAND DRIVE	FIXED HEAD COUPE	-	669001 ONWARDS
LEFT-HAND DRIVE	FIXED HEAD COUPE	-	679001 ONWARDS
RIGHT-HAND DRIVE	DROP HEAD COUPE	-	667001 ONWARDS
LEFT-HAND DRIVE	DROP HEAD COUPE	-	677001 ONWARDS

NOTE: Special Equipment Models Indicated by prefix "S" to Chassis Number.

JAGUAR CARS LIMITED, COVENTRY, ENGLAND

Telephone :
Coventry 62677 (P.B.X.)

Code : Bentley's 2nd

Telegraphic Address :
"JAGUAR," COVENTRY
Telex 31622

DIRECTORS:

SIR WILLIAM LYONS, CHAIRMAN AND MANAGING DIRECTOR.
W. M. HEYNES, M.I.MECH.E. (A.D.), M.S.A.E.

A. WHITTAKER, GENERAL MANAGER.
E. F. HUCKVALE, F.C.C.S., SECRETARY.

INTERPRETATION OF CATALOGUE

Attention is drawn to the lay-out of this catalogue. It will be observed that the heading of each assembly is printed in **BOLD BLOCK LETTERS**, whilst the spares relevant to each assembly are printed in small type and "OFFSET" TO THE RIGHT.

The fact that certain items (printed in small type) are not "offset" indicates that they do not form part of any assembly and must, therefore, be ordered as individual items.

ILLUSTRATIONS

To aid identification of spares, "exploded" illustrations are incorporated in this catalogue.

These illustrations may be used in the following manner :—

(a) If a Water Pump Seal is required, the index shows that the details for the item are printed on page 6 and that it is illustrated on Plate A. Turning to page 6, the necessary information for the ordering of the part is given, whilst the column headed "Plate No." indicates that reference to item number 137 on Plate A will give a photographic view of the component required.

(b) The details for each illustrated item are printed in the script in numerical Plate number order. An item may therefore be first identified photographically. For example, if a Driving Gear is required for the Oil Pump, a picture of the part may be found with the engine details on Plate A, together with its Plate reference number. It is now an easy matter to find Plate number "A.65" in the script and the Part No. and Technical Description are at once apparent.

ORDERING

Customers are advised to make themselves familiar with the method of ordering spare parts in accordance with the explanatory notes which follow.

PUBLICATION J.8

PRICE £1.10.0

PUBLISHED OCTOBER, 1950
REPRINTED OCTOBER, 1952 (A.L.1)
AMENDED MAY, 1953 (A.L.2)
AMENDED JUNE, 1954 (A.L.3)
REPRINTED JANUARY, 1958

INSTRUCTIONS FOR ORDERING SPARE PARTS

To avoid delay through inaccurate interpretation, it is of great importance that the information detailed in the following paragraphs be strictly adhered to when placing orders.

CAR TYPE

Always quote the Engine and Chassis numbers except when Stock Orders are placed, in which case the Year and Model must be indicated.

The Engine and Chassis numbers will be found stamped on a brass plate which is fitted to the left-hand side of the scuttle.

DETAILS OF PARTS REQUIRED

When ordering, the most complete information should be given to enable us to deal with your requirements expeditiously and to minimise delay in the despatch of the goods. Therefore we strongly recommend that the following procedure be adopted :—

- (1) Identify part with technical description in catalogue.
- (2) On order, quote (a) part number, (b) technical description. **Note :**
In no case should the illustration plate number be given.
- (3) If doubts exist as to the part number or description, a dimensioned sketch will assist in the interpretation of the order or, alternatively, the old part should accompany the order as a pattern. When patterns are sent, it is most important that they be labelled, indicating the name and address of the sender, together with any reference such as order number, etc. Patterns will not be returned unless instructions to that effect accompany the order. In the absence of such instructions, patterns will be scrapped after retention for a period of ONE WEEK.
- (4) To order in "sets" is misleading. Please, therefore, **state the specific quantity required.**

SPECIAL ATTENTION

Particular attention is drawn to the fact that when such items as Wings, Doors, Door Glasses, etc., are required, care should be taken to indicate whether they are located on the left- or right-hand side of the car. The position is determined by the driver's own left or right hand when seated.

Orders for Carpets, Casings, etc., should clearly state the precise colour required.

DESPATCH INSTRUCTIONS

The full address of the destination to which the goods are to be sent, together with that of the customer, should be clearly defined.

Whilst every effort will be made to observe customers' wishes as to the mode of transport, it is the normal custom to utilise the quickest possible method, whether it be post, passenger train or road transport, this being dependent upon the size and weight of the package and the destination.

PRICES

Current retail prices, shown in the Master Parts Price List, are subject to alteration without notice and are for delivery at works. Postage, carriage and packing will be charged extra.

DAMAGE BY FIRE OR ACCIDENT

Whilst every precaution is taken, we do not accept liability for damage which may be caused by fire to any motor car or part thereof entrusted to us for any purpose whatsoever. Nor is liability accepted for accidental damage.

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
CYLINDER BLOCK	1-6C	A	CYLINDER HEAD—(continued)		
Cap Screws (Sealing Rings)	1	A	Camshafts	8	B
Connecting Rod	3	A	Camshaft Bearings	8	B
Connecting Rod Bearings (Big End)	3	A	Camshaft Covers	8	B
Connecting Rod Bearings (Small End)	3	A	Camshaft Cover Filler Cap	8	B
Connecting Rod Bolts	3	A	Camshaft Cover Gaskets	8	B
Crankshaft	1-2	A	Camshaft Cover Sealing Plug	8A	B
Crankshaft Bearings	2	A	Camshaft Ring Dowels	8	
Crankshaft Bush	2	A	Camshaft Studs	8	B
Crankshaft Damper	2	A	Conduit (High Tension Leads)	10	B
Crankshaft Damper Centre	2	A	Cylinder Head Gasket	7	B
Crankshaft Oil Pump Gear	2	A	Cylinder Head Oil Pipe	9	B
Crankshaft Oil Thrower	2	A	Engine Decarbonising Gaskets	10A	B
Crankshaft Pulley	2	A	Exhaust Manifolds	9	B
Crankshaft Split Cone	2	A	Exhaust Manifold Gaskets	9	B
Crankshaft Starter Jaw	1	A	Exhaust Manifold Studs	9	B
Crankshaft Thrust Washers	2	A	Front Cover	8A	B
Crankshaft Timing Gear	2	A	High Tension Leads	10	B
Drain Tube (Bearing Cap)	1	A	Inlet Manifold	9	B
Engine Damper	6B		Inlet Manifold Gaskets	9	B
Engine Overhaul Gaskets	6C		Inlet Manifold Studs	9	B
Flywheel	2	A	Rev. Counter Adapter	8A	B
Flywheel Dowels	2	A	Rev. Counter Adapter Oil Seal	8A	B
Front Engine Mounting	6B	A	Rev. Counter Adapter Oil Thrower	8A	B
Front Engine Plate	6B	A	Rev. Counter Adapter Shaft	8A	B
Liners	1		Sparkling Plugs	10	B
Oil Cleaner	5-6	A	Starting Pipe	10	B
Oil Cleaner Element	5	A	Starting Pipe Flange	9	B
Oil Cleaner Gasket	6	A	Thermostat	10	B
Oil Cleaner Relief Valve	6	A	Valves	7	B
Oil Pipes	5	A	Valve Adjusting Pads	7-8	B
Oil Pump	4	A	Valve Collars	7	B
Oil Pump Coupling Shaft	4	A	Valve Cottars	7	B
Oil Pump Delivery Pipe	4	A	Valve Guides	7	B
Oil Pump Drive Shaft	4	A	Valve Inserts	7	B
Oil Pump Gasket	4	A	Valve Springs	7	B
Oil Pump Gears	4	A	Valve Spring Seats	7	B
Oil Pump Spindle	4	A	Valve Tappets	7	B
Oil Sump	4	A	Valve Tappet Guides	7	B
Oil Sump Deflector	5		Water Outlet Elbow	9	B
Oil Sump Dipstick	5	A			
Oil Sump Drain Plug	5	A			
Oil Sump Element	5	A			
Oil Sump Floating Filter	4	A			
Oil Sump Gasket	5	A			
Oil Sump Seals	4	A			
Oil Sump Trays	5	A			
Pistons	2-3	A			
Piston Rings	2-3	A			
Rear Cover	1	A			
Rear Engine Mounting	6B	A			
Ring Dowels (Rear Cover)	1	A			
Sealing Ring (Rear Cover)	1	A			
Stabilizer	6B				
Studs (Cylinder Head)	1	A			
Torque Arm	6C	A			
Water Drain Tap	1	A			
Water Pump	6-6A	A			
Water Pump Banjo	6A	A			
Water Pump Bearings	6-6A	A			
Water Pump Driving Dogs	6-6A	A			
Water Pump Fan	6A	A			
Water Pump Fan Belt	6A	A			
Water Pump Fan Hub	6A	A			
Water Pump Fan Pulley	6A	A			
Water Pump Felt Washers	6-6A	A			
Water Pump Gasket	6-6A	A			
Water Pump Impellor	6-6A	A			
Water Pump Seal	6-6A	A			
Water Pump Spindle	6-6A	A			
CYLINDER HEAD	7-10	B			
Anti-Blow-Back Valve	10				
Anti-Blow-Back Valve Spring	10				
Breather Housing	8A	B			
Breather Pipe (Flexible)	8A	B			
Breather Pipe (Tube)	8A	B			
			TIMING GEAR	11-12A	C
			Adjusting Plate	11	C
			Camshaft Sprockets	11	C
			Chain Tensioner	12	C
			Chain Tensioner Bracket	12	C
			Chain Tensioner Spring	12	C
			Idler Sprocket	11	C
			Idler Sprocket Eccentric Shaft	11	C
			Intermediate Sprocket (20 Teeth)	11	C
			Intermediate Sprocket (28 Teeth)	11	C
			Intermediate Sprocket Shaft	11	C
			Mounting Brackets	11	C
			Oil Spray Bracket	12	C
			Timing Chains	12	C
			Timing Cover	12A	C
			Timing Cover Gasket	12A	C
			Timing Cover Oil Seal	12A	C
			Vibration Damper	12-12A	C
			Vibration Damper Bracket	12-12A	C
			CARBURETTER	13-14C	D
			Connecting Shaft	14 & 14B	D
			Coupling Shaft	14 & 14B	D
			Feed Pipe	14 & 14C	D
			Flange Gasket	14 & 14B	D
			Flexible Coupling	14 & 14B	D
			Flexible Pipe	14 & 14C	D
			Float	13 & 14A	D
			Float Chambers	13 & 14A	D
			Front Carburetter	13 & 14A	D
			Gland Spring	13 & 14A	D
			Gland Washers	13 & 14A	D
			Jet Bearings	13 & 14A	D
			Jet and Head	13 & 14A	D

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate
CARBURETTER—(continued)			GEARBOX ("S.H." SERIES)—(continued)		
Needle	13 & 14A	D	Countershaft	22	H
Needle and Seat	13 & 14A	D	Countershaft Gear-Unit	22	H
Oil Damper	13 & 14A	D	Countershaft Needle Rollers	22	H
Overflow Pipes	14 & 14C	D	Countershaft Thrust Washers	22	H
Rear Carburetter	13 & 14A	D	Dipstick	21	G
Sealing Rings	13 & 14A	D	Drain Plug	20	G
Solenoid	13 & 14B	D	Extension	20	G
Starting Needle	14 & 14B	D	Extension Bearing	20	G
Starting Pipe	14 & 14C	D	Front End Cover	20	G
Suction Chambers	13 & 14A	D	Front End Cover Oil Seal	20	G
Thermostat Jet	14 & 14B	D	Interlock Balls	21	G
Throttle Lever	13 & 14A	D	Interlock Roller	21	G
Throttle Spindles	13 & 14A	D	Mainshaft	22	H
			Mainshaft Bearings	20	G
			Mainshaft Flange	21	H
			Mainshaft Gears	22	H
			Mainshaft Needle Rollers	22	H
			Mainshaft Operating Sleeve	22	H
			Mainshaft Synchro Shims	22	H
			Mainshaft Synchro Sleeve	22	H
			Mainshaft Synchro Springs	22	H
			Rear End Cover	20	G
			Rear End Cover Oil Seal	20	G
			Reverse Gear	22	H
			Reverse Slipper	22	H
			Reverse Spindle	22	H
			Selectors	20	G
			Speedometer Driven Gear	20	G
			Speedometer Driving Gear	22	H
			Striking Rods	20	G
			Top Cover	21	G
AIR CLEANERS	14D—14E	W			
ACCELERATOR CONTROLS	15—16	E			
Accelerator Pedal	15	E			
Accelerator Pedal Fulcrum Pin	15	E			
Accelerator Pedal Pad	15	E			
Adjustable Bracket	15	E			
Control Rods	16	E			
Intermediate Bracket	16	E			
Intermediate Throttle Lever	16	E			
Mounting Bracket	15	E			
Scuttle Bracket	15	E			
Socket	16	E			
CLUTCH AND CLUTCH CONTROL	17—19A	F	GEARBOX ("J.H." SERIES)	23—25	G & J
Adjusting Rod	19A	F	Breather Plug	24	G
Adjusting Rod Spring	19A	F	Casing	23	G
Anti-Rattle Spring	17 & 17A	F	Change-Speed Forks	23	G
Bearing Housing	19A	F	Change-Speed Lever	24	G
Clutch Cover	17 & 17A	F	Change-Speed Lever Bearing	24	G
Clutch Housing	17—18	F	Change-Speed Lever Knob	24	G
Clutch Housing Cover Plate	18	F	Constant Pinion	25	J
Clutch Pedal	19	F	Constant Pinion Oil Thrower	25	J
Clutch Shaft	19	F	Constant Pinion Bearing (Cage)	25	J
Clutch Shaft Lever	19	F	Constant Pinion Shaft	25	J
Clutch Unit	17 & 17A	F	Constant Pinion Shaft Bearing	23	G
Draught Excluder	19	F	Constant Wheel	25	J
Driven Plate	17 & 17A	F	Countershaft	25	J
Gaiter	19	F	Countershaft Gears	25	J
Operating Fork	19	F	Countershaft Needle Rollers	25	J
Operating Lever	19	F	Countershaft Thrust Washers	25	J
Operating Shaft	19	F	Dipstick	24	G
Pedal Pad	19A	F	Drain Plug	23	G
Pedal Stem and Plate	19A	F	Extension	23	G
Pressure Plate	17 & 17A	F	Extension Bearing	23	G
Release Bearing	17 & 17A	F	Front End Cover	23	G
Release Lever	17 & 17A	F	Front End Cover Oil Seal	23	G
Return Spring	19A	F	Interlock Balls	24	G
Sealing Ring	19	F	Interlock Roller	24	G
Spherical Bearings	19 & 19A	F	Mainshaft	25	J
Support Bracket	18	F	Mainshaft Bearings	23	G
Thrust Springs	17 & 17A	F	Mainshaft Flange	24	J
			Mainshaft Gears	25	J
			Mainshaft Needle Rollers	25	J
			Mainshaft Operating Sleeve	25	J
			Mainshaft Synchro Shims	25	J
			Mainshaft Synchro Sleeve	25	J
			Mainshaft Synchro Springs	25	J
			Rear End Cover	23	G
			Rear End Cover Oil Seal	23	G
			Reverse Gear	25	J
			Reverse Slipper	25	J
			Reverse Spindle	25	J
			Selectors	23	G
			Speedometer Driven Gear	23	G
			Speedometer Driving Gear	25	J
			Striking Rods	23	G
			Top Cover	24	G
GEARBOX ("S.H." SERIES)	20—22	G & H			
Breather Plug	21	G			
Casing	20	G			
Change-Speed Forks	20	G			
Change-Speed Lever	21	G			
Change-Speed Lever Bearing	21	G			
Change-Speed Lever Knob	21	G			
Constant Pinion	22	H			
Constant Pinion Oil Thrower	22	H			
Constant Pinion Bearing (Cage)	22	H			
Constant Pinion Shaft	22	H			
Constant Pinion Shaft Bearing	20	G			
Constant Pinion Shims	22	H			

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
GEARBOX ("J.L." SERIES)	25A—25C		REAR AXLE (SALISBURY)	28C—28G	XL
Breather Plug	25B		Brake Drums	28D & 28G	XL
Casing	25A		Crown Wheel and Pinion	28C & 28E	XL
Change-Speed Forks	25B		Crown Wheel and Lock Strap	28C & 28E	XL
Change-Speed Lever	25B		Differential Adjusting Shims	28C & 28E	XL
Change-Speed Lever Bearing	25B		Differential Bearing (Diff. Case)	28C & 28E	XL
Change-Speed Lever Knob	25B		Differential Bearing (Inner end of Pinion)	28C & 28E	XL
Constant Pinion	25C		Differential Bearing (Outer end of Pinion)	28C & 28E	XL
Constant Pinion Bearing (Cage)	25C		Differential Bolts	28C & 28E	XL
Constant Pinion Oil Thrower	25C		Differential Bolts Lock Plates	28C & 28E	XL
Constant Pinion Shaft	25C		Differential Case	28C & 28F	XL
Constant Pinion Shaft Bearing	25A		Differential Unit Pinion Mate Gears	28C & 28F	XL
Constant Wheel	25C		Differential Unit Side Gears	28C & 28F	XL
Countershaft	25C		Hub	28D & 28G	XL
Countershaft Gears	25C		Hub Bearings	28D & 28F	XL
Countershaft Needle Rollers	25C		Hub Bearings Oil Seal	28D & 28F	XL
Countershaft Thrust Washers	25C		Hub Bearings Shims	28D & 28F	XL
Dipstick	25B		Oil Drain Plug	28C & 28E	XL
Drain Plug	25A		Oil Filler Plug	28C & 28E	XL
Front End Cover	25A		Pinion Companion Flange	28C & 28F	XL
Front End Cover Oil Seal	25A		Pinion Oil Seal	28D & 28E	XL
Interlock Balls	25A		Rear Axle Casing	28C & 28E	XL
Interlock Roller	25A		Rear Axle Shafts	28D & 28F	XL
Mainshaft	25C		Rear Axle Shafts Oil Seal	28D & 28F	XL
Mainshaft Bearings	25A		Rear Axle Shafts Spacer	28C & 28E	XL
Mainshaft Flange	25B				
Mainshaft Gears	25C				
Mainshaft Needle Rollers	25C				
Mainshaft Operating Sleeve	25C				
Mainshaft Synchro Shims	25C				
Mainshaft Synchro Sleeve	25C				
Mainshaft Synchro Springs	25C				
Rear End Cover	25A				
Rear End Cover Oil Seal	25A				
Reverse Gear	25C				
Reverse Slipper	25C				
Reverse Spindle	25C				
Selectors	25A				
Speedometer Driven Gear	25A				
Speedometer Driving Gear	25C				
Striking Rods	25A				
Top Cover	25B				
PROPELLER SHAFT	26	K	FRONT SUSPENSION	29—31A	M-N-P
Journal	26	K	Anti-Roll Bar	31	P
Needle Bearings	26	K	Anti-Roll Bar Anchor Bracket	31A	P
Sliding End	26		Anti-Roll Bar Bearing	31	P
			Anti-Roll Bar Buffer	31A	P
			Ball Joint (Upper)	30	N
			Ball Pin (Lower)	30	N
			Brake-Drum	31	N
			Front Brake Assembly	31	N
			Front Shock Absorbers	31	N
			Hub	31	N
			Hub Bearings	31	N
			Lower Wishbone Levers	29	M
			Lower Wishbone Shaft	29	M
			Seal (Lower Wishbone Levers)	31	N
			Seal (Stub Axle Carrier)	30	N
			Shims (Wheel Camber)	29	M
			Shims (Wheel Castor)	30	N
			Stub Axle Carrier	30	N
			Stub Axle Shaft	31	N
			Stub Axle Shaft Grease Retainer	31	N
			Steering Arms	31	N
			Torsion Bar	31A	P
			Torsion Bar Adjusting Lever	31A	P
			Torsion Bar Flange	31A	P
			Torsion Bar Trunnion	31A	P
			Upper Wishbone Levers	29	M
			Upper Wishbone Shaft	29	M
REAR AXLE (E.N.V.)	27—28B	L	ROAD WHEELS	32	
Abutment Bracket (Handbrake Cable)	28B		Badge for Wheel Disc	32	
Brake Drums	28B		Balance Weights	32	
Crown Wheel and Pinion	28	L	Inner Tube	32	
Differential Adjusting Nut	28	L	Outer Cover	32	
Differential Adjusting Shims	28	L	Wheel Disc	32	
Differential Bearing (Diff. Box)	28	L			
Differential Bearing (Pinion Head)	28	L			
Differential Bearing (Pinion Shank)	28	L			
Differential Bolts	28	L			
Differential Bolt Lock Plates	28	L			
Differential Case	28	L			
Differential Unit	28—28A	L			
Differential Unit Pinion Mate Gears	28	L			
Differential Unit Side Gears	28	L			
Dipstick	27	L			
Hub Bearings	28A	L			
Hub Bearing Housing	28A	L			
Hub Bearing Housing Oil Seal	28A	L			
Hub Bearing Housing Shims	28A	L			
Oil Filler Plug	27	L			
Pinion Companion Flange	28D	L			
Pinion Housing	27	L			
Pinion Housing Oil Seal	28	L			
Rear Axle Assembly	27	L			
Rear Axle Casing	27	L			
Rear Axle Shafts	28A	L			
Rear Axle Shaft Oil Seal	28A	L			
			BRAKES for Chassis No. 660001 to 660979	33—34B	Q
			670001 to 672048		
			669001 to 669002		
			679001 to 679621		
			Air Scoops	33	Q
			Brake Drums	34B	Q
			Front Brake Assembly	33	Q
			Front Brake Backplate	33	Q
			Front Brake Shoes	34	Q
			Front Brake Shoe Springs	33	Q
			Front Wheel-Cylinders	33	Q
			Front Wheel-Cylinder Cup	33	Q
			Front Wheel-Cylinder Gaskets	33	Q

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
BRAKES for Chassis No. 660001 to 660979			BRAKE CONTROLS		
670001 to 672048			for Chassis No. 660980 and subs. ... 39A—39D		AR
669001 to 669002			672049 and subs.		
679001 to 679621			669003 and subs.		
—(continued)			679622 and subs.		
Front Wheel-Cylinder Pipe	33	Q	Bleeder Tube	39D	
Front Wheel-Cylinder Piston	33	Q	Bleeder Wrench	39D	
Rear Brake Assembly	34—34B	Q	Brake Pedal	39A	AR
Rear Brake Backplate	34—34B	Q	Brake Pedal Bearing	39A	AR
Rear Brake Shoes	34A—34B	Q	Brake Pedal Draught Excluder	39A	AR
Rear Brake Shoe Springs	34—34B	Q	Brake Pedal Pad	39A	AR
Rear Wheel-Cylinders	34A	Q	Brake Pedal Return Spring	39A	AR
Rear Wheel-Cylinder Cup	34A	Q	Brake Pedal Shaft	39A	
Rear Wheel-Cylinder Gaskets	34A	Q	Brake Pedal Stem and Plate	39A	AR
Rear Wheel-Cylinder Pistons	34A	Q	Brake Pedal Support Bracket	39A	AR
			Hydraulic Pipes (R.H. Drive cars)	39B—39C	AR
			Hydraulic Pipes (L.H. Drive cars)	39C	AR
			Master Cylinder	39A	AR
			Master Cylinder Adapters	39A	AR
			Master Cylinder Adapter Seals	39A	AR
			Master Cylinder Banjos	39B	AR
			Master Cylinder Boot	39A	AR
			Master Cylinder Gaskets	39B	AR
			Master Cylinder Pistons	39A	AR
			Master Cylinder Piston Seals	39A	AR
			Master Cylinder Shield	39B	AR
			Master Cylinder Springs	39A	AR
			Master Cylinder Stop	39A	AR
			Master Cylinder Valve	39A	AR
			Master Cylinder Valve Seals	39A	AR
			Supply Tank	39B	AR
BRAKES for Chassis No. 660980 and subs. ... 34C—34E	AQ		STEERING	40—41A	S
672049 and subs.			Connecting Tubes	41—41A	S
669003 and subs.			Connecting Tube Ball Joints	41	S
679622 and subs.			Connecting Tube Seals	41—41A	S
Brake Drums	34E	AQ	Drop Arm	40	S
Front Brake Assembly	34C	AQ	End Plate Oil Seal	40	S
Front Brake Backplate	34C	AQ	Idle Lever	41	S
Front Brake Bridge Pipes	34C	AQ	Idle Lever Filler Plug	41	S
Front Brake Shoes	34D	AQ	Idle Lever Shaft	41	S
Front Brake Shoe Springs	34C	AQ	Inner Column	40	S
Front Wheel-Cylinders	34C	AQ	Inner Column Main Nut	40	S
Front Wheel-Cylinder Gaskets	34C	AQ	Inner Column Main Nut Balls	40	S
Front Wheel-Cylinder Piston	34C	AQ	Outer Column	40	S
Front Wheel-Cylinder Seal	34C	AQ	Rocker-shaft	40	S
Rear Brake Adjuster	34D	AQ	Rocker-shaft Oil Seal	40	S
Rear Brake Assembly	34D—34E	AQ	Steering Box	40	S
Rear Brake Backplate	34D—34E	AQ	Steering Box Balls	40	S
Rear Brake Shoes	34E	AQ	Steering Column Control	41A	S
Rear Brake Shoe Springs	34D—34E	AQ	Steering Unit	40	S
Rear Wheel-Cylinders	34D—34E	AQ	Steering Wheel	41A	S
Rear Wheel-Cylinder Gaskets	34D—34E	AQ	Track Rod	41	S
Rear Wheel-Cylinder Pistons	34D—34E	AQ	Track Rod Ends	41	S
Rear Wheel-Cylinder Seal	34D—34E	AQ	Track Rod End Seals	41	S
			Trunnion Bracket	40	S
BRAKE CONTROLS			CHASSIS	42—44C	T
for Chassis No. 660001 to 660979 ... 35—39	R		By-Pass Water Hose	44C	T
670001 to 672048			Chassis Frame	42	T
669001 to 669002			Exhaust System	44—44A	T
679001 to 679621			Jack Socket Plug	42	T
Bleeder Tube	37	R	Petrol Pipes	44B	T
Bleeder Wrench	37	R	Petrol Tank	44A	T
Brake Pedal	35	R	Petrol Tank Element	44A	T
Brake Pedal Bearing	35	R	Radiator Block	44B	T
Brake Pedal Draught Excluder	35	R	Radiator Drain Tap	44B	T
Brake Pedal Pad	35	R	Radiator Filler Cap	44B	T
Brake Pedal Return Spring	35	R	Radiator Thermostat	44C	T
Brake Pedal Shaft	35	R	Radiator Tie Rods	44B	T
Brake Pedal Stem and Plate	35	R	Radiator Water Hoses	44C	T
Brake Pedal Support Bracket	35	R	Rebound Buffers	44	T
Compensator	39	R	Rear Axle Rebound Strap	43	T
Compensator Rod	38	R	Rear Road Spring	43	T
Compensator Rod Spring	38	R	Rear Road Spring Bush	43	T
Handbrake Cable	39	R	Rear Road Spring Gaiters	43	T
Handbrake Cable Bracket	39	R			
Handbrake Lever	38	R			
Handbrake Lever Ratchet	38	R			
Handbrake Lever Shaft	38	R			
Hydraulic Pipes (R.H. Drive)	36—37	R			
Hydraulic Pipes (L.H. Drive)	37	R			
Master Cylinder	35	R			
Master Cylinder Banjos	35	R			
Master Cylinder Cups	35	R			
Master Cylinder Filler Cap	35	R			
Master Cylinder Gaskets	36	R			
Master Cylinder Piston	35	R			
Master Cylinder Shield	36	R			
Master Cylinder Spring	35	R			
Master Cylinder Valve	35	R			
Operating Lever	38	R			
Supply Tank	36	R			

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
CHASSIS—(continued)			BODY—CHASSIS NO. 660001 TO 660058 670001 TO 670184		
Rear Road Spring Shackle	42	T	—(continued)		
Rear Road Spring "U" Bolt	42	T	Rear Wing Supports	54	
Shock Absorbers	43	T	Seats	59	
Spare Wheel Tray	44C	T	Seat Cushions	59	
BODY—CHASSIS NO. 660001 TO 660058 670001 TO 670184			Scuttle Casings	46	
Backlight	60		Side Curtains	60	
Battery Container	48		Side Curtains Fixing Knobs	61	
Battery Cover	48		Side Curtains Fixing Rods	61	
Body Mounting	45—46		Starting Handle Bracket	57	
Body Shell	45		Toggle Clamps	60	
Bonnet	55		Tonneau Cover	60	
Bonnet Badge	56		Windscreen Assembly	48	
Bonnet Buffers	56		Windscreen Centre Pillar	48	
Bonnet Catch	55		Windscreen Side Pillars	49	
Bonnet Catch Hook and Striker	56		BODY—CHASSIS NO. 660059 AND SUBS. ... 62—79B		
Bonnet Control Wire	56		670185 AND SUBS. ...		
Bonnet Hinges	55		Backlight	79A	U
Bonnet Prop	55		Battery Container	65	
Bonnet Prop Stay	55		Battery Cover	65	
Carpets	47		Body Mounting	62	
Clutch/Gearbox Cover	47		Body Shell	62	U
Commission Number Plate	58		Bonnet	73	U
Cushions	59		Bonnet Badge	75	U
Doors	49		Bonnet Buffer	74	U
Door Buffers	50—51		Bonnet Catch	74	U
Door Casings	51		Bonnet Catch Hook and Striker	74	U
Door Hinges	51		Bonnet Catch Control Wire	74	U
Door Locks	49—50		Bonnet Hinge	73	U
Door Lock Strap	51		Bonnet Prop	73	U
Door Striker	50—51		Bonnet Prop Stay	73	U
Facia Board	46		Car Heater Assembly	63A	
Felts	47		Car Heater Air Ducts	63B	
Floorboards	47		Car Heater Air Duct Brackets	63C	
Front Bumper	56		Car Heater Air Duct Hoses	63B	
Front Bumper Spring Bars	56		Car Heater Boxes	63B	
Front Bumper Support Struts	57		Car Heater Brackets	63C	
Front End Assembly	54		Car Heater Channels	63C	
Front Number Plate	58		Car Heater Demister	63B	
Front Wings	54		Car Heater Demister Escutcheon	63C	
Front Wing Stoneguards	54		Car Heater Hoses	63A	
Gauntlets	48		Car Heater Hose Adapter	63A	
Grab Rail	58		Car Heater Hose Banjos	63A	
Hood Cloth	60		Car Heater Return Pipes	63B	
Hood Sticks	59		Car Heater Rheostat Cables	63B	
Instrument Panel	46		Car Heater Rheostat Switch	63B	
Interior Mirror	49		Car Heater Sealing Rubbers	63A	
Interior Trimming	58		Car Heater Tie Plate	63B	
Licence Holder	58		Car Heater Valve	63A	
Luggage Compartment	51—52		Car Heater Valve Knob	63A	
Luggage Compartment Carpet	52		Carpets	64	
Luggage Compartment Floor	51		Clutch/Gearbox Cover	65	
Luggage Compartment Lid	52		Commission Number Plate	76	
Luggage Compartment Lid Casing	52		Door	67	U
Luggage Compartment Lid Handle	52		Door Buffer	69	U
Luggage Compartment Lid Hinges	53		Door Casings	69	U
Luggage Compartment Lid Lock	52		Door Hinges	69	U
Luggage Compartment Lid Prop	53		Door Hinge Pivot Pin	69	U
Petrol Filler Box	53		Door Locks	67	U
Petrol Filler Cap	53		Door Lock Anchor Bracket	68	U
Petrol Filler Door	53		Door Lock Cover Plate	67—69	U
Petrol Filler Door Lock	53		Door Lock Link	68	U
Pin Bead	60		Door Lock Safety Catch	68	U
Propeller Shaft Tunnel	47		Door Lock Striker	69	U
Radiator Grille	56		Door Lock Tension Lever	68	U
Rear Number Plate	58		Floorboards	64	U
Rear Over-Riders	57		Front Bumper	75	U
Rear Over-Riders Spring Bars	57		Front Bumper Extension	75	U
Rear Over-Riders Support Brackets	57		Front Bumper Spring Bars	75	U
Rear Over-Rider Tie Brackets	57		Front Bumper Support Member	75	U
Rear Quarter Casings	58		Front Bumper Support Strut	75	U
Rear Wings	54		Front Number Plate	76	
Rear Wing Cover	54		Front Wing	71A	U
Rear Wing Cover Escutcheons	55		Front Wing Steady	72	
Rear Wing Cover Locks	54		Front Wing Valance	71A—71B	U
Rear Wing Stoneguards	55				

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
BODY—CHASSIS NO. 660059 AND SUBS. 670185 AND SUBS. —(continued)			ELECTRICAL EQUIPMENT—(continued)		
Front Wing Ventilators	71B		Chassis Harness	88	
Front Wing Ventilator Adjusting Plates ...	71B		Cigar Lighter	82—82A	V
Front Wing Ventilator Doors	71B		Cigar Lighter Element	82—82A	
Front Wing Ventilator Gauze	71B		Control Box	82	
Front Wing Ventilator Hinges	71B		Control Box Cover	82	V
Front Wing Ventilator Seals	71B		Dipper Switch	85	V
Gauntlets	64		Distributor	81	
Grab Rail	77	U	Distributor Bearings	81	
Headlamp Container	72	U	Distributor Brush and Spring	81	
Hood Cloth	79		Distributor Condenser	81	
Hood Sticks	78—79	U	Distributor Contacts	81	
Hood Stick Retainers	79		Distributor Cover	81	
Hood Stick Toggle Clamps	79		Distributor Rotor Arm	81	
Instrument Panel	63		Distributor Vacuum Unit	81	
Interior Mirror	66	U	Dynamo	80	V
Interior Trimming	77		Dynamo Armature	80	
Licence Holder	77		Dynamo Bearings	80	
Luggage Compartment	69	U	Dynamo Brushes	80	
Luggage Compartment Floor	69	U	Dynamo Field-Coil	80	
Luggage Compartment Floorboards	69	U	Dynamo Pulley	80	
Luggage Compartment Lid	70	U	Earth-Leads	89	
Luggage Compartment Lid Casing	70	U	Fuse Box	82	V
Luggage Compartment Lid Handle	70	U	Grommets	90A	
Luggage Compartment Lid Hinges	71	U	Headlamps	83—84	V
Luggage Compartment Lid Lock	70	U	Headlamp Adapters	83—84	V
Luggage Compartment Lid Prop	71	U	Headlamp Bulbs	83—84	V
Petrol Filler Box	71	U	Headlamp Dipper Switch	84	V
Petrol Filler Cap	71	U	Headlamp Reflector (with Glass)	83	V
Petrol Filler Door	71A	U	Headlamp Rims	83	V
Petrol Filler Hinge	71A	U	Horns	86	V
Petrol Filler Lock	71A	U	Horn Contacts	86	
Petrol Filler Striker	71A	U	Horn Relay Box	86	V
Pin Bead	79A		Horn-Push	86	V
Propeller Shaft Tunnel	65	U	Horn-Push Contacts	86	V
Propeller Shaft Tunnel Cover	77	U	Ignition Coil	81	V
Racing Windscreen	66	U	Ignition Switch	82—82A	V
Radiator Grille	74	U	Instrument Panel	82—82A	V
Rear Number Plate	76		Lighting Switch	82—82A	V
Rear Over-Riders	75	U	Luggage Boot Harness	89	
Rear Over-Rider Spring Bar	75	U	Number Plate Lamp	86	V
Rear Over-Rider Support Bracket	76	U	Number Plate Lamp Bulb	86	V
Rear Wing	72	U	Panel Harness	88	
Rear Wing Cover	73	U	Panel Switch	82—82A	V
Rear Wing Cover Escutcheon	73	U	Petrol Gauge	82—82A	V
Rear Wing Cover Lock	73	U	Petrol Pump	82	V
Rear Wing Piping	72		Petrol/Oil Switch	82	V
Rear Wing Steady	72		Reverse Lamp	86	V
Replica Plate	77		Reverse Lamp Bulb	86	V
Scuttle Assembly	62		Reverse Lamp Switch	86	V
Scuttle Casings	63	U	Rev. Counter and Clock	83	V
Seats	77—78	U	Rev. Counter Cable	83	
Seat Cushions	78	U	Side Lamps	85	V
Seat Hinges	78		Side Lamp Bulbs	85	V
Seat Runners	78		Speedometer	82B—82C	V
Side Curtains	79A	U	Speedometer Cable	83	
Side Curtain Fixing Knobs	79B		Starter	80	V
Side Curtain Fixing Rods	79B		Starter Armature	80	
Spare Wheel Tray	71	U	Starter Brushes	80	
Spare Wheel Tray Clamp	71	U	Starter Bushes	80	
Tonneau Cover	79A		Starter Drive	80	
Windscreen Assembly	65	U	Starter Field-Coil	80	
Windscreen Centre Pillar	65	U	Starter Pinion and Sleeve	80	
Windscreen Side Pillars	66	U	Starter Solenoid Switch	81	V
Windscreen Washer	63C—63D		Starter Springs	80	
ELECTRICAL EQUIPMENT			Starter Switch	82—82A	V
Ammeter	82—82A	V	Stator Tube	86	V
Battery	88		Steering Column Control	86	S
Battery Cables	88		Tail/Stop Lamps	85	V
Body Harness	88		Tail/Stop Lamp Bulbs	85	V
Boot Light	83	V	Tail/Stop Lamp Housing	86	
Boot Light Switch	83	V	Tail/Stop Lamp Switch	86	V
Cables	89		Thermometer Gauge	82—82A	V
Cable Clips	90—90A		Trafficator Switch	86	V
			Windscreen Wiper	87—87A	
			Windscreen Wiper Arm	87—87A	V
			Windscreen Wiper Blade	87—87A	V
			Windscreen Wiper Drive	87—87A	V
			Windscreen Wiper Motor	87—87A	V
			Windscreen Wiper Switch	82—82A	V

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
TOOL KIT	91		LIST OF EXTRAS—(continued)		
LIST OF EXTRAS	92—95D		Floorboards (for Racing Seats)	95D	
Auxiliary Petrol Tanks	95A		Fog Lamps	92	
Auxiliary Petrol Tank Hoses	95A		Luggage Rack	92	
Auxiliary Petrol Tank Pipes	95A		Racing Screens	95B	
Auxiliary Petrol Tank Straps	95A				
Auxiliary Petrol Tank Tubes	95A		STANDARD PARTS	96—100	
Bucket Seats (Racing Type)	95D		Bolts	96	
Car Radio	92—95		Clevis Pins	100	
Car Radio Aerial	92 & 94		Coach Bolts	97	
Car Radio Condenser	92—94		Dowels	100	
Car Radio Installation	93—94		Nuts	98	
Car Radio Power Unit	92 & 94		Rivets	100	
Car Radio Receiver Unit	92—95		Setscrews	97—98	
Car Radio Resistor	92 & 94		Split Pins	100	
Chassis Frame Undershield	95C		Washers	99	
			Woodscrews	99	