FRONT BRAKES

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|-------------------|--------------------------------------------------------------------------------------------------------|--------------|-----------------|---------|
| C.7824 | R.H. FRONT BRAKE ASSEMBLY (LOCKHEED 35428) | | ı | |
| C.7825 | L.H. FRONT BRAKE ASSEMBLY (LOCKHEED 35429) | | 1 | |
| 30636 | Backplate only, R.H. | Y.1 | 1 | |
| 30637 35130 | Backplate only, L.H. Shoe Assembly (complete with M.20 Linings) | Y.2 | 1 | |
| 30628 | Spring, Pull-Off, for Front Brake Shoes | Y.3 | 4 | |
| 31057 31059 | Bar for Automatic Shee Adjustment | Y.4 | 4 | |
| 34015 | Pad, Friction, at each side of Bar Plate (bottom) enclosing Fricti∘n Pads | Y.5 Y.6 | 8 4 | |
| 34016 | Plate (top) enclosing Friction Pads | Y.7 | 4 | |
| 31058 31061 | Bolt, securing Friction Pads and Plates to Bars Coil Spring on Bolts | Y.8 | 4 | |
| 31705 | Nut, Slotted, on Bolts | Y.9 Y.10 | 4 | |
| K.19803 | Pin, Split, retaining Slotted Nuts | Y.11 | 4 | |
| 30627 33453 | Spring, Ratchet, operating Shoe Adjustment Pin, anchoring Bar to Brake Shoes | Y.12 Y.13 | 4 4 | |
| K.19109 | Washer, Plain, on Anchor Pins | Y.14 | 4 | |
| KL.40002 30619 | Circlip, retaining Adjusting Bars to Anchor Pins | Y.15 | 4 | |
| K.18609 | Pin, Anchor, in Backplates, for Shoe Pull-Off Springs Nut, securing Anchor Pins and Wheel Cylinders to | Y.16 Y.17 | 4 10 | |
| K 10200 | Backplates | | | |
| K.19208 30635 | Washer, Spring, under Nuts Wheel Cylinder Assembly | Y.18 | 10 4 | |
| C.3924 | Bridge-Pipe , connecting Wheel Cylinders on Front Brakes (T.4/10B) | Y.19 | 2 | |
| 30635 | FRONT WHEEL CYLINDER ASSEMBLY | | 4 | |
| 28/20 | | | | • |
| 30629 | Body only (complete with Bolts and Abutment Strips) | Y.20 | 4 | |
| 3063 I 2762 | Piston ´ | Y.21 | 4 | |
| 29660 | Seal Filler Piece for Seals | Y.22 Y.23 | 4 | • |
| 30977 | Spring, behind Filler Pieces | Y.24 | 4 | |
| 30632 30795 | Boot (Rubber) over end of Pistons Clip , securing Boots | Y.25 Y.26 | 4 | |
| | | | | |
| KL.71490 | REPAIR KIT FOR SERVICING 30635 FRONT WHEEL CYLINDERS | | 4 | |

FRONT BRAKES

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|---------------------------------|---------|
| | FITTINGS FOR FRONT WHEEL CYLINDERS | | | |
| C.3904 C.3905 C.3907 C.3906 C.3925 C.3926 C.3928 | Banjo for R.H. Top Front Wheel Cylinder (22864) Banjo for L.H. Top Front Wheel Cylinder (22863) Banjo for bottom Front Wheel Cylinders (22865) Bolt, securing Banjos to Wheel Cylinders (10543) Gasket (Small) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522) Screw, Bleeder, in Banjos on Bottom Wheel Cylinders (12272) | | 1 1 2 4 4 4 2 | |
| | | | 7 , | |
| 35130 | FRONT BRAKE SHOE ASSEMBLY | Y.2 | 4 | |
| 35129 KLB.48045 | Lining only (M.20) Rivet, securing Linings to Brake Shoes | | 4 48 | |

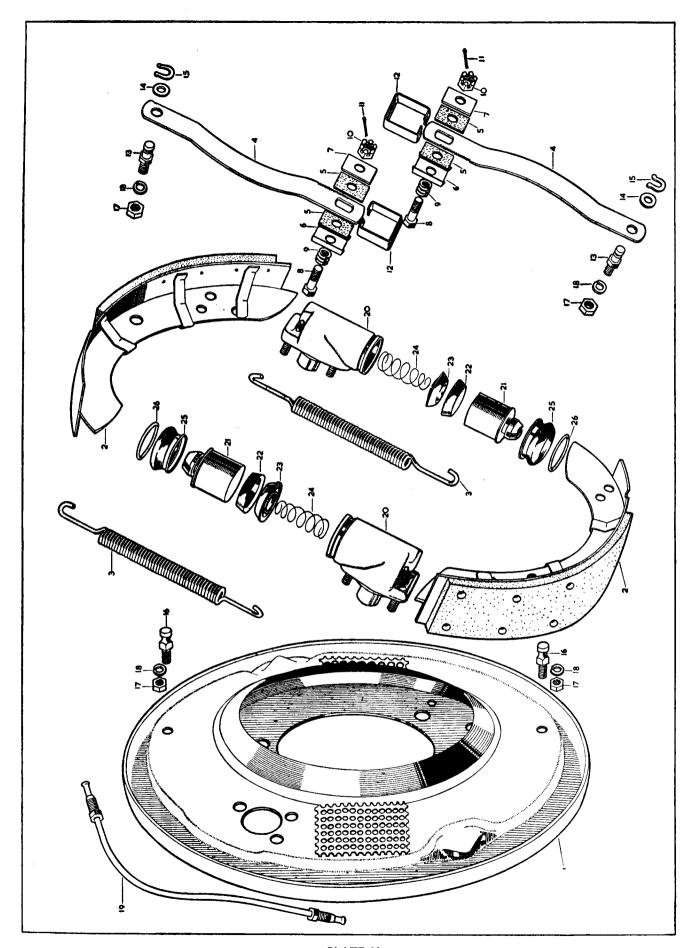


PLATE Y

REAR BRAKES

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-------------------|----------------------------------------------------------------------------------------|
| C.7826 | R.H. REAR BRAKE ASSEMBLY (LOCK- HEED 35430) | | . 1 | Fitted from Chassis No. 800001 to 800024. 810001 to 811283. 804001 to 804079. |
| C.7827 | L.H. REAR BRAKE ASSEMBLY (LOCK- HEED 35431) | | 1 | 814001 to 814152. 807001 to 807079. 817001 to 817355. |
| 31393 31394 | Backplate only, R.H. Backplate only, L.H. | |] } | |
| 35130 21792 30708 30709 | Shoe Assembly (complete with M.20 Linings) Spring, "Beehive" steadying Shoes Spring, Pull-Off (Adjuster side of Brake Shoes) Spring, Pull-Off (Wheel Cylinder side of Brake | * | 4 4 2 2 | |
| 39037 39038 31265 | Shoes) Adjuster Assembly on R.H. Rear Brake Adjuster Assembly on L.H. Rear Brake Screw, Set, securing Adjuster to Backplates | • | . i . 4 | |
| K.19209 30730 21740 | Washer, Spring, on Setscrews Wheel Cylinder Assembly Boot for Rear Wheel Cylinders | 5 | 4 2 2 | • |
| | | | | |
| C.7826/I | R.H. REAR BRAKE ASSEMBLY (LOCK- HEED 39378) | | ı | Fitted to Chassis No. 800025 and subs. 811284 and subs. |
| C.7827/I | L.H. REAR BRAKE ASSEMBLY (LOCK- HEED 39379) | | I | 804080 and subs. 814153 and subs. 807080 and subs. 817356 and subs. |
| 31393 31394 | Backplate only, R.H. Backplate only, L.H. | Z.I | l I | |
| 35130 21792 30708 30709 | Shoe Assembly (complete with M.20 Linings) Spring, "Beehive" steadying Shoes Spring, Pull-off (Adjuster side of Brake Shoes) Spring, Pull-off (Wheel Cylinder side of Brake | Z.2 Z.3 Z.4 Z.5 | 4 4 2 2 | |
| 39037 39038 31265 K.19209 | Shoes) Adjuster Assembly on R.H. Rear Brake Adjuster Assembly on L.H. Rear Brake Screw, Set, securing Adjusters to Backplates Washer, Spring, on Setscrews | | 4 4 | |
| 39377 35415 | Wheel Cylinder Assembly Boot for Rear Wheel Cylinders | Z.6 | 2 | |
| | | • | .* : | |
| | | | - | |
| 39037 | ADJUSTER ASSEMBLY ON R.H. REAR BRAKE | | I | |
| 39038 | ADJUSTER ASSEMBLY ON L.H. REAR BRAKE | | l | |
| 30754 30722 30717 31185 | Body only (complete with Abutment Strip) Screw, operating Brake Shoe Adjustment Wheel Assembly, operating Screws Bracket for Adjuster | Z.7 Z.8 Z.9 Z.10 | 2 2 2 2 | |
| 31186 31182 31183 | Spring, "Clicker" Pinion under "Clicker" Spring Plate at top of Pinion | Z.11 Z.12 Z.13 | 2 2 2 2 | |

REAR BRAKES

| Part No. | Description | Plate No. | No. per Unit | Remarks | |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|----------------------------|---------|--|
| | FITTINGS FOR REAR WHEE CYLINDERS | L | | | |
| C.3907 C.3906 C.3925 C.3926 C.3908 | Banjo for Rear Wheel Cylinders (22865) Bolt, securing Banjos to Wheel Cylinders (10543) Gasket (Small) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522) Screw, Bleeder, in Banjos (12272) | | 2 2 2 2 2 2 | | |
| 35130 | REAR BRAKE SHOE ASSEMBLY | Z.2 | 4 | | |
| 35129 KLB.48045 | Lining only (M.20) Rivet, securing Linings to Brake Shoes | | 4 48 | | |

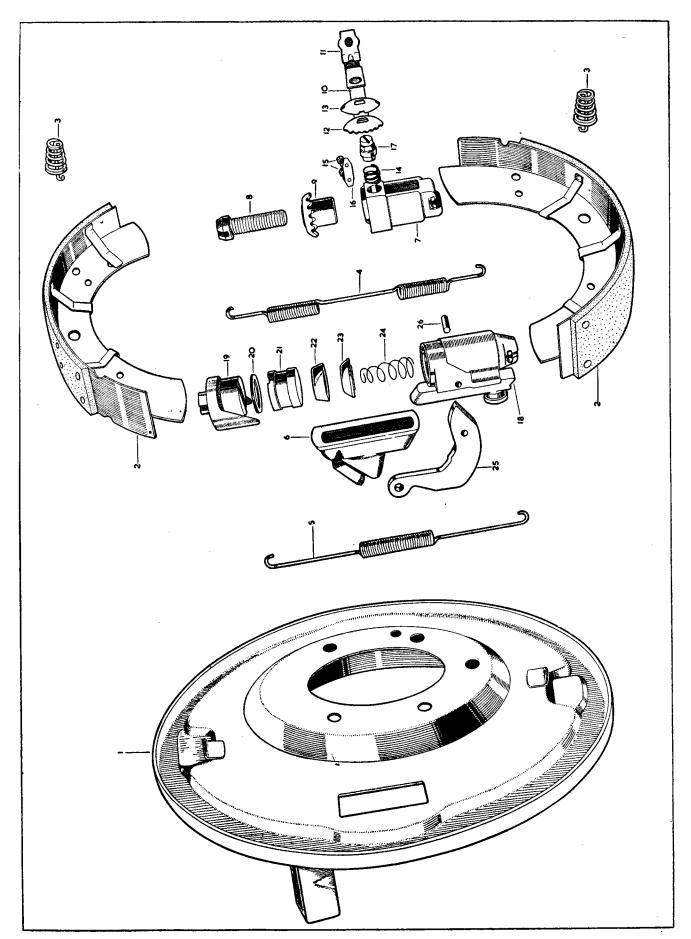


PLATE Z

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|-----------------|---------------------------------------------------|
| C.7549 | BRAKE PEDAL | AA.I | ı | RIGHT HAND DRIVE OPEN AND DROP HEAD COUPE ONLY. |
| C.7550 | BRAKE PEDAL | | 1 | LEFT HAND DRIVE OPEN AND DROP HEAD COUPE ONLY. |
| C.8868 | BRAKE PEDAL | | l . | RIGHT HAND DRIVE FIXED HEAD COUPE ONLY. |
| C.10348 | BRAKE PEDAL | | ı | LEFT HAND DRIVE FIXED HEAD COUPE ONLY. |
| C.3223 C.3224 C.3363/I NS.131/I2D NN.231/L NN.143/L C.727 C.676I | Bearing, Roller, inside Pedal Boss Sleeve, inside Roller Bearing Nipple, Grease, on Pedal Boss (Tec. NA.6666) Screw, Set, for Pedal Stop Nut on Stop Screw Nut, securing Brake Pedal and Tie Bracket to Shaft in Chassis Frame Washer, Shakeproof, under Nut Fork-End, for connection of Pedal to Master Cylinder | AA.2 AA.3 AA.4 AA.5 AA.6 | | |
| J.106/17S FW.106/T L.103/7U | Pin, Clevis, securing Fork-End to Brake Pedal Washer, Plain, on Clevis Pin Pin, Split, securing Clevis Pin in Pedal | AA.8 AA.9 AA.10 | . | |
| | | | | |
| C.8288 | TIE BRACKET BETWEEN BRAKE PEDAL AND MASTER CYLINDER | ÄÄII | | FITTED TO R.H. DRIVE CARS ONLY. |
| C.82 89 | TIE BRACKET BETWEEN BRAKE PEDAL AND MASTER CYLINDER | | | FITTED TO L.H. DRIVE CARS ONLY. |
| | | | | |
| C.4801 | RETURN SPRING FOR BRAKE PEDAL | AA.12 | . 1 | |
| | | · . | | |
| C.7782 | STEM AND PLATE ASSEMBLY FOR BRAKE PEDAL | AA.I3 | · · · ! | R.H. DRIVE OPEN AND DROP HEAD COUPE ONLY. |
| C.9554 | STEM AND PLATE ASSEMBLY FOR BRAKE PEDAL | | ı | L.H. DRIVE OPEN AND DROP HEAD COUPE ONLY. |

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|---------------------------------|-------------------------------------------------------------------------------------------------|----------------|-----------------|------------------------------------------|
| C.8865 | STEM AND PLATE ASSEMBLY FOR BRAKE PEDAL | | ı | R.H. DRIVE FIXED HEAD COUPE ONLY. |
| C.10349 | STEM AND PLATE ASSEMBLY FOR BRAKE PEDAL | | i | L.H. DRIVE FIXED HEAD COUPE ONLY. |
| NB.131/10D NN.131/L C.740 | Bolt, securing Stem and Plate Assembly to Brake Pedal Nut on Bolt Washer, Shakeproof, under Nut | | ! ! | |
| | | | | |
| C.8166 | RUBBER GROMMET, ON TOEBOARD, SEALING BRAKE PEDAL STEM | AA.14 | i | FITTED TO OPEN AND DROP HEAD |
| C.8298 | Ferrule (Plastic) inside Rubber Grommet | AA.15 | I | COUPE ONLY. |
| C.8299 | FELT SEAL ON BRAKE PEDAL STEM UNDER TOEBOARD | AA.16 | ı | FITTED TO ALL MODELS. |
| C.8301 | Circlip, retaining Felt Seal in position on Brake Pedal Stem (Terry 1359) | AA.17 | | FITTED TO ALL MODELS. |
| 792 | RUBBER PAD ON BRAKE PEDAL PLATE | AA.18 | .1 | FITTED TO OPEN AND DROP HEAD COUPE ONLY. |
| C.9934 | RUBBER PAD ON BRAKE PEDAL PLATE | | ı | FITTED TO FIXED HEAD COUPE ONLY. |
| C.8302 | BRAKE MASTER CYLINDER ASSEMBLY | AA.19 | 1 | |
| 28928 | (COMPLETE WITH PUSH ROD) (LOCKHEED 39218) Body only | AA.20 | ı | |
| 3820 21412 | Valve Assembly at rear end of Master Cylinder Body Spring for return of Piston | | i | |
| 431 112 | Spring for return of riston Retainer on Spring Seal, Main, at end of Spring | AA.23 AA.24 | i | |

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|-----------------------------------------|--------------------------------------------------------------------------------------------|
| 27979 21421 400 1002 KL.47011 39217 437 15097 KL.44547 NB.137/24D C.720 C.4105 | BRAKE MASTER CYLINDER (continued) Disc, between Main Seal and Piston Piston Seal, Secondary, on Piston Washer, behind Piston Circlip, retaining Piston Push-Rod, operating Piston Boot over end of Push Rod Filler Plug on top of Master Cylinder Body Gasket for Filler Plug Bolt, securing Master Cylinder to Chassis Frame Washer, Shakeproof, on Bolts Plate, Tapped, receiving Bolts | AA.25 AA.26 AA.27 AA.28 AA.29 AA.31 AA.32 AA.33 | 1 1 1 2 2 1 | |
| KL.71410 | REPAIR KIT FOR SERVICING OF C.8302 MASTER CYLINDER | | | |
| | FITTINGS FOR BRAKE MASTER CYL- INDER | | | |
| C.8562 C.3900 C.3925 C.3926 C.5218 C.8563 C.3927 C.3902 C.3903 C.3927 C.3928 C.8291 NN.237/L | Banjo at outlet end of Master Cylinder (23775) Bolt, securing Banjo (8048) Gasket (Small) on Banjo Bolt (KL.44518) Gasket (Large) on Banjo Bolt (KL.44522) Switch, operating Stop Light (Lucas 31082/B) Connector in Inlet Adaptor at top of Master Cylinder (464) Gasket on Connector (KL.44519) Banjo for Inlet Adaptor at top of Master Cylinder (1641) Bolt, securing Banjo to Master Cylinder (237) Gasket (Small) on Banjo Bolt (44519) Gasket (Large) on Banjo Bolt (44524) Operating Rod, connecting Push Rod on Master Cylinder to Fork-End on Brake Pedal Nut, locking Operating Rod to Push Rod and Fork-End | AA.40 | 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | NOT REQUIRED FOR L.H. DRIVE FIXED HEAD COUPE. FITTED TO L.H. DRIVE FIXED HEAD COUPE ONLY. |
| C.8565 | SUPPLY TANK (LOCKHEED 1150/3) | AA.43 | 1 | |
| NB.125/7D C.5181 NN.125/L C.724 | Bolt, securing Supply Tank Distance Piece on Bolt Nut on Bolt Washer, Shakeproof, under Nut | | | FITTED TO R.H. DRIVE OPEN AND DROP HEAD COUPE ONLY. |

| Part No. | | Plate No. | No. per Unit | Remarks |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------|--------------|------------------|------------------------------------------------------------------------------------------------------------------|
| C.8870 NS.125/5D NN.125/L C.724 | BRACKET, MOUNTING SUPPLY TANK Screw, Set, securing Bracket Nut on Setscrews Washer, Shakeproof, under Nuts | | 3 3 3 | FITTED TO L.H. DRIVE CARS ONLY. |
| C.9581 NS.125/5D NN.125/L C.724 | BRACKET, MOUNTING SUPPLY TANK Screw, Set, securing Bracket Nut on Setscrews Washer, Shakeproof, under Nuts | | 1 3 3 3 | FITTED TO R.H. DRIVE FIXED HEAD COUPE ONLY. |
| BD.10288 NS.125/5D NN.125/L C.724 | BRACKET, MOUNTING SUPPLY TANK Screw, Set, securing Bracket Nut on Setscrews Washer, Shakeproof, under Nut | | | THESE ITEMS ARE REQUIRED FOR R.H. DRIVE FIXED HEAD COUPE ONLY WHEN ENGINE IS FITTED WITH "C" TYPE CYLINDER HEAD. |
| C.8030 | PIPE FROM SUPPLY TANK TO LOW PRESSURE HOSE AND LOW PRES- SURE HOSE TO MASTER CYLINDER | AA.44 | 2 | FITTED TO R.H. DRIVE OPEN, DROP HEAD COUPE AND FIXED HEAD COUPE. |
| C.7189 C.9796 | PIPE FROM SUPPLY TANK TO LOW PRESSURE HOSE PIPE FROM LOW PRESSURE HOSE TO MASTER CYLINDER | | t I | FITTED TO L.H. DRIVE OPEN AND DROP HEAD COUPE ONLY. |

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|--------------------|--------------------------------------------------------------------------------------------------|--------------|-----------------|--------------------------------------------------------------------|
| C.9796 | PIPE FROM SUPPLY TANK TO LOW PRESSURE HOSE | | 1 | |
| C.9175 | PIPE FROM LOW PRESSURE HOSE TO MASTER CYLINDER | | I | FITTED TO L.H. DRIVE FIXED HEAD COUPE ONLY. |
| C.9796 | PIPE FROM SUPPLY TANK TO LOW PRESSURE HOSE | | 1 | REQUIRED FOR R.H. DRIVE FIXED |
| C.7189 | PIPE FROM LOW PRESSURE HOSE TO MASTER CYLINDER | | | HEAD COUPE ONLY WHEN ENGINE IS FITTED WITH "C" TYPE CYLINDER HEAD. |
| C.3730 | LOW PRESSURE HOSE BETWEEN SUPPLY TANK AND MASTER CYLINDER (16741) | AA.45 | . I | |
| C.7208 | Clip, securing Low Pressure Hose to Feed Pipes between Supply Tank and Master Cylinder (K.20202) | AA.46 | 2 | |
| C.8314 | HANDBRAKE LEVER ASSEMBLY | AA.47 | 1 | FITTED TO R.H. DRIVE CARS ONLY. |
| C.8315 | HANDBRAKE LEVER ASSEMBLY | | 1 | FITTED TO L.H. DRIVE CARS ONLY. |
| | NOTE: HANDBRAKE LEVER SUPPLIED ONLY AS A COMPLETE ASSEMBLY. | | | |
| NS.137/5D C.726 | Screw, Set, securing Handbrake Lever Washer, Shakeproof, on Setscrews | | 3 | |
| | | | | |
| C.8318 | SHAFT, SUPPORTING OPERATING LEVERS | AA.48 | I | |

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|-----------------------|---------|
| C.8317 | LEVER, AT END OF SHAFT, FOR ATTACHMENT OF HANDBRAKE CONNECTING LINK | AA.49 | . 1 | |
| C.3656 | LEVER, IN CENTRE OF SHAFT, FOR OPERATION OF HANDBRAKE CABLE | AA.50 | I | |
| C.755 NB.131/12D NN.131/L C.725 | Key, locating Levers on Shaft Boit, securing Levers to Shaft Nut on Bolts Washer, Shakeproof, under Nuts | AA.51 | 2 2 2 2 2 | |
| C.3722 | SPRING, ON SUPPORT SHAFT, BETWEEN LEVERS | AA.52 | l | |
| C.8316 | LINK, CONNECTING HANDBRAKE LEVER WITH LEVER AT END OF SUPPORT SHAFT | AA.53 | t | |
| J.106/16S J.106/11S FW.106/T L.103/6U | Clevis Pin, securing Link to Handbrake Lever Clevis Pin, securing Link to Lever on Support Shaft Washer, Plain, on Clevis Pins Pin, Split, retaining Clevis Pins | AA.54 AA.55 AA.56 AA.57 | ! ! 2 2 | |
| C.3322 | COMPENSATOR ROD ASSEMBLY, FOR ADJUSTMENT OF HANDBRAKE CABLE | AA.58 | l . | |
| C.3264 C.3265 C.3266 | Spring, on Compensator Rod Trunnion, behind Spring on Compensator Rod Nut, Barrel, on Rod, for Compensator Adjustment | AA.59 AA.60 AA.61 | | |

| Part No. | Description | Plate No. | No. per Unit | Remarks | |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------|-----------------|---------|-----|
| C.3274/1 | COMPENSATOR ASSEMBLY FOR HANDBRAKE CABLE | AA.62 | l | | · · |
| J.106/10S FW.106/T L.103/6U | Clevis Pin, securing Compensator to Compensator Rod Washer, Plain, on Clevis Pin Pin, Split, retaining Clevis Pin | AA.63 AA.64 AA.65 | ! | | |
| | | | | | |
| C.6677 | HANDBRAKE CABLE ASSEMBLY OPERATING REAR BRAKES (GB.43022) | AA.66 | i | | |
| C.5066 C.5067 | Spring, Return, at ends of Handbrake Cable Retainer for Return Springs Clevis Pin, securing Fork Ends on Cable to Operating | AA.68 AA.68 | 2 2 2 | | |
| J.105/11S FW.105/T | Levers on Rear Brakes Washer, Plain, on Clevis Pins | AA.70 | 2 | | |
| L.103/7U | Pin, Split, securing Clevis Pins | AA.7I | 2 | | |
| | | | | | |
| C.7859 | CLIP, SECURING HANDBRAKE CABLE TO L.H. REAR AXLE TUBE | AA.72 | 1 | | |
| C.7875 | CLIP, SECURING HANDBRAKE CABLE TO R.H. REAR AXLE TUBE | AA.73 | ŧ | • | |
| NS.325/5H NN.125/L C.724 | Screw, Set, securing Clips Nut, on Setscrews Washer, Shakeproof, under Nuts | | 2 2 2 | | |
| | | | | | |
| | | | | | |
| C.8389 | ABUTMENT ASSEMBLY FOR HAND- BRAKE CABLE | AA.74 | 1 | | |
| NB.131/11D | Bolt, Clinch, securing Handbrake Cable in Abutment Blocks | | 2 | | |
| NN.131/L C.725 | Nut on Clinch Bolts Washer, Shakeproof, under Nuts | | 2 2 | | |
| NS.125/4D C.724 | Bolt, securing Abutment Assembly Washer, Shakeproof, on Bolts | | 4 4 | | |

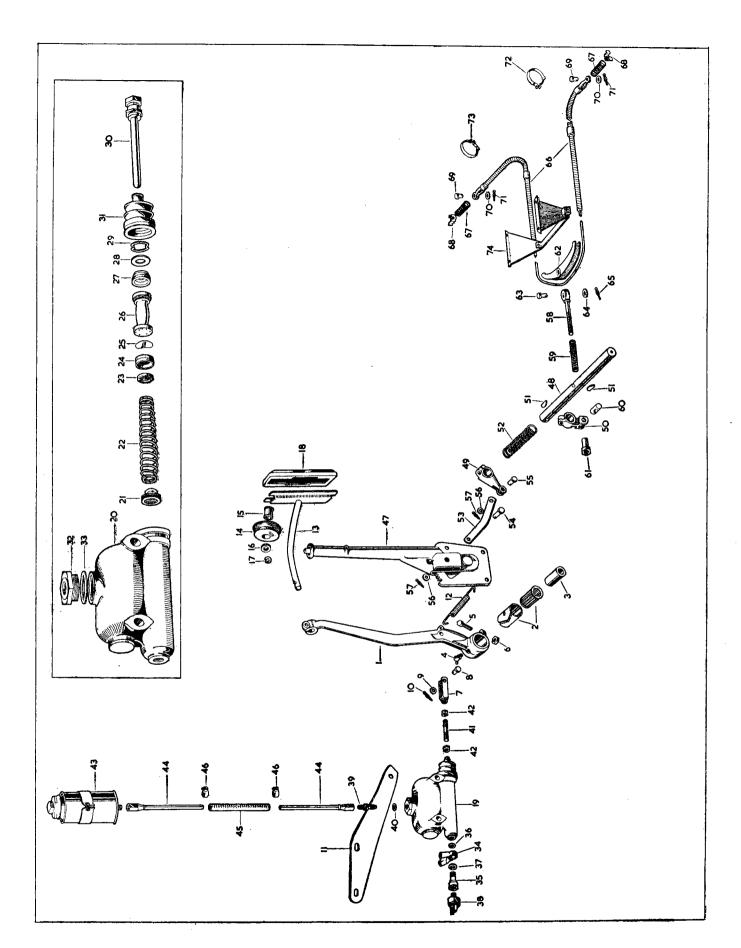


PLATE AA

HYDRAULIC BRAKE PIPES RIGHT-HAND DRIVE CARS ONLY

| Part No. | Description | Plate No. | No. per Unit | Remarks | |
|------------------|----------------------------------------------------------------------------------------------|--------------|---------------------|---------|--|
| C.8568 | PIPE FROM MASTER CYLINDER TO 3-WAY UNION ON CHASSIS FRAME (T.4/21B) | AB.I | : 1 : · · | | |
| C.3922 | Union, Three-way, on Chassis Frame and Rear Axle (7965) | AB.2 | 2 | | |
| FS.106/4D | Screw, Set, securing 3-way Union to Brackets on Chassis Frame and Rear Axle | | 2 | | |
| C.726 | Washer, Shakeproof, on Setscrews | | 2 | | |
| C.8032 | PIPE FROM 3-WAY UNION ON CHASSIS FRAME TO FLEXIBLE HOSE ON R.H. FRONT BRAKE (T.4/12½B) | AB.3 | 1 | | |
| C.8033 | PIPE FROM 3-WAY UNION ON CHASSIS FRAME TO FLEXIBLE HOSE ON L.H. FRONT BRAKE (T.4/33B) | AB.4 | ı | | |
| C.3909 | FLEXIBLE HOSE, FRONT AND REAR (KL.51724) | AB.5 | 3 | | |
| C.3910 | Nut, locking Flexible Hoses to Brackets (23897) | AB.6 | 3 | | |
| C.3911 C.3925 | Washer, Shakeproof, under Nuts (K.19411) Gasket at joint of Flexible Hoses (KL.44518) | AB.7 AB.8 | 3 3 | | |
| C.8569 | PIPE FROM MASTER CYLINDER TO | AB 9 | ı | | |
| | TUBE CONNECTOR (T.4A/47B) | ,,,,, | • | | |
| C.3923 | Tube Connector at side of Chassis Frame for joint of Brake Pipes (5248) | AB.10 | I | | |
| C.8570 | PIPE FROM TUBE CONNECTOR TO FLEXIBLE HOSE ON REAR AXLE (T.4A/50B) | AB.II | 1 | | |

HYDRAULIC BRAKE PIPES RIGHT-HAND DRIVE CARS ONLY

| Part No. | Description | Plate No. | No. per Unit | Remarks |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|--------------|------------------|---------|
| C.8034 | PIPE FROM 3-WAY UNION ON REAR AXLE TO R.H. REAR BRAKE (T.4/28B) | AB.12 | í | |
| C.8035 | PIPE FROM 3-WAY UNION ON REAR AXLE TO L.H. REAR BRAKE (T.4/50B) | AB.13 | 1 | |
| C.7860 NS.325/8H NN.125/L C.724 | Clip, securing Rear Brake Pipes to Axle Tubes Screw, Set, securing Clips Nut on Setscrews Washer, Shakeproof, under Nuts | AB.14 | 2 2 2 2 | |
| C.3529 | Clip (Trimount 304) securing Brake Pipes to Chassis Frame | AB.15 | 7 | |

HYDRAULIC BRAKE PIPES LEFT-HAND DRIVE CARS ONLY

| Part No. | Description | Plate No. | No. per Unit | Remarks | |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------------------|---------|--|
| C.8041 | PIPE FROM 3-WAY UNION ON REAR AXLE TO R.H. REAR BRAKE (T.4/50B) | | | | |
| C.8042 | PIPE FROM 3-WAY UNION ON REAR AXLE TO L.H. REAR BRAKE (T.4/28B) | AB.28 | $\hat{\boldsymbol{\epsilon}}_{i} \triangleq \hat{\boldsymbol{i}}_{i}$ | | |
| C.7860 NS.325/8H NN.125/L C.724 | Clip, securing Rear Brake Pipes to Axle Tubes Screw, Set, securing Clips Nut on Setscrews Washer, Shakeproof, under Nuts | AB.29 | 2 2 2 2 | | |
| C.3529 | Clip (Trimount 304) securing Brake Pipes to Chassis Frame | AB.30 | 7 | | |

HYDRAULIC BRAKE PIPES LEFT-HAND DRIVE CARS ONLY

| Part No. | Description | Plate No. | No. per Unit | Remarks | ······································ |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------|-----------------|---------|----------------------------------------|
| C.8571 | PIPE FROM MASTER CYLINDER TO 3-WAY UNION ON CHASSIS FRAME (T.4/2IB) | AB.16 | i | | |
| C.3922 FS.106/4D | Union, 3-way, on Chassis Frame and Rear Axle (7965) Screw, Set, securing 3-way Union to Brackets on Chassis | AB.17 | 2 2 | | |
| C.726 | Frame and Rear Axle Washer, Shakeproof, on Setscrews | | 2 | | |
| C.8039 | PIPE FROM 3-WAY UNION ON CHASSIS FRAME TO FLEXIBLE HOSE ON L.H. FRONT BRAKE (T.4/12‡B) | AB,18 | 1 | | |
| C.8040 | PIPE FROM 3-WAY UNION ON CHASSIS FRAME TO FLEXIBLE HOSE ON R.H. FRONT BRAKE (T.4/33B) | AB.19 | ı | | |
| C.3909 | FLEXIBLE HOSE, FRONT AND REAR (KL.51724) | AB.20 | 3 | | |
| C.3910 C.3911 C.3925 | Nut, locking Flexible Hoses to Brackets (23897) Washer, Shakeproof, under Nuts (KL.19411) Gasket at joint of Flexible Hoses (KL.44518) | AB.21 AB.22 AB.23 | 3 3 3 | | |
| | | | | | |
| C.8572 | PIPE FROM MASTER CYLINDER TO TUBE CONNECTOR (T.4A/47B) | AB.24 | ı | | |
| C.3923 | Tube Connector at side of Chassis Frame for joint of Brake Pipes (5248) | AB.25 | i | | |
| C.8573 | PIPE FROM TUBE CONNECTOR TO FLEXIBLE HOSE ON REAR AXLE (T.4A/50B) | AB.26 | i | | |

