

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8758	BODY SHELL ASSEMBLY		1	L.H. DRIVE ONLY.
BD.8759	BODY SHELL ASSEMBLY		1	R.H. DRIVE ONLY.
B.D.8762	Face Panel Assembly for L.H. Shut Pillar		1	
BD.8763	Face Panel Assembly for R.H. Shut Pillar		1	
BD.9302	Extension for L.H. Shut Face Panel		1	
BD.9303	Extension for R.H. Shut Face Panel		1	
BD.10261	Closing Plate for L.H. Shut Pillar		1	
BD.10262	Closing Plate for R.H. Shut Pillar		1	
BD.9317	Sealing Plate Assembly for L.H. Shut Pillar		1	
BD.10236	Sealing Plate Assembly for R.H. Shut Pillar		1	
BD.10585	Cover Plate for Door Sills		2	
BD.711/1	Screw, Self-Tapping, securing Cover Plates		4	
BD.8766	Dash Assembly, complete		1	L.H. DRIVE CARS ONLY.
BD.8767	Dash Assembly, complete		1	R.H. DRIVE CARS ONLY.
BD.8589	Bracket, mounting Headlamp Dip Switch		1	R.H. DRIVE CARS ONLY.
BD.9922	Front End Assembly		1	
BD.8329	Valance Assembly at forward end of L.H. Front Wing		1	
BD.8330	Valance Assembly at forward end of R.H. Front Wing		1	
BD.8965	Felt Strip on forward Wing Valances (1½" × ¼" × 19" long)		2	
BD.8331	Valance Extension Assembly at rear of L.H. Front Wing		1	L.H. DRIVE CARS ONLY.
BD.8332	Valance Extension Assembly at rear of R.H. Front Wing		1	R.H. DRIVE CARS ONLY.
BD.9127	Cover Plate, on R.H. Valance, giving access to Air Cleaner		1	
NS.125/4D	Screw, Set, securing Cover Plate		10	
BD.8693	Support Assembly at forward end of L.H. Front Wing		1	
BD.8695	Bracket Assembly, on L.H. Support, for attachment of Valance Extension		1	
BD.8694	Support Assembly at forward end of R.H. Front Wing		1	
BD.8696	Bracket Assembly, on R.H. Support, for attachment of Valance Extension		1	
BD.8403	Tie Bar between Front Wing Supports		1	
BD.8401	Diaphragm Assembly between rear of L.H. Front Wing and Dash		1	Fitted from Chassis No. : 800001 to 800022 810001 to 811113 then superseded by BD.10569 and BD.10570. Supersedes BD.8401 and BD.8402 at Chassis No. 800023 and subs. 811114 and subs.
BD.8402	Diaphragm Assembly between rear of R.H. Front Wing and Dash		1	
BD.10569	Diaphragm Assembly between rear of L.H. Front Wing and Dash		1	
BD.10570	Diaphragm Assembly between rear of R.H. Front Wing and Dash		1	
BD.3551	Steady for Front Wing		1	R.H. DRIVE CARS ONLY.
BD.3552	Steady for Front Wing		1	L.H. DRIVE CARS ONLY.
BD.3553	Bracket for attachment of Front Wing Steady		2	
FS.104/5D	Screw, Set, securing Steady to Brackets		2	
BD.542/3	Washer, Special, on Setscrews		2	
FN.104/L	Nut on Setscrews		2	
C.724	Washer, Shakeproof, under Nuts		2	
BD.5183	Box Assembly for Ventilator in L.H. Front Wing		1	
BD.5184	Box Assembly for Ventilator in R.H. Front Wing		1	
BD.5127	Hinge Assembly for L.H. Ventilator		1	
BD.5128	Hinge Assembly for R.H. Ventilator		1	
BD.4728	Mounting Plate Assembly for L.H. Hood Sticks		1	
BD.4729	Mounting Plate Assembly for R.H. Hood Sticks		1	
BD.8787	Rear End Assembly		1	
BD.9588	Cross Member Assembly for Tonneau		1	
BD.9357	Gutter Assembly around Boot Lid aperture		1	
BD.8839	Panel Assembly at rear of Floor, for stowage of Hood		1	
BD.10640	Boot Lid Shell Assembly		1	Fitted from Chassis No. : 800001 to 800008. 810001 to 810548.
BD.10584	Boot Lid Shell Assembly		1	Fitted to Chassis No. : 800009 and subs. 810549 and subs.
BD.9397	Petrol Filler Box Assembly		1	
BD.8134	Fixing Plate Assembly for Petrol Filler Lid		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BODY SHELL ASSEMBLY (continued)				
BD.4358	Hinge Assembly for Petrol Filler Lid			
BD.9428	Bonnet Assembly			
BD.9402	Rear Wing Assembly, L.H.			} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.9403	Rear Wing Assembly, R.H.			
BD.9516	Rear Wing Assembly, L.H.			} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.9517	Rear Wing Assembly, R.H.			
BD.6194	Steady for L.H. Rear Wing			
BD.6195	Steady for R.H. Rear Wing			
BD.4449	Cover Assembly for L.H. Rear Wing			} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.4450	Cover Assembly for R.H. Rear Wing			
BD.7769	Moulding on L.H. Rear Wing			} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.7770	Moulding on R.H. Rear Wing			
BD.8762	FACE PANEL ASSEMBLY, FOR L.H. SHUT PILLAR		1	
BD.8763	FACE PANEL ASSEMBLY, FOR R.H. SHUT PILLAR		1	
BD.2930	Striker for Door Locks		2	
BD.8611	Packing under Strikers		As req'd	
NS.319/4H	Screw, Set, securing Strikers		4	
BD.2942	Dovetail for Door Lock Striker		2	
NS.519/4H	Screw, Set, securing Dovetails		4	
BD.9317	SEALING PLATE ASSEMBLY, FOR L.H. SHUT PILLAR		1	
BD.10236	SEALING PLATE ASSEMBLY, FOR R.H. SHUT PILLAR		1	
BD.9317/4	Seal (Sponge Rubber) on Plates ($\frac{1}{2}$ " \times $1\frac{3}{8}$ " \times 27")		2	
BD.8766	DASH ASSEMBLY, COMPLETE		1	L.H. DRIVE CARS ONLY.

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8767	DASH ASSEMBLY, COMPLETE		1	R.H. DRIVE CARS ONLY.
BD.8320	Panel Assembly for Dash Front		1	L.H. DRIVE CARS ONLY.
BD.8321	Panel Assembly for Dash Front		1	R.H. DRIVE CARS ONLY.
BD.9281	Panel Assembly for Clutch Housing		1	
BD.8768	Beam Panel Assembly		1	
BD.4132	Support for rear L.H. side of Beam Panel		1	
BD.4133	Support for rear R.H. side of Beam Panel		1	
BD.8777	Tie Plate Assembly for Beam Panel		1	
BD.4661/I	Bracket, Inner, supporting Grab Rail		1	
BD.4662	Bracket, Outer, supporting Grab Rail		1	
FS.104/4D	Screw, Set, securing Brackets		2	
FW.104/T	Washer, Plain, on Setscrews		2	
FN.104/L	Nut on Setscrews		2	
C.724	Washer, Shakeproof, under Nuts		2	
BD.8323	Heater Box, rear portion		1	
BD.8727	Side Structure Assembly for Dash		2	
BD.8555	Closing Panel from L.H. Wing to Dash		1	
BD.8556	Closing Panel from R.H. Wing to Dash		1	
BD.8943	Mounting Plate Assembly for Lower Door Hinges		2	
BD.9016	Mounting Plate Assembly for L.H. Upper Door Hinge		1	
BD.9017	Mounting Plate Assembly for R.H. Upper Door Hinge		1	
BD.4555	Shim for Lower Door Hinges		As req'd	} SELECTIVE THICKNESSES.
BD.4701/1	Shim for Upper Door Hinges (20 s.w.g.)		As req'd	
BD.4701/2	Shim for Upper Door Hinges (14 s.w.g.)		As req'd	
NS.125/5D	Screw, Set, securing Mounting Plates to Dash Structure		16	
NN.125/L	Nut on Setscrews		16	
C.724	Washer, Shakeproof, under Nuts		16	
BD.4379	Hinge Assembly for Bonnet		2	
FS.104/4D	Screw, Set, securing Hinges		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	
BD.8320	FRONT PANEL ASSEMBLY, FOR DASH		1	L.H. DRIVE CARS ONLY.
BD.8321	FRONT PANEL ASSEMBLY, FOR DASH		1	R.H. DRIVE CARS ONLY.
BD.9121	Support Bracket, L.H., for Steering Column		1	
BD.9122	Support Bracket, R.H., for Steering Column		1	
BD.4753	Heater Box, front portion		1	
BD.8777	TIE PLATE ASSEMBLY, FOR BEAM PANEL		1	
BD.8960	Bracket Assembly for Bonnet Lock Control		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9922	FRONT END ASSEMBLY		1	
BD.8782	Dash Top Assembly		1	
BD.8743	Front Wing Assembly, L.H.		1	
BD.8744	Front Wing Assembly, R.H.		1	
BD.2489	Fairing Panel		1	
BD.8785	Face Plate, on L.H. Front Wing, for Door Hinges		1	
BD.8786	Face Plate, on R.H. Front Wing, for Door Hinges		1	
BD.1814/2	Rivet, Pop, securing Face Plates to Wings		16	
BD.8782	DASH TOP ASSEMBLY		1	
BD.4140	Front Panel		1	
BD.8831	Shroud Panel		1	
C.4387	CAR HEATER ASSEMBLY		1	
C.4391	Sealing Rubber on pipes of Heater Unit		2	
FN.104/L	Nut, securing Heater Unit		3	
FW.104/T	Washer, Plain, on Studs of Heater Unit		3	
FG.104/X	Washer, Spring, under Nuts		3	
C.4392	VALVE, ON HEATER BOX UNDER BONNET, CONTROLLING WATER SUPPLY TO HEATER		1	
C.4393	Knob, operating Valve		1	
C.5233/1	Screw, Set, securing Knob to Valve Spindle		1	
C.4395	Bracket, for mounting of Valve		1	
BD.1492/1	Screw, Set, securing Bracket		1	
FG.104/X	Washer, Spring, on Setscrew		1	
C.8105	HEATER HOSE, FROM WATER MANIFOLD TO CONTROL VALVE		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
C.4397	HEATER HOSE, FROM CONTROL VALVE TO HEATER UNIT		1	
C.4398	HEATER HOSE, FROM HEATER UNIT TO INTERMEDIATE RETURN PIPE		1	
C.8104	HEATER HOSE, FROM INTERMEDIATE PIPE TO FRONT RETURN PIPE		1	
C.2905/1	Clip, securing Hose to Control Valve, Intermediate Return Pipe, Front Return Pipe, Water Manifold and Heater Unit		6	
C.2905/2	Clip, securing Hose to Control Valve and Intermediate Return Pipe		2	
C.4400	INTERMEDIATE PIPE FOR CONNECTION OF HOSES BETWEEN CONTROL VALVE AND FRONT RETURN PIPE		1	
	NOTE : FOR HEATER CONNECTIONS ON ENGINE, SEE PAGE 12.			
NS.319/3H	Screw, Set, securing Earth Lead for Heater Motor		1	
NN.119/L	Nut on Setscrew		1	
C.723/A	Washer, Shakeproof, under Nut		1	
C.4543	RHEOSTAT SWITCH, OPERATING HEATER MOTOR (LUCAS 78262/B)		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
DEMISTER CONNECTIONS BEHIND INSTRUMENT PANEL				
BD.6521	DEMISTER OUTLET ASSEMBLY FOR HEATER UNIT		1	
BD.711/1	Screw, Self-Tapping, securing Outlet to Heater Unit		2	
BD.10491	AIR DUCT AND BRACKET ASSEMBLY FOR L.H. SIDE OF WINDSCREEN		1	
BD.10492	AIR DUCT AND BRACKET ASSEMBLY FOR R.H. SIDE OF WINDSCREEN		1	
NS.131/4D C.725	Screw, Set, securing Air Duct Washer, Shakeproof, on Setscrews		2 2	
BD.5281/4	HOSE, 23" LONG, CONNECTING OUTLET TO L.H. AIR DUCT		1	
BD.5281/3	HOSE, 20" LONG, CONNECTING OUTLET TO R.H. AIR DUCT		1	
BD.6429	ESCUTCHEON, ON SHROUD PANEL, FOR DEMISTER AIR TO WINDSCREEN		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8743	L.H. FRONT WING ASSEMBLY		1	
BD.8744	R.H. FRONT WING ASSEMBLY		1	
BD.8697	Container, on L.H. Front Wing, for Headlamp Light Unit		1	
BD.8698	Container, on R.H. Front Wing, for Headlamp Light Unit		1	
C.7284	Casing, on Front Wings, for Side Lamps		2	
BD.8626	Valance Assembly, along top of L.H. Front Wing		1	
BD.8627	Valance Assembly, along top of R.H. Front Wing		1	
BD.2561	Motif, at top of Head Lamp Container		2	
BD.2563/I	Screw, Set (Special), securing Motif		4	
FW.105/T	Washer, Plain, on Setscrews		8	
AW.105/T	Washer, Plain, on Setscrews		4	
BD.8695	BRACKET ASSEMBLY, UNDER L.H. FRONT WING, FOR ATTACHMENT OF FRONT WING SUPPORT		1	
BD.8696	BRACKET ASSEMBLY, UNDER R.H. FRONT WING, FOR ATTACHMENT OF FRONT WING SUPPORT		1	
NS.125/4D	Screw, Set, securing Brackets to Front Wings through Head Lamp Shells		12	
FW.104/T	Washer, Plain, on Setscrews		24	
NN.125/L	Nut on Setscrews		12	
C.724	Washer, Shakeproof, under Nuts		12	
BD.8693	SUPPORT ASSEMBLY, UNDER L.H. FRONT WING		1	
BD.8694	SUPPORT ASSEMBLY, UNDER R.H. FRONT WING		1	
BD.2070	Washer, Kautex, between Supports and Attachment Brackets		As req'd	
NS.131/9D	Screw, Set, securing Supports to Attachment Brackets		4	NOTE : If more than 4 Kautex Washers are fitted, use NS.131/12D Setscrews.
FW.105/T	Washer, Plain, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		4	
NB.131/8D	Bolt, securing Supports to Chassis		4	
FW.105/T	Washer, Plain, on Bolts		8	
NN.131/L	Nut on Bolts		4	
C.725	Washer, Shakeproof, under Nuts		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8403	TIE BAR ASSEMBLY BETWEEN FRONT WINGS		1	
NB.131/15D	Bolt, securing Tie Bar to Wing Supports		4	
NB.131/26D	Bolt, securing Tie Bar to Wing Supports		4	
BD.8701	Distance Piece on Bolts		8	
FW.105/T	Washer, Plain, on Bolts		12	
NN.131/L	Nut on Bolts		8	
C.725	Washer, Shakeproof, on Bolts		8	
BD.8626	VALANCE ASSEMBLY ALONG TOP OF L.H. FRONT WING		1	
BD.8399	Support between L.H. Front Wing and Chassis Frame		1	
BD.8627	VALANCE ASSEMBLY ALONG TOP OF R.H. FRONT WING		1	
BD.8400	Support between R.H. Front Wing and Chassis Frame		1	
BD.8329	VALANCE ASSEMBLY AT FORWARD END OF L.H. FRONT WING		1	
BD.8330	VALANCE ASSEMBLY AT FORWARD END OF R.H. FRONT WING		1	
BD.8965	Felt ($1\frac{1}{2}'' \times \frac{1}{4}'' \times 19''$) on front face of Forward Wing Valance, for mounting of Radiator		2	
NS.125/4D	Screw, Set, securing Forward Valances to Wing Supports		2	
FW.104/T	Washer, Plain, on Setscrews		4	
NN.125/L	Nut on Setscrews		2	
C.724	Washer, Shakeproof, under Nuts		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8331	VALANCE EXTENSION AT REAR OF L.H. FRONT WING		1	FOR L.H. DRIVE CARS ONLY.
BD.8332	VALANCE EXTENSION AT REAR OF R.H. FRONT WING		1	FOR R.H. DRIVE CARS ONLY.
BD.9127	COVER PLATE, ON R.H. WING VALANCE, GIVING ACCESS TO AIR CLEANER		1	
C.5824/2	Screw, Set, securing Cover Plate		3	
BD.4674/2	Nut, Clinch, on Setscrews		3	
BD.5179/2	Screw, Set, securing Cover Plate		5	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.8401	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF L.H. FRONT WING AND DASH		1	Fitted from Chassis No. : 800001 to 800022 810001 to 811113 then superseded by BD.10569 and BD.10570.
BD.8402	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF R.H. FRONT WING AND DASH		1	
BD.10524/2	Sponge Rubber, between edge of Diaphragm and Wing (24" long)		2	
BD.10524/3	Sponge Rubber, between edge of Diaphragm and Wing (14½" long)		2	
BD.10569	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF L.H. FRONT WING AND DASH		1	Supersedes BD.8401 and BD.8402 at Chassis No. 800023 and subs. 811114 and subs.
BD.10570	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF R.H. FRONT WING AND DASH		1	
BD.10704/1	Sponge Rubber, between edge of Diaphragm and Wing (½' × 1½' × 40")		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.5188	VENTILATOR DOOR ASSEMBLY, IN FRONT WINGS		2	
AN.102/L AW.102/T C.723	Nut, securing Door to Hinge Plate Washer, Plain, under Nuts Washer, Shakeproof, under Nuts		6 6 6	
BD.5190	SEAL FOR WING VENTILATOR DOORS		2	
BD.5189	GAUZE ASSEMBLY, ON WING VENTILATOR DOORS		2	
BD.711/6	Screw, Self-Tapping, securing Gauze to Doors		4	
BD.5183	VENTILATOR BOX ASSEMBLY, IN L.H. FRONT WING		1	
BD.5184	VENTILATOR BOX ASSEMBLY, IN R.H. FRONT WING		1	
BD.5127	Hinge Assembly on L.H. Ventilator Box		1	
BD.5128	Hinge Assembly on R.H. Ventilator Box		1	
BD.648	Spring Plunger on Hinges		2	
R.303/5W	Rivet, securing Plungers		2	
C.3350	Washer (Brass) at each side of Plunger		4	
BD.650	Loose-Head for end of Rivets (WB. 9223/V.68)		2	
AS.502/3H	Screw, Set, securing Hinge to Ventilator Box		6	
AN.102/L	Nut on Setscrew		6	
AG.102/X	Washer, Spring, under Nuts		6	
BD.5176	Spring, tensioning Ventilator Doors		2	
BD.5125	Sleeve, housing Springs		2	
L.104/10U	Pin, Split, securing Sleeve to side of Ventilator Box		2	
C.3571	Slug, adjusting tension on Springs		As req'd	} CHOOSE ADJUSTING PLATE OF DESIRED THICKNESS.
BD.3712/1	Adjusting Plate, between Hinge and Door (.064" thick)		As req'd	
BD.3712/2	Adjusting Plate, between Hinge and Door (.048" thick)		As req'd	
BD.3712/3	Adjusting Plate, between Hinge and Door (.036" thick)		As req'd	
BD.3712/4	Adjusting Plate, between Hinge and Door (.022" thick)		As req'd	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8570	BATTERY BOX ASSEMBLY IN L.H. FRONT WING		1	R.H. DRIVE CARS ONLY.
BD.6596 R.102/4W	Spring, on Battery Box, for "DZUS" Fasteners Rivet, securing Springs		2 4	
BD.9065 C.5647	Rubber Pad ($\frac{1}{8}$ " \times $9\frac{1}{2}$ " \times 16") for Battery seating Rubber Plug for Battery Box		1 1	R.H. DRIVE CARS ONLY.
BD.8572	DOOR FOR BATTERY BOX IN L.H. FRONT WING		1	R.H. DRIVE CARS ONLY.
BD.8580	"DZUS" Fastener on Battery Box Door (AW.6 $\frac{1}{2}$ -45)		2	
BD.8581	Grommet, securing "DZUS" Fasteners (GA.6 $\frac{1}{2}$ -375)		2	
BD.8583	Clip on Battery Box Door		2	
BD.1814/2	Rivet, securing Clips		4	
BD.8582/1	Sealing Strip (Sponge Rubber $\frac{3}{16}$ " \times $\frac{1}{4}$ " \times 46" long) around Battery Box Door		1	
BD.8571	BATTERY BOX ASSEMBLY IN R.H. FRONT WING		1	L.H. DRIVE CARS ONLY.
BD.6596 R.102/4W.	Spring, on Battery Box, for "DZUS" Fasteners Rivet, securing Springs		2 4	
BD.9066 C.5647	Rubber Pad ($\frac{1}{8}$ " \times $9\frac{1}{2}$ " \times 16") for Battery seating Rubber Plug for Battery Box		1 1	L.H. DRIVE CARS ONLY.
BD.8573	DOOR FOR BATTERY BOX IN R.H. FRONT WING		1	L.H. DRIVE CARS ONLY.
BD.8580	"DZUS" Fastener on Battery Box Door (AW.6 $\frac{1}{2}$ -45)		2	
BD.8581	Grommet, securing "DZUS" Fasteners (GA.6 $\frac{1}{2}$ -375)		2	
BD.8583	Clip, on Battery Box Door		2	
BD.1814/2	Rivet, securing Clips		4	
BD.8582/1	Sealing Strip (Sponge Rubber $\frac{3}{16}$ " \times $\frac{1}{4}$ " \times 46" long) around Battery Box Door		1	
NS.125/5D	Screw, Set, for fixing of Battery Box		3	R.H. DRIVE CARS ONLY.
NS.125/4D	Screw, Set, for fixing of Battery Box		7	
FW.104/T	Washer, Plain, on Setscrews		8	
NN.125/L	Nut on Setscrews		10	
C.724	Washer, Shakeproof, under Nuts		10	
BD.542/3	Washer, Special, for Battery Box fixings		12	R.H. DRIVE CARS ONLY.

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8568	BRACKET ASSEMBLY, SUPPORTING BATTERY BOX IN L.H. FRONT WING		1	R.H. DRIVE CARS ONLY.
BD.8569	BRACKET ASSEMBLY, SUPPORTING BATTERY BOX IN R.H. FRONT WING		1	L.H. DRIVE CARS ONLY.
NS.131/5D	Screw, Set, securing Support Bracket		2	} R.H. DRIVE CARS ONLY.
ND.131/6D	Screw, Set, securing Support Bracket		2	
C.725	Washer, Shakeproof, on Setscrews		4	
BD.10291	Tapping Plate for Support Bracket		1	
NS.131/6D	Screw, Set, for Tapping Plate		2	
FW.105/T	Washer, Plain, on Setscrews		2	
C.725	Washer, Shakeproof, on Setscrews		2	
BD.9104	Steady Bracket for Battery Box mounting		1	
NS.125/5D	Screw, Set, securing Steady Bracket to Battery Box		1	
FW.104/T	Washer, Plain, on Setscrews		1	
NN.125/L	Nut on Setscrew		1	
C.724	Washer, Shakeproof, under Nut		1	
NS.131/4D	Screw, Set, securing Steady Bracket to Chassis Frame		1	
C.725	Washer, Shakeproof, on Setscrew		1	
BD.8710	CLAMP BRACKET ASSEMBLY SECURING BATTERY IN BOX		1	L.H. DRIVE CARS ONLY.
BD.8711	CLAMP BRACKET ASSEMBLY SECURING BATTERY IN BOX		1	R.H. DRIVE CARS ONLY.
BD.8679	Rod (Long) for fixing of Battery		1	
BD.8680	Rod (Short) for fixing of Battery		1	
NN.125/L	Nut, securing Fixing Rods to Battery Box		4	
FW.104/T	Washer, Plain, under Nuts		2	
C.724	Washer, Shakeproof, under Nuts		2	
BD.8704	Barrel Nut, holding Battery in Box		2	
BD.10927	SHIELD ASSEMBLY, ON WING VALANCE, PROTECTING DISTRIBUTOR		1	} Fitted to Chassis No. : 800030 and subs. 811335 and subs.
BD.3143	Felt, $\frac{1}{8}$" x 1" x 15", for Shield		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10928	BRACKET ASSEMBLY FOR MOUNTING OF DISTRIBUTOR SHIELD		2	} Fitted to Chassis No. : 800030 and subs. 811335 and subs.
NS.125/5D	Screw, Set, for fixing of Distributor Shield		3	
C.724	Washer, Shakeproof, on Setscrews		3	
BD.542/3	Washer, Special, on Setscrews to Brackets		2	
FW.104/T	Washer, Plain, on Setscrew		1	
NN.125/L	Nut on Setscrew		1	
BD.8986/1	Screw, Set, securing Distributor Shield to Battery Box		1	
AW.102/T	Washer, Plain, on Setscrew		1	
NN.119/L	Nut on Setscrew		1	
C.723/A	Washer, Shakeproof, under Nut		1	
BD.10248	PLINTH PANEL ASSEMBLY BEHIND L.H. FRONT BUMPER BAR		1	} REQUIRED ONLY WHEN FOG LIGHTS ARE NOT FITTED.
BD.10249	PLINTH PANEL ASSEMBLY BEHIND R.H. FRONT BUMPER BAR		1	
BD.9246	PLINTH PANEL ASSEMBLY BEHIND L.H. FRONT BUMPER BAR		1	} FOR USE WHEN FOG LIGHTS ARE FITTED.
BD.9247	PLINTH PANEL ASSEMBLY BEHIND R.H. FRONT BUMPER BAR		1	
BD.8598	Piping, between Plinth Panels and Front Wings (19½" long)		2	
NS.125/5D	Screw, Set, securing Plinth Panels to Front Wings		8	
FW.104/T	Washer, Plain, on Setscrews		8	
NN.125/L	Nut on Setscrews		8	
C.724	Washer, Shakeproof, under Nuts		8	
BD.9292	Bracket, for attachment of Plinth Panels to Front Bumpers		6	
NN.125/L	Nut, securing Brackets to Bumpers		6	
FW.104/T	Washer, Plain, under Nuts		6	
C.724	Washer, Shakeproof, under Nuts		6	
BD.9301	Bolt (Shouldered) securing Plinth Panels to Brackets		6	
BD.541/13	Washer, Special, under head of Shouldered Bolts		6	
BD.4984	Washer (Rubber) between Brackets on Bumpers and Brackets on Plinth Panels		6	
NN.119/L	Nut on Shouldered Bolts		6	
BD.4983	Washer, Special, under Nuts		6	
BD.9238	FRONT BUMPER, COMPLETE (PYRENE D.98/07578)		1	
C.9751	Bar only, Front Bumper (70/90366)		1	
C.9754	Support Bracket at R.H. side of Front Bumper (70/51039)		1	
C.9752	Outrigger Bracket, connecting R.H. Support Bracket with Bumper (70/51042)		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
FRONT BUMPER COMPLETE (continued)				
C.9755	Support Bracket at L.H. side of Front Bumper (70/51040)		1	
C.9753	Outrigger Bracket, connecting L.H. Support Bracket with Bumper (70/51041)		1	
BD.9874	Spacer, between Outrigger Brackets and Bumper (70/50992)		2	
BD.9871	Bolt, securing Outrigger Brackets to Bumper (70/50991)		2	
FW.206/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9756	Over Rider Assembly on Bumpers (70/90361)		2	
BD.9868/1	Beading, between Over Riders and Bumper (6 $\frac{3}{8}$ " long) (70/50881)		4	
FW.107/T	Washer, Plain, on Over Rider Studs		2	
NN.143/L	Nut, securing Over Riders to Bumper		2	
FG.107/X	Washer, Spring, under Nuts		2	
BD.9856	Panel for mounting of Front Number Plate (70/50932)		1	
BD.9872	Distance Piece, between Front Number Plate Panel and Bumper (70/50962)		2	
BD.9869	Bolt, securing Number Plate Panel to Front Bumper (70/50945)		2	
FW.205/T	Washer, Plain, on Bolts		2	
NN.131/L	Nut on Bolts		2	
FG.105/X	Washer, Spring, under Nuts		2	
NS.150/12D	Setscrew, securing Front Bumper Supports to Chassis Frame		6	
FW.208/T	Washer, Plain, on Setscrews		6	
C.728	Washer, Shakeproof, on Setscrews		6	
BD.9946	L.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
BD.9947	R.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
C.8896	Bar only, L.H. Rear Bumper (70/51136)		1	
C.8897	Bar only, R.H. Rear Bumper (70/51135)		1	
C.8586	Support Bracket for L.H. Rear Bumper (70/51031)		1	
C.8587	Outrigger Bracket, Inner, linking Outer Bracket to L.H. Support Bracket (70/51033)		1	
C.8588	Outrigger Bracket, Outer, connecting Bumper with L.H. Inner Outrigger Bracket (70/51035)		1	
C.8341	Support Bracket for R.H. Rear Bumper (70/51032)		1	
C.8342	Outrigger Bracket, Inner, linking Outer Bracket to R.H. Support Bracket (70/51034)		1	
C.8343	Outrigger Bracket, Outer, connecting Bumper with R.H. Inner Outrigger Bracket (70/51036)		1	
NB.131/8D	Bolt, at connection of Inner and Outer Outrigger Brackets		4	
NN.131/L	Nut on Bolts		4	
FG.105/X	Washer, Spring, under Nuts		4	
C.8344	Spacer, between Outrigger Brackets and Bumpers (70/51018)		2	
BD.9871	Bolt, securing Outrigger Brackets to Bumpers (70/50991)		2	
FW.106/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9689	Over Rider Assembly on L.H. Rear Bumper (70/90362)		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
REAR BUMPER, COMPLETE (continued)				
C.8346	Over Rider Assembly on R.H. Rear Bumper (70/90363)		1	
BD.9868/1	Beading at inner edge of Over Riders (6 $\frac{1}{8}$ " long) (70/50881)		2	
BD.9868/2	Beading at outer edge of Over Riders (5 $\frac{1}{8}$ " long) (70/51044)		2	
C.8348	Bolt (Long) on Over Riders (70/51024)		2	
C.8349	Bolt (Short) on Over Riders (70/51023)		2	
C.8351	Spire Nut securing Bolts to Over Riders (RM.59590)		4	
C.8347	Spacer , between Bumpers and Support Brackets (70/51017)		2	
FW.206/T	Washer, Plain , on Bolts		4	
NN.137/L	Nut , securing Over Riders and Support Brackets to Bumpers		4	
FG.106/X	Washer, Spring , under Nuts		4	
BD.10330	GROMMET, SEALING APERTURE IN REAR WINGS, FOR REAR BUMPER OUTRIGGER BRACKETS		2	
BD.10331	GROMMET, SEALING APERTURE IN TONNEAU, FOR REAR BUMPER SUPPORT BRACKETS		2	
NB.143/26D	Bolt , securing Rear Bumpers to Chassis Frame		6	
FW.107/T	Washer, Plain , on Bolts		6	
NN.143/L	Nut on Bolts		6	
C.727	Washer, Shakeproof , under Nuts		6	
BD.9428	BONNET ASSEMBLY		1	
BD.9164	AIR DEFLECTOR PANEL AT L.H. SIDE OF RADIATOR GRILLE APERTURE		1	
BD.9165	AIR DEFLECTOR PANEL AT R.H. SIDE OF RADIATOR GRILLE APERTURE		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8954	SOCKET ASSEMBLY, ON FRONT WING VALANCE, FOR PROP WHEN NOT IN USE		1	
BD.8691/1	Screw, Self-Tapping, securing Socket to Front Wing Valance		2	
BD.8426	PROP ASSEMBLY HOLDING BONNET IN "OPEN" POSITION		1	
BD.9103	Pivot Pin, hingeing Prop to Front Wing Valance		1	
BD.1708/1	Washer, Double Coil Spring, on Pivot Pin		1	
FW.105/T	Washer, Plain, on Pivot Pin, behind Double Coil Spring		1	
L.102/6U	Pin, Split, retaining Prop on Pivot Pin		1	
BD.3428	ESCUTCHEON, UNDER BONNET, PROVIDING SOCKET FOR PROP WHEN BONNET IN "OPEN" POSITION		1	
C.2010/1	Screw, Set, securing Escutcheon to Bonnet		2	
AN.103/L	Nut on Setscrews		2	
C.723	Washer, Shakeproof, under Nuts		2	
BD.9213	MOULDING DOWN CENTRE OF BONNET		1	
BD.4919	Bolt, Special, securing Moulding to Bonnet		11	
AW.102/L	Washer, Plain, on Bolts		11	
NN.116/L	Nut on Bolts		11	
C.722	Washer, Shakeproof, under Nuts		11	
BD.4379	HINGE ASSEMBLY FOR BONNET		2	
FS.104/4D	Screw, Set, securing Hinges		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4616	BUFFER, IN FLANGE OF FRONT WINGS, FOR BONNET REST		6	
BD.8428	MOUNTING PLATE ASSEMBLY, FOR BONNET CATCH		1	
NS.126/6D NN.125/L C.724	Screw, Set, securing Mounting Plate to Bumper Support Nut on Setscrews Washer, Shakeproof, under Nuts		3 3 3	
BD.2950	BONNET CATCH ASSEMBLY		1	
BD.2952 NS.125/4D C.724	Guide Plate for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews		1 3 3	
BD.8432	HOOK AND STRIKER ASSEMBLY FOR BONNET CATCH		1	
NB.125/4D FW.104/T NN.125/L C.724	Bolt, securing Hook and Striker to Bonnet Washer, Plain, on Bolts Nut on Bolts Washer, Shakeproof, under Nuts		12 12 12 12	
BD.2954	CONTROL CABLE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS)		1	
C.3880 FW.104/T NN.125/L C.724 C.4443 NN.125/L	Abutment Post for Cable Adjuster Washer, Plain, at bottom of Abutment Post Nut, securing Abutment Post Washer, Shakeproof, under Nut Adjuster at end of Bonnet Control Cable Nut, locking Adjuster		1 1 1 1 1 1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9262	RADIATOR GRILLE ON BONNET		1	
NS.119/3D C.723/A	Screw, Set, securing Radiator Grille Washer, Shakeproof, on Setscrews		6 6	
BD.9431	BADGE ("JAGUAR") ON RADIATOR GRILLE		1	
AN.102/L AW.102/T C.723	Nut, securing Badge to Radiator Grille Washer, Plain, under Nut Washer, Shakeproof, under Nut		1 1 1	
BD.3012	L.H. WINDSCREEN ASSEMBLY		1	NOTE: FOR RACING SCREENS. SEE PAGE 157 TO 159
BD.3013	R.H. WINDSCREEN ASSEMBLY		1	
BD.3017	Frame Assembly, L.H. Windscreen		1	
BD.3018	Frame Assembly, R.H. Windscreen		1	
BD.3237	Glass only for Windscreen		2	
BD.1300	Everseal around Screen Glasses (13 ft. long)		1	
BD.6205	Sealing Rubber for Screens (65" long)		1	
BD.2159/3	Sealing Rubber (Sponge) for Screens (21" long)		2	
C.2015/9	Screw, Set, securing Windscreen to Side Pillars		2	
C.2015/10	Screw, Set, securing Windscreen to Side Pillars		2	
BD.3014	CENTRE PILLAR, AT JOINT OF WINDSCREENS		1	
BD.4696	Special Nut, securing Centre Pillar		1	
BD.3239	Hook, on Centre Pillar, for Hood Clamp		1	
C.2015/5	Screw, Set, securing Hook to Centre Pillar		1	
BD.3765	SIDE PILLAR, SUPPORTING L.H. WINDSCREEN		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.3766	SIDE PILLAR, SUPPORTING R.H. WINDSCREEN		1	
BD.3887	Grommet (Rubber) under feet of Side Pillars		2	
BD.10220	Plate, Tapped, for fixing of Side Pillars		2	
BN.137/14D	Bolt, securing Side Pillars		4	
BD.541/14	Washer, Special, on Bolts		4	
C.741	Washer, Shakeproof, on Bolts		4	
BD.4790	Packing for Side Pillars		As req'd	
BD.3545	Hook, at top of Side Pillars, for Hood Clamps		2	
BD.3539/2	Screw, Set, securing Hooks to Side Pillars		4	
BD.9228	INSTRUMENT BOARD ASSEMBLY		1	
BD.8893	Bracket, mounting Instrument Board at L.H. side		1	
BD.8894	Bracket, mounting Instrument Board at R.H. side		1	
BD.8897	Screw, securing Instrument Board		2	
BD.8691/2	Screw, Set, for fixing of Instrument Board		2	
C.3563	Washer (Fibre) on Setscrews		2	
BD.8483	Spire Nut for Mounting Brackets		2	
M.106/3R	Woodscrew, securing Mounting Brackets to Instrument Board		8	
BD.8891	FACIA PANEL		1	L.H. DRIVE CARS ONLY
BD.8892	FACIA PANEL		1	R.H. DRIVE CARS ONLY.
BD.4052	Piping Assembly around Facia and Instrument Panels (4' 6" long)		1	STATE COLOUR WHEN ORDERING.
C.2015/2	Screw, Set, securing Facia Panel		4	
AN.102/L	Nut on Setscrews		4	
C.723	Washer, Shakeproof, under Nuts		4	
BD.8895	MOUNTING PLATE FOR L.H. SIDE OF FACIA PANEL		1	
BD.8896	MOUNTING PLATE FOR R.H. SIDE OF FACIA PANEL		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4660	GRAB RAIL ON FACIA PANEL		1	
BD.4659	Special Washer for Grab Rail		2	
NN.137/L	Nut , securing Grab Rail		2	
C.726	Washer , Shakeproof, under Nuts		2	
BD.9563	FIXED FLOOR ASSEMBLY (STEEL)		1	
BD.6244	Plate, Tapped , for Seat Slides attachment		4	
NS.525/5H	Screw, Set , securing Tapped Plates to underside of Fixed Floor		8	
BD.9409	Asbestos Sheet under Fixed Floor		2	
BD.9410	Plate , holding Asbestos Sheets		2	
BD.524/7	Rivet , securing Asbestos Sheets and Plates to Fixed Floor		22	
BD.1493/2	Screw, Set , securing Fixed Floor to Chassis		2	
FW.104/T	Washer, Plain , on Setscrews		2	
C.724	Washer , Shakeproof, on Setscrews		2	
BD.9411	L.H. FRONT FLOORBOARD ASSEMBLY		1	
BD.9412	R.H. FRONT FLOORBOARD ASSEMBLY		1	
BD.9415	Adaptor Plate around Jack Cover aperture on Floorboards		2	
M.106/3R	Woodscrew , securing Adaptor Plates		20	
BD.9448	Spire Nut under Floorboards for fixing of Gearbox Cover		8	
BD.8691/4	Screw, Self-Tapping , securing Floorboards at rear		6	
1861	Washer, Special , on Self-Tapping Screws		6	
BD.9592	Seal (Rubber) on underside of Floorboard, for Handbrake Link		1	
BD.9534	Cover Plate over redundant hole for Handbrake Link		1	
BD.8691/4	Screw, Self-Tapping , securing Cover Plate to Floorboard		2	
BD.3037	Plate Assembly , covering Jack aperture in Floorboards		2	
BD.10318	Felt , $\frac{1}{8}$ " \times 2" \times 26 $\frac{1}{2}$ ", under Floorboards		2	
BD.10319	Felt , $\frac{1}{8}$ " \times 2" \times 18 $\frac{3}{4}$ ", under Floorboards		2	
BD.10320	Felt , $\frac{1}{8}$ " \times 2" \times 15", under Floorboards		2	
BD.9283	GEARBOX COVER ASSEMBLY		1	
BD.1288/3	Spring Clip for attachment of Dipstick Inspection Cover		2	
BD.1289/2	Rivet , securing Spring Clips to Gearbox Cover		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10524/1	Seal (Sponge Rubber) between Gearbox Cover and Prop Shaft Tunnel (12 $\frac{3}{4}$ " long)		1	
BD.3143	Felt, under Gear box Cover		As req'd	
BD.8691/4	Screw, Self-Tapping, securing Gearbox Cover to Floor		8	
BD.6196/2	Screw, Set, securing Gearbox Cover to Prop Shaft Tunnel		3	
BD.542/3	Washer, Special, on Screws		11	
BD.6196/2	Screw, Set, securing Gearbox Cover to Cowl		6	
FW.104/T	Washer, Plain, on Setscrews		6	
C.724	Washer, Shakeproof, on Setscrews		6	
BD.8279	INSPECTION COVER OVER DIPSTICK APERTURE ON GEARBOX COVER		1	
BD.1288/1	Fastener Stud, securing Inspection Cover to Gearbox Cover		2	
BD.1288/2	Washer, securing Stud to Inspection Cover		2	
CARPETS				
BD.10678	Carpet Assembly, for L.H. Main Floor		1	} L.H. DRIVE CARS ONLY.
BD.10679	Carpet Assembly, for R.H. Main Floor		1	
BD.11286	Carpet Assembly, for L.H. Main Floor		1	} R.H. DRIVE CARS ONLY.
BD.11287	Carpet Assembly, for R.H. Main Floor		1	
BD.10680	Carpet Assembly, for L.H. Pedal Board		1	} L.H. DRIVE CARS ONLY.
BD.10681	Carpet Assembly, for R.H. Toe Board		1	
BD.10682	Carpet Assembly, for R.H. Pedal Board		1	} R.H. DRIVE CARS ONLY.
BD.10683	Carpet Assembly, for L.H. Toe Board		1	
BD.10685	Carpet Assembly, for Gearbox Cover		1	
BD.10686	Carpet Assembly, for Clutch Housing		1	
BD.11171	Heel Pad on Main Floor Carpets		2	
BD.11139	Carpet, on Prop Shaft Tunnel, behind Seats		1	
BD.9935	RETAINER, HOLDING MAIN FLOOR CARPETS ON DOOR SILLS		2	
BD.540/3	Screw, Self-Tapping, securing Retainers to Door Sils		12	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
FELT UNDER CARPETS				
BD.10668/1	Felt for front of Gearbox Cover (21" × 21")		1	
BD.10668/2	Felt for rear of Gearbox Cover (15½" × 9")		1	
BD.10668/3	Felt for top of Gearbox Cover (27" × 21")		1	
BD.10668/4	Felt for Gauntlet Panel on Gearbox Cover (11" × 9")		1	
BD.10668/5	Felt for Clutch Housing Panel (26" × 12½")		1	
BD.10669/1	Felt (Rubberised) for top of Gearbox Cover (27" × 21")		1	
BD.10669/2	Felt (Rubberised) for Gauntlet Panel on Gearbox Cover (11" × 9")		1	
BD.10669/3	Felt (Rubberised) for Clutch Housing Panel (26" × 12½")		1	
BD.10676	Felt (Rubberised) for L.H. Toe Board (19½" × 12")		1	
BD.10677	Felt (Rubberised) for R.H. Toe Board (19½" × 12")		1	
BD.524/3	Rivet, Bifurcated, securing Felt to Gearbox Cover		26	
FELT MATS				
BD.10656	Mat Assembly for Luggage Compartment Floor		1	} FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.10657	Mat Assembly for Hood Stowage Shelf		1	
BD.10658	Mat Assembly for Stowage Shelf Tunnel		1	
BD.10659	Mat Assembly for Side Curtain Tray		1	
BD.10660	Mat Assembly for front L.H. side of Luggage Compartment		1	
BD.10661	Mat Assembly at rear L.H. side of Luggage Compartment		1	
BD.10662	Mat Assembly at R.H. side of Luggage Compartment		1	
BD.10684	Mat Assembly for Folding Panel		1	
FIXINGS FOR CARPETS				
BD.1286/1	Button, for fastener securing Carpets to Main Floorboards, Pedal Board and Toe Board		11	
BD.1286/2	Socket, securing Buttons to Carpets		11	
BD.1286/3	Stud, receiving Buttons		11	
M.104/4R	Woodscrew, securing Studs to Floorboards		4	
BD.1814/2	Rivet, securing Studs to Pedal and Toe Boards		7	
BD.1286/1	Button, at joint of Toe Board with Pedal Board		1	
BD.1286/2	Socket, securing Button to Toe Board Carpet		1	
BD.3834/1	Stud, receiving Button		1	
BD.3834/2	Eyelet, securing Stud to Pedal Board Carpet		1	
FIXINGS FOR FELT MATS				
BD.1286/1	Button, for Fastener securing Mat to Luggage Compartment Floor and Hood Stowage Shelf		6	
BD.1286/2	Socket, securing Buttons to Mats		6	
BD.1286/3	Stud, receiving Buttons		6	
BD.1814/2	Rivet, securing Studs to Luggage Compartment Floor and Hood Stowage Shelf		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
FIXINGS FOR FELT MATS (continued)				
BD.539/4	Screw, Self-Tapping, securing Mats to Luggage Compartment Floor and Hood Stowage Shelf		11	
BD.532/1	Washer, Cup, on Self-Tapping Screws		11	
INTERIOR TRIMMING				
BD.10645	Face Piece (Rexine 54" × 8") for Heelboard		1	
BD.10646	Face Piece (Rexine 28" × 22") for L.H. forward end of Wheel Arch		1	
BD.10647	Face Piece (Rexine 28" × 22") for R.H. forward end of Wheel Arch		1	
BD.10648	Face Piece (Rexine 12" × 9") for L.H. side of Wheel Arch		1	
BD.10649	Face Piece (Rexine 12" × 9") for R.H. side of Wheel Arch		1	
BD.10650	Face Piece (Rexine 15" × 4") for Wheel Arch flanges		2	
BD.10651	Face Piece (Rexine 12" × 10") for L.H. Beam Panel		1	
BD.10652	Face Piece (Rexine 12" × 10") for R.H. Beam Panel		1	
BD.10653	Face Piece (Rexine 9" × 4½") at L.H. corner of Boot aperture		1	
BD.10654	Face Piece (Rexine 9" × 4½") at R.H. corner of Boot aperture		1	
BD.10655	Face Piece (Moquette 16" × 14") on Cover over Petrol Filler Neck		1	
BD.10671	Face Piece (Rexine 15" × 4") at rear of Prop. Shaft Tunnel		1	
BD.4721	Moquette (3" × 2") on Door Shut Pillars		2	
BD.2899/4	Draught Piping (27" long) on Door Hinge Pillars		2	
BD.4676	Fillet for Trimming on L.H. Rear Quarter		1	
BD.4677	Fillet for Trimming on R.H. Rear Quarter		1	
BD.4789	Fillet for Trimming on Beam Panel		2	
BD.9936	Tacking Strip on Door Waist		2	
BD.10410	Tacking Strip on Door Waist Roll		2	
BD.10441	Tacking Strip on Rear Quarter Waist Roll		2	
BD.10442	Tacking Strip on Scuttle Waist Roll		1	
BD.3631/4	Rubber Piping at top of Doors and around edge of Tonneau Panel (10 ft. long)		1	
BD.10411	Hide, covering Piping on L.H. Door (8" × 29")		1	} STATE COLOUR REQUIRED WHEN ORDERING.
BD.10412	Hide, covering Piping on R.H. Door (8" × 29")		1	
BD.3663	Hide, covering Piping on Tonneau Panel (3" × 66")		1	
BD.9156	Moulding Assembly for Shroud Panel (behind Wind-screen) 49" long		1	
BD.9157	Hide, covering Moulding (49" long)		1	STATE COLOUR REQUIRED WHEN ORDERING.
BD.3630	Plug in ends of Piping and Moulding		8	
BD.10313	Clip, securing Piping Rolls to edges of Panels		36	
BD.3049	Piping Assembly around Body (15 ft. long)		1	STATE COLOUR REQUIRED WHEN ORDERING.
BD.9156	MOULDING ASSEMBLY FOR EDGE OF SHROUD PANEL (BEHIND WIND-SCREEN)		1	
BD.8836	Moulding for centre portion of Shroud Panel		1	
BD.9155	Moulding at each end of Shroud Panel		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8814	L.H. SEAT FRAME AND SQUAB ASSEMBLY		1	
BD.8815	R.H. SEAT FRAME AND SQUAB ASSEMBLY		1	
	NOTE : BD.8814 or BD.8815 applies to a fully Trimmed Seat Squab, complete with Base Frame, Runners, etc., BUT LESS CUSHION.			
	FOR COMPETITION SEATS, SEE PAGE 159 TO 161			
BD.9333	L.H. SEAT BASE FRAME ASSEMBLY		1	
BD.9334	R.H. SEAT BASE FRAME ASSEMBLY		1	
BD.3258	Lever for adjustment of L.H. Seat		1	
BD.3259	Lever for adjustment of R.H. Seat		1	
BD.6624/2	Pivot Pin, securing Levers to Base Frame		2	
FW.104/C	Washer, on Pivot Pins		2	
FW.104/T	Washer, on Pivot Pins		2	
L.102/6U	Pin, Split, securing Pivot Pins		2	
C.3317	Spring for return of Levers		2	
BD.3255	Pivot Pin, securing Seat Squab to Base Frame		4	
BD.541/10	Washer, Special, on Pivot Pin		8	
C.4202/2	Nut on Pivot Pins		4	
FG.105/X	Washer, Spring, under Nuts		4	
BD.9615	L.H. SEAT SQUAB FRAME ASSEMBLY		1	
BD.9616	R.H. SEAT SQUAB FRAME ASSEMBLY		1	
BD.9577	Hinge, Inner, for L.H. Seat		1	
BD.9578	Hinge, Inner, for R.H. Seat		1	
BD.9607	Hinge, Outer, for L.H. Seat		1	
BD.9608	Hinge, Outer, for R.H. Seat		1	
FS.504/4H	Screw, Set, securing Hinges to Seat Squab		16	
FS.504/6H	Screw, Set, securing Hinges to Seat Squab		6	
FS.504/8H	Screw, Set, securing Hinges to Seat Squab		6	
FN.104/L	Nut on Setscrews		6	
C.724	Washer, Shakeproof, under Nuts		6	
BD.9896	Fillet Assembly, L.H.		1	
BD.9897	Fillet Assembly, R.H.		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8816/7	SEAT RUNNER (COMPRISING 1 PLAIN AND 1 SLOTTED RUNNER PER SET).		4	
BD.9606	Packing Assembly under Seat Runners		4	} For use when extra packing is required under Inner Seat Runners.
BD.4750/1	Packing under Inner Seat Runners (16 s.w.g.)	As req'd		
BD.4750/2	Packing under Inner Seat Runners (10 s.w.g.)	As req'd		
NS.525/12H	Screw, Set , securing Outer Runners to Floor		8	
NS.525/8H	Screw, Set , securing Inner Runners to Floor		4	
FS.504/4H	Screw, Set , securing Runners to Seats		8	
FN.104/L	Nut , fixing Setscrews to Seats		8	
C.724	Washer , Shakeproof, under Nuts		8	
BD.9593	SEAT CUSHION ASSEMBLY		2	
BD.9230	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN SEATS		1	FITTED TO R.H. DRIVE CARS ONLY At Chassis No. 800001 to 800024.
BD.10600	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN SEATS		1	FITTED TO L.H. DRIVE CARS ONLY At Chassis No. 810001 to 811256.
BD.10825	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN SEATS		1	Fitted to Chassis No. 800025 and subs. 811257 and subs.
BD.8790	L.H. DOOR ASSEMBLY		1	SHELL ONLY.
BD.8791	R.H. DOOR ASSEMBLY		1	SHELL ONLY.
BD.8792	Outer Panel for L.H. Door		1	
BD.8793	Outer Panel for R.H. Door		1	
BD.8794	Panel , Hinge Face, for L.H. Door		1	
BD.8795	Panel , Hinge Face, for R.H. Door		1	
BD.8889	Panel Assembly for reinforcement of L.H. Hinge Face Panel		1	
BD.8890	Panel Assembly for reinforcement of R.H. Hinge Face Panel		1	
NS.125/4D	Screw, Set , securing Hinge Face Panels		6	
NN.125/L	Nut on Setscrews		6	
BD.8796	Panel , Shut Face, for L.H. Door		1	
BD.8797	Panel , Shut Face, for R.H. Door		1	
BD.8800	Panel , Inner, L.H. Hinge Pillar		1	
BD.8801	Panel , Inner, R.H. Hinge Pillar		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
DOOR ASSEMBLY (continued)				
BD.8802	Panel, at bottom of L.H. Door		1	
BD.8803	Panel, at bottom of R.H. Door		1	
BD.8804	Panel, Inner, L.H. Lock Face		1	
BD.8805	Panel, Inner, R.H. Lock Face		1	
BD.8798	Panel, Waist Rail, for L.H. Door		1	
BD.8799	Panel, Waist Rail, for R.H. Door		1	
BD.4667	Fixing Plate Assembly		4	
BD.9279	Capping Panel for R.H. Door Hinge		1	
BD.9280	Capping Panel for L.H. Door Hinge		1	
BD.10672	Seal Plate, Lower, on L.H. Door Shut Panel		1	
BD.10673	Seal Plate, Lower, on R.H. Door Shut Panel		1	
BD.10674	Fillet for Lower Seal Plates		2	
BD.540/14	Screw, Self-Tapping, securing Fillets		4	
BD.4349	Lock Assembly on L.H. Door		1	
BD.4350	Lock Assembly on R.H. Door		1	
AS.502/3H	Screw, Set, securing Locks to Doors		10	
AS.502/4H	Screw, Set, securing Locks to Doors		2	
AN.102/L	Nut on Setscrews		12	
BD.4349 LOCK ASSEMBLY FOR L.H. DOOR				
BD.4350 LOCK ASSEMBLY FOR R.H. DOOR				
BD.4371	Lock only		2	
BD.3557	Link, between Operating Lever and Lock		2	
AS.302/4H	Screw, Set, securing Links to Locks		2	
AW.102/C	Washer, Plain, on Setscrews		2	
AN.102/L	Nut on Setscrews		2	
C.723	Washer, Shakeproof, under Nuts		2	
BD.4347	Plate for mounting of L.H. Door Lock		1	
BD.4348	Plate for mounting of R.H. Door Lock		1	
BD.4341	Guide, for Lock Operating Levers		2	
AS.502/3H	Screw, Set, securing Guide, Lock and Brackets to Plate		14	
AS.502/4H	Screw, Set, securing Bracket to Plate		2	
AN.102/L	Nut on Setscrews		16	
BD.3670	Lever Assembly, operating L.H. Door Lock		1	
BD.3671	Lever Assembly, operating R.H. Door Lock		1	
J.104/6S	Clevis Pin, securing Links to Operating Levers		2	
FW.104/T	Washer, Plain, on Clevis Pins		2	
L.103/6U	Split Pin, retaining Clevis Pins		2	
BD.3316	Spring, between Operating Lever and Bracket		2	
BD.4343	Tension Lever Assembly for R.H. Door Lock		1	
BD.4344	Tension Lever Assembly for L.H. Door Lock		1	
BD.4340	Pivot for Door Locks		2	
AS.502/2H	Screw, Set, securing Pivot to Mounting Plate		4	
BD.4376	Bracket, anchoring Return Spring		2	
AS.502/3H	Screw, Set, securing Anchor Bracket		2	
AN.102/L	Nut on Setscrews		2	
C.723	Washer, Shakeproof, under Nuts		2	
BD.4466	Spring, Return, between Anchor Bracket and Pivot		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4431	SAFETY CATCH ASSEMBLY FOR DOOR LOCKS		2	
AS.502/2H C.724	Screw, Set, securing Safety Catch Washer, Shakeproof, on Setscrews		4 4	
BD.4346	BAR, OPERATING SAFETY CATCH		2	
L.102/4U	Split Pin, securing Operating Bar to Safety Catch and Tension Lever		4	
AW.102/C	Washer, Plain, behind Split Pins		4	
BD.4240	HANDLE, OPERATING L.H. SAFETY CATCH		1	
BD.4241	HANDLE, OPERATING R.H. SAFETY CATCH		1	
BD.4242	Screw, securing Handles		2	
BD.4243	Washer, Shakeproof Countersunk, on Screws		2	
BD.2930	STRIKER FOR DOOR LOCKS ON SHUT FACE PANEL		2	
AS.302/4H BD.8611	Screw, Set, securing Strikers Packing Plate under Strikers		4 As req'd	
BD.2942	DOVETAIL STRIKER FOR DOOR LOCKS		2	
BD.2941	DOVETAIL BUFFER FOR DOOR LOCKS		2	
AS.502/4H AN.102/L C.723	Screw, Set, securing Dovetail Strikers and Buffers Nut on Setscrews Washer, Shakeproof, under Nuts		8 8 8	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.3560	COVER PLATE, ON DOOR CASINGS, FOR DOOR LOCK TENSION LEVER		2	
BD.524/4	Rivet, Bifurcated, securing Cover Plates		8	
BD.3559	STRAP OPERATING DOOR LOCKS		2	
BD.3556	Bracket, over end of Operating Strap		2	
BD.539/16	Screw, Self-Tapping, securing Bracket and Strap to Door		4	
BD.4157	HINGE FOR DOORS		4	
BD.4701/1	Shim between Hinge and Door (.036" thick)		As req'd	
BD.4701/2	Shim between Hinge and Door (.064" thick)		As req'd	
BD.9013	Stop-Plate for Doors		2	
C.5824/3	Screw, Set, securing Hinges to Doors		16	
C.724	Washer, Shakeproof, on Setscrews		16	
BD.4156	Pivot Pin, through boss of Hinges		4	
BD.8806	CASING ASSEMBLY FOR L.H. DOOR		1	
BD.8807	CASING ASSEMBLY FOR R.H. DOOR		1	
BD.3822	Fastener "Tenax" on flap of Door pockets		2	
BD.2045/8	SEALING RUBBER, ON HINGE PILLARS AND DOOR SILLS (31" LONG)		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8787	REAR END ASSEMBLY		1	
BD.8903	Door Sill Assembly, L.H.		1	
BD.8904	Door Sill Assembly, R.H.		1	
BD.9563	Floor Assembly, Rear		1	
BD.8839	Shelf Assembly for Stowage of Hood		1	
BD.9326	Tray at back of Spare Wheel container		1	
BD.9918	Tonneau Panel Assembly		1	
BD.8905	Wheel Arch Assembly, L.H.		1	
BD.8906	Wheel Arch Assembly, R.H.		1	
BD.10676	Gusset Panel Assembly		1	
BD.4616	Buffer (Rubber) for Spare Wheel Tray		4	
BD.9023	Cover Plate for Hood Stowage Shelf		1	
BD.538/2	Screw, Self-Tapping, securing Cover Plate		6	
BD.9368	Finishing Panel Assembly (forward end of Luggage Compartment Floor)		1	
BD.8903	L.H. DOOR SILL ASSEMBLY		1	
BD.8904	R.H. DOOR SILL ASSEMBLY		1	
BD.8373	Outer Panel for L.H. Door Sill		1	
BD.8374	Outer Panel for R.H. Door Sill		1	
BD.8502	Inner Panel Assembly for L.H. Door Sill		1	
BD.8503	Inner Panel Assembly for R.H. Door Sill		1	
BD.4107	Plate, reinforcing Sill Mountings		4	
BD.8377	Diaphragm at front end of L.H. Sill		1	
BD.8378	Diaphragm, at front end of R.H. Sill		1	
BD.4112	Diaphragm, Inner, L.H. Shut Pillar		1	
BD.4113	Diaphragm, Inner, R.H. Shut Pillar		1	
BD.4216	Diaphragm, Outer, L.H. Shut Pillar		1	
BD.4217	Diaphragm, Outer, R.H. Shut Pillar		1	
BD.8379	Diaphragm, Intermediate, for Sills		6	
BD.4164	Bracket, Locating, L.H. Shut Pillar		1	
BD.4165	Bracket, Locating, R.H. Shut Pillar		1	
BD.9446	Plate, Seal, bottom L.H. Shut Pillar		1	
BD.9447	Plate, Seal, bottom, R.H. Shut Pillar		1	
BD.4116	Stiffener for Shut Pillars		2	
BD.8760	Angle, fixing L.H. Sill to Dash		1	
BD.8761	Angle, fixing R.H. Sill to Dash		1	
BD.7723	Bracket, mounting Sills		4	
BD.633	Draught Piping on Door Sills (33" long)		2	STATE COLOUR WHEN ORDERING.
BD.9918	TONNEAU PANEL ASSEMBLY		1	
BD.9917	Panel only for Tonneau		1	
BD.9344	Panel Assembly, Lower, for Tonneau		1	
BD.9427	Panel, Bottom, for Tonneau		1	
BD.8860	Tray Assembly for Side Curtain		1	
BD.4191	Diaphragm at L.H. corner of Boot		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
TONNEAU PANEL ASS'Y (continued)				
BD.4192	Diaphragm at R.H. corner of Boot		1	
BD.9575	Support Bracket for Tonneau		2	
BD.9357	Gutter Assembly for Boot aperture		1	
BD.9541	PLATE AND BRACKET ASSEMBLY FOR MOUNTING OF RADIO POWER PACK		1	
BD.8905	L.H. WHEEL ARCH ASSEMBLY		1	
BD.8906	R.H. WHEEL ARCH ASSEMBLY		1	
BD.2466	Panel for R.H. Wheel Arch		1	
BD.2467	Panel for L.H. Wheel Arch		1	
BD.4160	Butt Strap for Wheel Arches		2	
BD.8681	Clip for Electrical wiring		8	
BD.9311	Support Assembly at rear of L.H. Wheel Arch		1	
BD.9312	Support Assembly at rear of R.H. Wheel Arch		1	
BD.10195	PANEL ASSEMBLY FROM L.H. WHEEL ARCH TO HOOD STOWAGE SHELF		1	
BD.10196	PANEL ASSEMBLY FROM R.H. WHEEL ARCH TO HOOD STOWAGE SHELF		1	
C.5647	Plug (Rubber) in Wheel Arch Panel		4	
BD.9550	CASING ASSEMBLY, AT L.H. SIDE OF TONNEAU		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9551	CASING ASSEMBLY, AT R.H. SIDE OF TONNEAU		1	
BD.539/4 BD.532/1	Screw, Self-Tapping, securing Casings Cup Washer on Screws		16 16	
BD.9336	RECESS PANEL ASSEMBLY FOR SPARE WHEEL		1	
BD.10253	Felt around Recess Panel (11" × 1")		2	
BD.10254	Felt around Recess Panel (29" × 1")		2	
BD.6196/4	Screw, Set, securing Recess Panel to Spare Wheel Tray		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	
BD.9625	COVER PANEL, IN LUGGAGE COM- PARTMENT, FOR PETROL FILLER NECK		1	
BD.9584	Seal (Rubber) for Cover Panel		1	
BD.11262	LID ASSEMBLY, IN LUGGAGE COM- PARTMENT, EXPOSING SPARE WHEEL		1	NOT REQUIRED FOR SPECIAL EQUIPMENT MODELS.
BD.9372	LID ASSEMBLY, IN LUGGAGE COM- PARTMENT, EXPOSING SPARE WHEEL		1	FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.9374	Hinge for Lid		3	
NS.519/3D	Screw, Set, securing Hinges to Lid		9	
BD.9909/1	"T" Nut for Setscrews		9	
BD.2121	Budget Lock at L.H. side of Lid		1	
BD.2122	Budget Lock at R.H. side of Lid		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
LID ASSEMBLY, IN LUGGAGE COMPARTMENT, EXPOSING SPARE WHEEL <i>(continued)</i>				
NS.519/3D BD.9909/1 C.4630 BD.6250 BD.3556 BD.539/4	Screw , Set, securing Budget Locks "T" Nut for Setscrews Bezel , in aperture, for Budget Lock Key Tab (Leather) for lifting Lid Clip , securing Tab Screw , Self-Tapping, securing Clip		4 4 2 1 1 1	SPECIAL EQUIPMENT MODELS ONLY.
BD.9579	BRACKET ASSEMBLY, IN TRAY, FOR MOUNTING OF SPARE WHEEL		1	
NS.419/3D C.723/A	Screw , Set, securing Bracket Washer , Shakeproof, on Setscrews		12 12	
BD.6240	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.6241 BD.5232 BD.5561 C.704/1	Screw for fixing of Spare Wheel Dome Plate on Screw Hand Knob operating Screw Mills Pin , securing Hand Knob to Screw		1 1 1 1	
BD.9583	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.9582 BD.9581 BD.5232 BD.5561 C.704/1	Screw , for fixing of Spare Wheel Spacing Washer on Screw Dome Plate on Screw Hand Knob operating Screw Mills Pin , securing Hand Knob to Screw		1 1 1 1 1	
BD.9959	LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE		1	Fitted from Chassis No. 800001 to 800008. 810001 to 810548.
BD.10640 BD.9585 M.106/4R	Lid only (comprising Panel, Wood Frame and Attachment Brackets) Bracket , holding Lock Release Mechanism (centre) Woodscrew , securing Bracket		1 1 6	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE <i>(continued)</i>				
BD.9387	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer behind Release Mechanism (RS.14-307)		1	
AS.102/11H	Screw, Set , securing Spacer		1	
NS.319/3H	Screw, Set , securing Release Mechanism		4	
C.724	Washer , Shakeproof, on Setscrews		4	
BD.9388	Lock at L.H. side of Luggage Compartment (WB.3/6630/0)		1	
BD.9389	Lock at R.H. side of Luggage Compartment (WB.3/6631/0)		1	
BD.1503/3	Woodscrew , securing Side Locks		8	
BD.9390	Cable , coupling centre Release Mechanism with Side Locks (WB.3/6644/0)		2	
BD.9942	Handle Assembly on Lid (complete with Moulding)		1	
BD.10243	Housing for Number Plate Lamp		1	
BD.9943	Moulding down centre of Lid		1	
BD.9628	Spire Nut , securing centre Moulding		4	
BD.9152	Plaque at bottom of centre Moulding		1	
NN.119/L	Nut , securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	
C.1040/23	Clip , securing Harness		2	
BD.9392	Casing for Luggage Compartment Lid		1	
BD.10352	Strap , holding Spare Wheel Lid in "open" position		1	
BD.539/11	Screw, Self-Tapping , securing Strap		1	
BD.532/2	Cup Washer on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip , anchoring Prop when not in use		1	
BD.9160	Plate behind Spring Clip		1	
BD.4908/6	Woodscrew securing Clip		2	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T	Washer, Plain , behind Spring Washer		1	
LI03/7U	Pin, Split , securing Prop in Bracket		1	
BD.826	Lamp Assembly illuminating Luggage Compartment		1	
C.4073	Bracket , operating Luggage Compartment Lamp Switch		1	
BD.9377	LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE		1	Fitted to Chassis No. 800009 and subs. 810549 and subs.
BD.10584	Lid only (comprising Panel, Wood Frame and Attachment Brackets)		1	
BD.10533	Bracket , holding Lock Release Mechanism (centre)		1	
M.106/4R	Woodscrew , securing Bracket		6	
BD.9387	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer , behind Release Mechanism (RS.14-307)		1	
AS.102/11H	Screw, Set , securing Spacer		1	
NS.319/3H	Screw, Set , securing Release Mechanism		4	
C.724	Washer , Shakeproof, on Setscrews		4	
BD.9388	Lock , at L.H. side of Luggage Compartment Lid (WB.3/6630/0)		1	
BD.9389	Lock , at R.H. side of Luggage Compartment Lid (WB.3/6631/0)		1	
BD.1503/3	Woodscrew , securing Side Locks		8	
BD.9390	Cable , coupling centre Release Mechanism with Side Locks (WB.3/6644/0)		2	
BD.9639	Handle Assembly on Lid (complete with Moulding)		1	
BD.10245	Housing for Number Plate Lamp		1	
BD.9090	Moulding down centre of Lid		1	
BD.9628	Spire Nut , securing centre Moulding		4	
BD.9152	Plaque at bottom of centre Moulding		1	
NN.119/L	Nut , securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE (continued)				
C.1040/23	Clip, securing Harness		2	
BD.9392	Casing for Luggage Compartment Lid		1	
BD.10352	Strap, on Casing, holding Spare Wheel Lid in "open" position		1	
BD.539/11	Screw, Self-Tapping, securing Strap		1	
BD.532/2	Cup Washer on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip, anchoring Prop when not in use		1	
BD.9160	Plate behind Spring Clip		1	
BD.4908/6	Woodscrew, securing Clip		2	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T	Washer, Plain, behind Spring Washer		1	
L.103/7U	Pin, Split, securing Prop in Bracket		1	
BD.826	Lamp Assembly illuminating Luggage Compartment		1	
C.4073	Bracket, operating Luggage Compartment Switch		1	
BD.9432	Striker Bar, on Luggage Compartment Floor, for locking of Luggage Lid (WB.3/6645/0)		2	
FN.104/L	Nut, securing Striker Bars		8	
BD.9942	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID		1	Fitted from Chassis No. 800001 to 800008. 810001 to 810548.
BD.11261	Locking Barrel for Handle (WB.1/6438) for use with "FNR" series Key		1	
BD.9639	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID (COMPLETE WITH SEAT MOULDING)		1	Fitted to Chassis No. 800009 and subs. 810549 and subs.
BD.11265	Handle, less Seating Moulding		1	
BD.11266	Seating Moulding under Handle (WB.1/6436/0)		1	
BD.11261	Locking Barrel for Handle (WB.1/6438) for use with "FNR" series Key		1	
BD.9345/2	SEALING RUBBER AROUND LUGGAGE COMPARTMENT LID (95" LONG)		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9345/3	SEALING RUBBER, IN RETAINER AT FRONT OF LUGGAGE COMPARTMENT APERTURE, FOR SEALING LID (31" LONG)		1	
BD.4287	HINGE FOR LUGGAGE COMPARTMENT LID		2	
FS.104/5D BD.541/9 C.724	Screw, Set, securing Hinges to Lid Washer, Special, on Setscrews Washer, Shakeproof, on Setscrews		6 6 6	
BD.4311	PIVOT PIN, SECURING HINGES TO BODY		2	
FN.204/L C.724	Nut, securing Pivot Pins Washer, Shakeproof, under Nuts		4 2	
BD.9211	BRACKET ASSEMBLY FOR MOUNTING OF L.H. LUGGAGE LID HINGE		1	
BD.9212	BRACKET ASSEMBLY FOR MOUNTING OF R.H. LUGGAGE LID HINGE		1	
BD.4332 FS.104/4D FW.104/T C.724	Cover Plate for Luggage Lid Hinges Screw, Set, securing Brackets Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		2 8 4 8	
BD.9566	MOULDING ASSEMBLY ON TONNEAU PANEL ABOVE LUGGAGE COMPARTMENT LID		1	
BD.4919 NN.116/L C.722	Bolt, securing Moulding to Tonneau Panel Nut on Bolts Washer, Shakeproof, under Nuts		4 4 4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9477	HINGED PANEL ASSEMBLY AT BACK OF LUGGAGE COMPARTMENT		1	
BD.9395	Sliding Catch , locking Panel		2	
BD.1499/6	Woodscrew , securing Sliding Catches		12	
BD.9441	Hinge for Panel		2	
NS.519/3D	Screw , securing Hinges		10	
BD.9912	Striker Plate , for use when Hinged Panel in vertical position		2	
BD.10297	Striker Plate , for use when Hinged Panel in horizontal position		2	
BD.4814/7	Seal (Rubber) for Hinged Panel		1	
BD.9397	PETROL FILLER BOX ASSEMBLY		1	
BD.9489	" Snapsac " Sleeve , on Filler Box, for Lock Striker		1	
BD.4368	Hose , connecting Filler Box with Petrol Tank		1	
C.824	Clip , securing Hose to Box and Tank		2	
BD.4369	Extension Tube (Rubber) for Drain Pipe on Filler Box		1	
BD.4358	HINGE ASSEMBLY FOR PETROL FILLER DOOR		1	
AS.302/3H	Screw , Set, securing Hinge inside Petrol Filler Box		2	
C.738	Washer , Shakeproof, on Setscrews		2	
BD.4357	DOOR ASSEMBLY FOR PETROL FILLER BOX		1	
AN.102/L	Nut , securing Door to Hinges		4	
FW.105/T	Washer , Packing, between Door and Hinge		As req'd	
C.738	Washer , Shakeproof, under Nuts		4	
ED.4354	Seal (Rubber) around Filler Box Aperture, for Door seating		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4360	LOCK ASSEMBLY FOR PETROL FILLER DOOR		1	
BD.8071	Spring Clip, securing Lock to Door (WB.7/4098)		1	
BD.4353	STRIKER ASSEMBLY FOR PETROL FILLER LOCK		1	
BD.10641	Stud Plate, for fixing of Striker inside Petrol Filler Box		1	
NN.119/L	Nut, securing Stud Plate and Striker		2	
AW.102/T	Washer, Plain, on Studs		2	
C.738	Washer, Shakeproof, under Nuts		2	
BD.3699	FILLER CAP ON HINGE		1	
BD.3189	Seal (Cork) inside Filler Cap		1	
BD.4394	Spring, between Filler Cap and Hinge		1	
L.102/4U	Pin, Split, securing Filler Cap to Hinge		1	
C.2501/3	Washer, Plain, under Split Pin		1	
BD.9402	L.H. REAR WING ASSEMBLY		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.9403	R.H. REAR WING ASSEMBLY		1	
BD.4764/1	Sealing Rubber around Wheel aperture in Rear Wing		2	
BD.9516	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN WIRE SPOKE ROAD WHEELS ARE FITTED, BUT NOT REAR WHEEL COVER.
BD.9517	R.H. REAR WING ASSEMBLY		1	
BD.7769	Moulding around Wheel aperture in L.H. Rear Wing		1	
BD.7770	Moulding around Wheel aperture in R.H. Rear Wing		1	
BD.1814/1	Pop Rivet, securing Mouldings to Wings		32	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11275	L.H. REAR WING ASSEMBLY		1	FOR USE WHEN WIRE SPOKE ROAD WHEELS AND REAR WHEEL COVERS ARE FITTED. SUPPLIED TO SPECIAL ORDER ONLY.
BD.11276	R.H. REAR WING ASSEMBLY		1	
BD.6615	Mounting Bracket Assembly (complete with Spring for "DZUS" Fastener)		2	
BD.6615	MOUNTING BRACKET ASSEMBLY, ON REAR WINGS, FOR "DZUS" FASTENERS		2	FOR USE ON REAR WINGS SUITABLE FOR WIRE SPOKE ROAD WHEELS AND REAR WHEEL COVERS. SUPPLIED TO SPECIAL ORDERS ONLY.
BD.6596	Spring , receiving "Dzus" Fasteners on Rear Wheel Covers		2	
BD.6600/1	Rivet , securing "Dzus" Springs		4	
BD.2401/1	Screw, Set , securing Rear Wings		4	
BD.2401/2	Screw, Set , securing Rear Wings		4	
BD.2401/7	Screw, Set , securing Rear Wings		6	
BD.542/2	Washer, Special , on Setscrews		14	
C.725	Washer, Shakeproof , on Setscrews		14	
BD.8598	Piping Assembly between Rear Wings and Wheel Arches (72" long)		2	
BD.9317	SEALING PLATE ASSEMBLY BETWEEN L.H. REAR WING AND SHUT PILLAR		1	
BD.9318	SEALING PLATE ASSEMBLY BETWEEN R.H. REAR WING AND SHUT PILLAR		1	
BD.9317/4	Rubber Strip for Sealing Plates (27" long)		2	
BD.8691/3	Screw, Metal , securing Sealing Plate to Shut Pillar		8	
BD.8483	"Spire" Nut for Metal Screws		8	
BD.711/9	Screw, Metal , securing Sealing Plate to Shut Pillar		6	
AW.102/T	Washer, Plain , on Screws		14	
NS.119/4D	Screw, Set , securing Sealing Plates to Rear Wings		4	
NN.119/L	Nut on Setscrews		4	
C.723/A	Washer, Shakeproof , under Nuts		4	
BD.3786	"Rubo" Gasket , between Sealing Plate and Rear Wing (27" long)		2	
BD.6194	STEADY BAR FOR L.H. REAR WING		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6195	STEADY BAR FOR R.H. REAR WING		1	
BD.4449	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.4450	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.2121	Lock on L.H. Cover (WB.12288/A)		1	
BD.2122	Lock on R.H. Cover (WB.12288/B)		1	
AS.502/4H AN.102/L C.723	Screw, Set, securing Locks to Covers Nut on Setscrews Washer, Shakeproof, under Nuts		4 4 4	
BD.11267	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WITH BD.11275 AND BD.11276 REAR WINGS WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.11268	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.6616 BD.6617	"Dzus" Fastener on Rear Wheel Covers Grommet, securing "Dzus" Fastener to Rear Wheel Covers		2 2	} SUPPLIED TO SPECIAL ORDER ONLY.
2312	ESCUTCHEON FOR REAR WING COVERS (WB.16049)		2	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.540/9	Screw, Self-Tapping, securing Escutcheon to Rear Wing Covers		4	
BD.5848	HOODSTICKS ASSEMBLY		1	
BD.5843	Main Stick Assembly		1	
BD.5842	Rear Stick		1	
BD.3322	Front Stick Assembly		1	
BD.3280	Canopy Rail Assembly		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
HOODSTICKS ASSEMBLY (continued)				
BD.3323	Link at front L.H. side of Cantrail		1	
BD.3324	Link at front R.H. side of Cantrail		1	
BD.3325	Link at rear L.H. side of Cantrail		1	
BD.3326	Link at rear R.H. side of Cantrail		1	
BD.3327	Tie Link (Long) for Hoodsticks		2	
BD.3328	Tie Link (Short) for Hood Sticks		2	
BD.4733	Spring Arm at L.H. side of Hood Sticks		1	
BD.4734	Spring Arm at R.H. side of Hood Sticks		1	
BD.4730	Pivot Screw, attaching Hood Sticks to side of Body		2	
BD.4731	Distance Piece on Pivot Screws		2	
BD.541/12	Washer, Special, on Pivot Screws		2	
BD.3541	Toggle Clamp, securing Hood at each side of Windscreen		2	
BD.3542	Toggle Clamp, securing Hood at centre of Windscreen		1	
BD.4059	Fulcrum Pin, securing Toggle Clamp to Canopy Rail		3	
BD.3281	CANOPY RAIL ASSEMBLY, L.H. (TRIMMED IN MOHAIR)		1	
BD.3282	CANOPY RAIL ASSEMBLY, R.H. (TRIMMED IN MOHAIR)		1	
BD.4374	SEALING RUBBER INSIDE CHANNEL OF CANOPY RAIL (44" LONG)		1	
BD.3241	RETAINER, ON TONNEAU PANEL, SECURING HOOD		2	
BD.536/1	Stud, for fixing of Retainers		4	
AN.102/L	Nut on Studs		4	
C.723	Washer, Shakeproof, under Nuts		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8267	HOOD CLOTH ASSEMBLY (COMPLETE WITH BACK CURTAIN, BACKLIGHT AND FASTENERS)		1	
BD.4405	Backlight Assembly		1	
BD.3833	Fastener, "Durable Dot "		4	
BD.539/4	Screw, Self-Tapping, securing Fasteners		4	
BD.8240	Zip Fastener at bottom of Back Curtain (30" long)		1	
BD.8241	Zip Fastener at each side of Back Curtain (14" long)		2	
BD.568/1	Socket "Lift-the-Dot " on flap of Back Curtain		2	
BD.568/2	Clinch Plate securing Sockets		2	
BD.9567	Floating Hood Stick Assembly		1	
BD.8266	Stud, in Hood Stick, for "Lift-the-Dot " Fasteners		2	
BD.3823	Webbing over Hood Sticks (2" x 60")		2	
BD.4405	BACKLIGHT ASSEMBLY FOR HOOD CLOTH		1	
BD.8070	Glass only for Backlight		1	
2179	Rubber Buffer on Backlight Frame		4	
BD.3838	PIN BEADING, OVER HOOD CLOTH, ALONG CANOPY RAIL		1	
BD.8810	TONNEAU COVER ASSEMBLY		1	FITTED TO L.H. DRIVE CARS ONLY at Chassis No. 810001 to 810475.
BD.8811	TONNEAU COVER ASSEMBLY		1	FITTED TO R.H. DRIVE CARS ONLY at Chassis No. 800001 to 800008.
BD.568/1	Socket for "Lift-the-Dot " Fastener		3	
BD.568/2	Clinch Plate, securing Socket to Tonneau Cover		3	
BD.3565	Zip Fasteners on Tonneau Cover (34" long)		1	
BD.1749	Stud for "Lift-the-Dot " Fasteners		3	Fitted from Chassis No. 800001 to 800008. 810001 to 810475.

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10563	TONNEAU COVER ASSEMBLY		1	FITTED TO L.H. DRIVE CARS ONLY at Chassis No. 810476 to 810728.
BD.10564	TONNEAU COVER ASSEMBLY		1	FITTED TO R.H. DRIVE CARS ONLY at Chassis No. 800009 only.
BD.3833/1 BD.3833/2 BD.3565	Button for "Durable Dot" Fastener Socket securing Button to Tonneau Cover Zip Fastener on Tonneau Cover (34" long)		3 3 1	
BD.3833/3 BD.539/4	Stud for "Durable Dot" Fasteners Screw, Self-Tapping , securing Studs		3 3	} Fitted to Chassis No. 800009 only 810476 to 810728.
BD.10761	TONNEAU COVER ASSEMBLY		1	FITTED TO L.H. DRIVE CARS ONLY at Chassis No. 810729 and subs.
BD.10762	TONNEAU COVER ASSEMBLY		1	FITTED TO R.H. DRIVE CARS ONLY at Chassis No. 800010 and subs.
BD.568/1 BD.568/2 BD.3565	Socket for "Lift-the-Dot" Fastener Clinch Plate , securing Bracket to Tonneau Cover Zip Fastener on Tonneau Cover (34" long)		3 3 1	
BD.8266 AN.102/L C.723	Stud for "Lift-the-Dot" Fasteners Nut on Studs Washer , Shakeproof, under Nuts		3 3 3	} Fitted to Chassis No. 810729 and subs. 800010 and subs.
BD.8812	SIDE CURTAIN ASSEMBLY, FOR L.H. DOOR		1	
BD.8813	SIDE CURTAIN ASSEMBLY, FOR R.H. DOOR		1	
BD.10540 BD.10541 BD.8998 BD.8999 BD.10542 BD.8996 BD.8997	Frame Assembly for L.H. Side Curtain Frame Assembly for R.H. Side Curtain Glass Frame Assembly for L.H. Side Curtain Glass Frame Assembly for R.H. Side Curtain Glass only for Side Curtains Fixing Rod Assembly for L.H. Side Curtain Fixing Rod Assembly for R.H. Side Curtain		1 1 1 1 2 1 1	
C.2025/1 BD.532/2 C.2025/4 C.4549/3	Screw, Set , around Side Curtain Frame Washer, Cup , on Setscrews Screw, Set , around Side Curtain Frame Screw, Set , around Side Curtain Frame		2 2 8 22	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10956	SATCHEL ASSEMBLY FOR STOWAGE OF SIDE CURTAINS WHEN NOT IN USE		1	
BD.10955	Strap for fastening Satchel		1	
BD.1286/1	Button , "Durable Dot," on Strap		1	
BD.1286/2	Socket , securing Button to Strap		1	
BD.3834/1	Stud , on Satchel, for Fastener		1	
BD.3834/2	Eyelet , securing Stud to Satchel		1	
BD.3429	KNOB, SECURING SIDE CURTAINS TO DOORS		4	
BD.3428	Escutcheon , behind Knobs		4	
C.2027/1	Screw, Set , securing Escutcheons		8	
BD.9544	CASING ASSEMBLY AT L.H. SIDE OF SCUTTLE		1	
BD.9545	CASING ASSEMBLY AT R.H. SIDE OF SCUTTLE		1	
BD.539/4	Screw, Self-Tapping , securing Scuttle Side Casings		12	
BD.532/1	Cup Washers on Screws		12	
BD.9549	CASING ASSEMBLY AT TOP OF SCUTTLE		1	FOR L.H. DRIVE CARS ONLY.
BD.9547	CASING ASSEMBLY AT TOP OF SCUTTLE		1	FOR R.H. DRIVE CARS ONLY.
BD.539/1	Screw, Self-Tapping , securing Scuttle Top Casing		11	
BD.532/1	Cup Washer on Screws		11	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9552	CASING ASSEMBLY UNDER SCREEN PANEL		1	
BD.539/4 BD.532/1	Screw, Self-Tapping, securing Screen Panel Casing Cup Washer on Screws		14 14	
BD.9546	CASING ASSEMBLY ENCLOSING BOTTOM OF INSTRUMENT PANEL		1	
BD.539/1 BD.532/1	Screw, Self-Tapping, securing Casing Cup Washer on Screws		4 4	
BD.9098	BRACKET, UPPER, SUPPORTING STEERING COLUMN		1	
NS.131/4D C.725	Screw, Set, securing Bracket Washer, Shakeproof, on Setscrews		2 2	
C.4389	FRONT NUMBER PLATE		1	
NS.125/4D FW.104/T NN.125/L C.724	Screw, Set, securing Front Number Plate Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2	
BD.9932	PANEL ASSEMBLY FOR ATTACHMENT OF REAR NUMBER PLATE		1	
NS.125/4D FW.104/T C.724	Screw, Set, securing Panel to Body and Number Plate to Panel Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		8 8 8	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9932/1	PIPING BETWEEN REAR NUMBER PLATE PANEL AND BODY (33" LONG)		1	STATE COLOUR OF BODY WHEN ORDERING.
BD.9945	BEADING (CHROMIUM PLATED) AT TOP OF REAR NUMBER PLATE PANEL		1	
BD.10039	Clip Assembly, securing Beading to Number Plate Panel		5	
C.2945	REAR NUMBER PLATE		1	NOT REQUIRED FOR U.S.A. AND CANADA.
C.1107	LICENCE HOLDER		1	
TOOL FIXINGS				
BD.3431	Clip, securing Jack		1	ALTERNATIVE TO BD.6811.
BD.6811	Clip and Bracket Assembly, securing Jack		1	
BD.3527	Rubber Socket, housing end of Jack		1	
BD.3535	Clip, securing Rubber Socket for Jack		1	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		See remark	3 required when BD.3431 is used. 6 required when BD.6811 is used.
C.5217	Strap around Jack		1	
BD.1501/2	Woodscrew, securing Strap to Spare Wheel Lid		2	
BD.531/2	Cup Washer on Woodscrews		2	
BD.10760	Pad (Foam Rubber) on Spare Wheel Lid, for Jack		1	
BD.3432	Clip, securing Jack Ratchet		2	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	} NOT REQUIRED WHEN WIRE SPOKE ROAD WHEELS ARE FITTED. Fitted from Chassis No. 800001 to 800048. 810001 to 811526. Fitted to Chassis No. 800049 and subs. 811527 and subs.
BD.2385	Clip, securing Wheelbrace		4	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.5211	Clip, securing Grease Gun		2	
BD.3430	Clip, securing Grease Gun		2	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.3438	Clip, securing Budget Key		2	
BD.711/3	Screw, Self-Tapping, securing Clips to Cowl around Petrol Filler Neck		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
SD.1036	BODY MOUNTINGS PACKAGE		1	
BD.6635	Packing at mounting of Chassis to Door Sills		4	
BD.2070	Packing Washer (Fibre) at mounting of Chassis to Door Sills		As req'd	
NS.137/14D	Screw, Set, securing Door Sills to Chassis		4	
BD.541/14	Special Washer on Setscrews		4	
C.3968/3	Nut, Self-Locking, on Setscrews		4	
FW.106/T	Washer, Plain, under Nuts		4	
BD.4548/1	Alum Packing at mounting of Chassis to Dash		As req'd	
BD.4548/2	Alum Packing at mounting of Chassis to Dash		As req'd	
NS.137/8D	Screw, Set, securing Dash to Chassis		2	
FW.106/T	Washer, Plain, on Setscrews		2	
C.726	Washer, Shakeproof, on Setscrews		2	
BD.6626	Alum Pad at mounting of Chassis to Luggage Compartment		2	
NS.131/16D	Screw, Set, securing Body to Chassis at Luggage Compartment		2	
C.1904	Special Washer, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		2	
BD.6626	Alum Pad at mounting of Chassis to Rear End of Body		4	
BD.2070	Packing Washer (Fibre) at mounting of Chassis to Rear End of Body		As req'd	
BD.6635	Packing at mounting of Chassis to Rear End of Body		As req'd	
NB.137/30D	Bolt, securing Rear End of Body to Chassis		2	
NB.137/32D	Bolt, securing Rear End of Body to Chassis		2	
C.3968/3	Nut, Self-Locking, on Bolts		4	
FW.106/T	Washer, Plain, under Nuts		8	
C.5647	Rubber Plug in mounting holes inside Luggage Compartment		4	
BD.1493/2	Screw, Set, securing Floor to Chassis		2	
FW.104/T	Washer, Plain, on Setscrews		2	
C.724	Washer, Shakeproof, on Setscrews		2	
BD.10280	Felt, 3" × 45", for packing between Door Sills and Chassis		2	
BD.3743	Felt, 12" × 22", for packing between Door Sills and Chassis		2	

THE FOLLOWING DETAILS ARE SPECIAL EQUIPMENT ITEMS WHICH ARE SUPPLIED ONLY WHEN SPECIALLY ORDERED.

BD.4470	L.H. RACING SCREEN ASSEMBLY, COMPLETE		1	
BD.4471	R.H. RACING SCREEN ASSEMBLY, COMPLETE		1	

NOTE : BD. 4470 and BD.4471 comprise Screen Assembly, Cowlings and fittings.

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
SPECIAL EQUIPMENT ITEMS (continued)				
BD.4289	RACING SCREEN ASSEMBLY		2	
BD.4290	Frame only (complete with Pivots)		2	
BD.4294	Glass only for Racing Screen		2	
BD.3071/2	Everseal between Glass and Frame ($1\frac{1}{2}'' \times .078'' \times 17''$)		2	
BD.4295	SUPPORT, INNER, FOR RACING SCREENS		2	
BD.4296	SUPPORT, OUTER, FOR RACING SCREENS		2	
FS.104/4D	Screw , Set, securing Supports		8	
FW.104/T	Washer , Plain, on Setscrews		8	
C.724	Washer , Shakeproof, on Setscrews		8	
BD.4298	WING NUT FOR ADJUSTMENT OF RACING SCREENS		2	
BD.541/11	Washer , Plain, under Wing Nuts		2	
BD.4299	COWLING ASSEMBLY, MOUNTING L.H. RACING SCREEN		1	
BD.4300	COWLING ASSEMBLY, MOUNTING R.H. RACING SCREEN		1	
FS.104/5D	Screw , Set, securing Cowlings		8	
FW.104/T	Washer , Plain, on Setscrews		8	
1861	Washer , Special, on Setscrews		8	
FN.104/L	Nut on Setscrews		8	
C.724	Washer , Shakeproof, under Nuts		8	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
SPECIAL EQUIPMENT ITEMS (continued)				
BD.6229	COWL FOR 3" HIGH MIRROR (WHEN RACING SCREENS ARE FITTED)		1	} FOR R.H. DRIVE CARS ONLY.
BD.6230	COWL FOR 4½" HIGH MIRROR (WHEN RACING SCREENS ARE FITTED)		1	
BD.6231	COWL FOR 3" HIGH MIRROR (WHEN RACING SCREENS ARE FITTED)		1	} FOR L.H. DRIVE CARS ONLY.
BD.6232	COWL FOR 4½" HIGH MIRROR (WHEN RACING SCREENS ARE FITTED)		1	
BD.539/4	Screw, Self-Tapping, securing Mirror Cowl		6	
BD.6233	COWL OVER L.H. SCREEN PILLAR APERTURE		1	
BD.6234	COWL OVER R.H. SCREEN PILLAR APERTURE		1	
BD.539/4	Screw, Self-Tapping, securing Cowls over Screen Pillar apertures		8	
BD.10973	L.H. COMPETITION SEAT ASSEMBLY, COMPLETE		1	
BD.10974	R.H. COMPETITION SEAT ASSEMBLY, COMPLETE		1	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
SPECIAL EQUIPMENT ITEMS (continued)				
BD.10965	FRAME ASSEMBLY FOR COMPETITION SEATS		2	
BD.10957	Spring Latch, at back of Seat Frame, securing Seats to Floor		4	
NS.519/8H	Screw, Set, securing Spring Latches		8	
AW.102/T	Washer, Plain, on Setscrews		8	
NN.119/L	Nut on Setscrews		8	
C.723/A	Washer, Shakeproof, under Nuts		8	
BD.10963	ATTACHMENT FRAME ASSEMBLY FOR L.H. COMPETITION SEAT		1	
BD.10964	ATTACHMENT FRAME ASSEMBLY FOR R.H. COMPETITION SEAT		1	
BD.10958	Peg for Spring Latches		4	
AW.102/T	Washer, Plain, on Pegs		4	
AN.102/L	Nut, securing Pegs to Attachment Frames		4	
C.723	Washer, Shakeproof, under Nuts		4	
BD.3258	Lever, for adjustment of L.H. Seat		1	
BD.3259	Lever, for adjustment of R.H. Seat		1	
FW.104/C	Washer, on Pivot Pins		2	
BD.6624/2	Pivot Pin, securing Levers to Frame		2	
FW.104/T	Washer, on Pivot Pins		2	
L.102/6U	Pin, Split, securing Pivot Pins		2	
C.3317	Spring for return of Levers		2	
NB.325/9D	Bolt, securing Seat Frame to Hinges on Attachment Frame		12	
FW.104/T	Washer, Plain, on Bolts		12	
NN.125/L	Nut on Bolts		12	
C.724	Washer, Shakeproof, under Nuts		12	
BD.7804	CUSHION FOR COMPETITION SEATS		2	
BD.8816/7	SEAT RUNNER (COMPRISING 1 PLAIN AND 1 SLOTTED RUNNER PER SET)		4	
BD.9606	Packing Assembly under Seat Runners		4	
NS.525/6H	Screw, Set, securing Outer Runners to Floor		4	
NS.525/10H	Screw, Set, securing Inner Runners to Floor		4	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
SPECIAL EQUIPMENT ITEMS (continued)				
FS.504/4H	Screw, Set, securing Runners to Seats		8	
FN.104/L	Nut on Setscrews		8	
C.724	Washer, Shakeproof, under Nuts		8	
BD.6244	Tapped Plate, under Floor, for fixing of Competition Seats		4	
NS.525/5H	Screw, Set, Inner, securing Tapped Plates		4	
NS.525/2H	Screw, Set, Outer, securing Tapped Plates		4	
BD.5179/1	Screw, Set, filling redundant holes on Floor when Competition Seats are fitted		12	
BD.11275	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN REAR WHEEL COVERS ARE TO BE FITTED ON CARS WITH WIRE SPOKE ROAD WHEELS.
BD.11276	R.H. REAR WING ASSEMBLY		1	
BD.6615	Mounting Bracket Assembly (complete with Spring for "DZUS" Fastener)		2	
BD.6615	MOUNTING BRACKET ASSEMBLY, ON REAR WINGS, FOR "DZUS" FASTENERS		2	
BD.6596	Spring, receiving "DZUS" Fasteners on Rear Wheel Covers		2	
BD.6600/1	Rivet, securing "DZUS" Springs to Mounting Brackets		4	
BD.11267	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WITH BD.11275 AND BD.11276 REAR WINGS AND WIRE SPOKE ROAD WHEELS.
BD.11268	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.6616	"DZUS" Fastener on Rear Wheel Covers		2	
BD.6617	Grommet, securing "DZUS" Fasteners to Rear Wheel Covers		2	

BODY AND FITTINGS—OPEN CARS

Part No.	Description	Plate No.	No. per Unit	Remarks
----------	-------------	-----------	--------------	---------

SPECIAL EQUIPMENT ITEMS *(continued)*

C.11550	RACK FOR EXTERNAL LUGGAGE ON LUGGAGE COMPARTMENT LID		1	
---------	---	--	---	--

NOTE: Luggage Rack supplied complete with all fittings.

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8818	BODY SHELL ASSEMBLY		1	L.H. DRIVE ONLY
BD.8819	BODY SHELL ASSEMBLY		1	R.H. DRIVE ONLY
BD.8371	Face Panel Assembly for L.H. Shut Pillar		1	
BD.8372	Face Panel Assembly for R.H. Shut Pillar		1	
BD.7990/2	Extension for Shut Face Panel		2	
BD.10261	Closing Plate for L.H. Shut Pillar		1	
BD.10262	Closing Plate for R.H. Shut Pillar		1	
BD.9317	Sealing Plate Assembly for L.H. Shut Pillar		1	
BD.10236	Sealing Plate Assembly for R.H. Shut Pillar		1	
BD.10585	Cover Plate for Door Sills		2	
BD.7111/1	Screw, Self-Tapping, securing Cover Plates		4	
BD.8317	Dash Assembly, complete		1	L.H. DRIVE ONLY WHEN AUTO TRANSMISSION NOT FITTED
BD.8318	Dash Assembly, complete		1	R.H. DRIVE ONLY WHEN AUTO TRANSMISSION NOT FITTED
BD.11104	Dash Assembly, complete		1	L.H. DRIVE ONLY WHEN FITTED WITH AUTOMATIC TRANSMISSION
BD.11105	Dash Assembly, complete		1	R.H. DRIVE ONLY WHEN FITTED WITH AUTOMATIC TRANSMISSION
BD.8589	Bracket, for mounting of Headlamp Dipper Switch		1	
BD.9924	Front End Assembly		1	
BD.8745	L.H. Front Wing Assembly		1	
BD.8746	R.H. Front Wing Assembly		1	
BD.8329	Valance Assembly at forward end of L.H. Front Wing		1	
BD.8330	Valance Assembly at forward end of R.H. Front Wing		1	
BD.8965	Felt Strip on forward Wing Valances (1½" × ¼" × 19" long)		2	
BD.8331	Valance Extension Assembly at rear of L.H. Front Wing		1	
BD.8332	Valance Extension Assembly at rear of R.H. Front Wing		1	
BD.9127	Cover Plate, on R.H. Valance, giving access to Air Cleaner		1	
BD.5824/2	Screw, Set, securing Cover Plate		3	
BD.5179/2	Screw, Set, securing Cover Plate		5	
BD.4674/2	Clinch Nut for Setscrews		3	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.8693	Support Assembly at forward end of L.H. Front Wing		1	
BD.8695	Bracket Assembly, on L.H. Support, for attachment of Valance Extension		1	
BD.8694	Support Assembly, at forward end of R.H. Front Wing		1	
BD.8696	Bracket Assembly, on R.H. Support, for attachment of Valance Extension		1	
BD.8403	Tie Bar between Front Wing Supports		1	
BD.8401	Diaphragm Assembly between rear of L.H. Front Wing and Dash		1	} Fitted from Chassis No. 807001 to 807051, 817001 to 817274. then superseded by BD.10569 and BD.10570. Supersedes BD.8401 and 8402 at Chassis No. 807052 and subs. 817275 and subs.
BD.8402	Diaphragm Assembly between rear of R.H. Front Wing and Dash		1	
BD.10569	Diaphragm Assembly between rear of L.H. Front Wing and Dash		1	
BD.10570	Diaphragm Assembly between rear of R.H. Front Wing and Dash		1	
BD.3551	Steady for Front Wing		1	R.H. DRIVE CARS ONLY.
BD.3552	Steady for Front Wing		1	L.H. DRIVE CARS ONLY.
BD.3553	Bracket for attachment of Front Wing Steady		2	
FS.104/5D	Screw, Set, securing Steady to Brackets		2	
BD.542/3	Washer, Special, on Setscrews		2	
FN.104/L	Nut on Setscrews		2	
C.724	Washer, Shakeproof, under Nuts		2	
BD.5183	Ventilator Box Assembly in L.H. Front Wing		1	
BD.5184	Ventilator Box Assembly in R.H. Front Wing		1	
BD.5127	Hinge Assembly for L.H. Ventilator		1	
BD.5128	Hinge Assembly for R.H. Ventilator		1	
BD.9923	Rear End Assembly		1	
BD.9588	Cross Member Assembly for Tonneau		1	
BD.9357	Gutter Assembly around Boot Lid aperture		1	
BD.6701	Support for L.H. side of Tonneau		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BODY SHELL ASSEMBLY (continued)				
BD.6702	Support for R.H. side of Tonneau		1	
BD.6709	Support for centre of Tonneau		1	
BD.8928	Parcel Tray below Tonneau Panel		1	
BD.10547	Finisher Assembly for Parcel Tray		1	
BD.6705	Panel, L.H. Rear Quarter		1	
BD.6706	Panel, R.H. Rear Quarter		1	
BD.6764	Support Assembly for L.H. Rear Quarter Panel		1	
BD.6765	Support Assembly for R.H. Rear Quarter Panel		1	
BD.10634	Panel Assembly, lining L.H. Rear Quarter		1	
BD.10635	Panel Assembly, lining R.H. Rear Quarter		1	
BD.8475	L.H. Rear Seat Pan Assembly		1	
BD.8476	R.H. Rear Seat Pan Assembly		1	
BD.10640	Boot Lid Shell Assembly		1	Fitted from Chassis No. 807001 to 807004. 817001 to 817090.
BD.10584	Boot Lid Shell Assembly		1	Fitted to Chassis No. 807005 and subs. 817091 and subs.
BD.9397	Petrol Filler Box Assembly		1	
BD.8134	Fixing Plate Assembly for Petrol Filler Lid		1	
BD.4358	Hinge Assembly for Petrol Filler Lid		1	
BD.9428	Bonnet Assembly		1	
BD.9402	Rear Wing Assembly, L.H.		1	} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.9403	Rear Wing Assembly, R.H.		1	
BD.9516	Rear Wing Assembly, L.H.		1	} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.9517	Rear Wing Assembly, R.H.		1	
BD.6194	Steady for L.H. Rear Wing		1	
BD.6195	Steady for R.H. Rear Wing		1	
BD.4449	Cover Assembly for L.H. Rear Wing		1	} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.4450	Cover Assembly for R.H. Rear Wing		1	
BD.7769	Moulding on L.H. Rear Wing		1	} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.7770	Moulding on R.H. Rear Wing		1	
BD.8371	FACE PANEL ASSEMBLY FOR L.H. SHUT PILLAR		1	
BD.8372	FACE PANEL ASSEMBLY FOR R.H. SHUT PILLAR		1	
2310/1	Striker for L.H. Door Lock		1	
2311/1	Striker for R.H. Door Lock		1	
BD.443/1	Packing for Strikers (20 s.w.g.)		As req'd	
BD.443/2	Packing for Strikers (14 s.w.g.)		As req'd	
BD.5750	Tapped Plate for fixing of Strikers		2	
BD.5031	Retainer for L.H. Door Lock Striker		1	
BD.5032	Retainer for R.H. Door Lock Striker		1	
BD.1491/1	Screw, Set, securing Strikers		8	
BD.9317	SEALING PLATE ASSEMBLY FOR L.H. SHUT PILLAR		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10236	SEALING PLATE ASSEMBLY FOR R.H. SHUT PILLAR		1	
BD.9317/4	Seal (Sponge Rubber) on Sealing Plates ($\frac{1}{4}$ " \times $1\frac{3}{8}$ " \times 27")		2	
BD.8317	DASH ASSEMBLY, COMPLETE		1	FOR L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.8318	DASH ASSEMBLY, COMPLETE		1	FOR R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.8320	Panel Assembly for Dash Front		1	FOR L.H. DRIVE CARS ONLY. FOR R.H. DRIVE CARS ONLY.
BD.8321	Panel Assembly for Dash Front		1	
BD.9281	Panel Assembly for Clutch Housing		1	
BD.8322	Beam Panel Assembly		1	
BD.8389	Support for rear L.H. side of Beam Panel		1	
BD.8390	Support for rear R.H. side of Beam Panel		1	
BD.8393	Tie Plate Assembly for Beam Panel		1	
BD.8323	Heater Box , rear portion		1	
BD.8512	Side Structure Assembly for Dash		2	
BD.8555	Closing Panel from L.H. Wing to Dash		1	
BD.8556	Closing Panel from R.H. Wing to Dash		1	
BD.5603	Mounting Plate Assembly for Door Hinges		4	
BD.4555	Shim for Lower Door Hinges		As req'd	} SELECTIVE THICKNESSES.
BD.4701/1	Shim for Upper Door Hinges (20 s.w.g.)		As req'd	
BD.4701/2	Shim for Upper Door Hinges (14 s.w.g.)		As req'd	
FS.104/5D	Screw, Set , securing Mounting Plates to Dash Structure		16	
FN.104/L	Nut on Setscrews		16	
C.724	Washer , Shakeproof, under Nuts		16	
BD.4379	Hinge Assembly for Bonnet		2	
FS.104/4D	Screw, Set , securing Bonnet Hinges to Dash		8	
FW.104/T	Washer , Plain, on Setscrews		8	
C.724	Washer , Shakeproof, on Setscrews		8	
BD.11104	DASH ASSEMBLY, COMPLETE		1	FOR L.H. DRIVE CARS FITTED WITH AUTOMATIC TRANSMISSION.
BD.11105	DASH ASSEMBLY, COMPLETE		1	FOR R.H. DRIVE CARS FITTED WITH AUTOMATIC TRANSMISSION.
BD.10751	Panel Assembly for Dash Front		1	FOR L.H. DRIVE CARS ONLY. FOR R.H. DRIVE CARS ONLY.
BD.10752	Panel Assembly for Dash Front		1	
BD.10719	Panel Assembly for Clutch Housing		1	
BD.11056	Beam Panel Assembly		1	FOR L.H. DRIVE CARS ONLY. FOR R.H. DRIVE CARS ONLY.
BD.11140	Beam Panel Assembly		1	
BD.8389	Support for rear L.H. side of Beam Panel		1	
BD.8390	Support for rear R.H. side of Beam Panel		1	
BD.8393	Tie Plate Assembly for Beam Panel		1	
BD.8323	Heater Box , rear portion		1	
BD.8512	Side Structure Assembly for Dash		1	
BD.8555	Closing Panel from L.H. Wing to Dash		1	
BD.8556	Closing Panel from R.H. Wing to Dash		1	
BD.5603	Mounting Plate Assembly for Door Hinges		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
DASH ASSEMBLY COMPLETE (cont'd)				
BD.4555	Shim for Lower Door Hinges		As req'd	} SELECTIVE THICKNESSES.
BD.4701/1	Shim for Upper Door Hinges (20 s.w.g.)		As req'd	
BD.4701/2	Shim for Upper Door Hinges (14 s.w.g.)		As req'd	
FS.104/5D	Screw, Set, securing Mounting Plates to Dash Structure		16	
FN.104/L	Nut on Setscrews		16	
C.724	Washer, Shakeproof, under Nuts		16	
BD.4379	Hinge Assembly for Bonnet		2	
FS.104/4D	Screw, Set, securing Bonnet Hinges to Dash		8	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.8022	WINDSCREEN APERTURE PANEL ASSEMBLY		1	
BD.7986	DRIP BEAD ON L.H. WINDSCREEN PILLAR		1	
BD.7987	DRIP BEAD ON R.H. WINDSCREEN PILLAR		1	
BD.1814/2	Pop Rivet, securing Drip Beads to Windscreen Pillars		14	
BD.8320	FRONT PANEL ASSEMBLY FOR DASH		1	FOR L.H. DRIVE CARS NOT FITTED WITH AUTOMATIC TRANSMISSION
BD.8321	FRONT PANEL ASSEMBLY FOR DASH		1	FOR R.H. DRIVE CARS NOT FITTED WITH AUTOMATIC TRANSMISSION
BD.9121	Support Bracket, L.H., for Steering Column		1	
BD.9122	Support Bracket, R.H., for Steering Column		1	
BD.4753	Heater Box, front portion		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8393	TIE PLATE ASSEMBLY FOR BEAM PANEL		1	
BD.10055	Bracket Assembly for Bonnet Lock Control		1	
BD.9924	FRONT END ASSEMBLY		1	
BD.9124	Dash Top Assembly		1	
BD.8745	Front Wing Assembly, L.H.		1	
BD.8746	Front Wing Assembly, R.H.		1	
BD.2489	Fairing Panel		1	
BD.8333	Face Plate, on L.H. Front Wing, for Door Hinges		1	
BD.8334	Face Plate, on R.H. Front Wing, for Door Hinges		1	
BD.1814/2	Rivet, Pop, securing Face Plates to Wings		16	
BD.9124	DASH TOP ASSEMBLY		1	
BD.4140	Front Panel		1	
BD.9124/1	Shroud Panel		1	
BD.8745	L.H. FRONT WING ASSEMBLY		1	
BD.8746	R.H. FRONT WING ASSEMBLY		1	
BD.8697	Container, on L.H. Front Wing, for Headlamp Light Unit		1	
BD.8698	Container, on R.H. Front Wing, for Headlamp Light Unit		1	
C.7284	Casing, on Front Wings, for Side Lamps		2	
BD.8626	Valance Assembly, along top of L.H. Front Wing		1	
BD.8627	Valance Assembly, along top of R.H. Front Wing		1	
BD.2561	Motif, at top of Headlamp Containers		2	
BD.2563/1	Screw, Set (Special), securing Motifs		4	
FW.105/T	Washer, Plain, on Setscrews		8	
AW.105/T	Washer, Plain, on Setscrews		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8695	BRACKET ASSEMBLY, UNDER L.H. FRONT WING, FOR ATTACHMENT OF WING SUPPORT		1	
BD.8696	BRACKET ASSEMBLY, UNDER R.H. FRONT WING, FOR ATTACHMENT OF WING SUPPORT		1	
NS.125/4D	Screw, Set, securing Brackets to Front Wings through Headlamp Containers		12	
FW.104/T	Washer, Plain, on Setscrews		24	
NN.125/L	Nut on Setscrews		12	
C.724	Washer, Shakeproof, under Nuts		12	
BD.8693	SUPPORT ASSEMBLY, UNDER L.H. FRONT WING		1	
BD.8694	SUPPORT ASSEMBLY, UNDER R.H. FRONT WING		1	
BD.2070	Washer, Kautex, between Front Wing Supports and Attachment Brackets		As req'd	
NS.131/9D	Screw, Set, securing Supports to Attachment Brackets		4	NOTE :—If more than 4 Kautex Washers are fitted, use Setscrews NS.131/12D.
FW.105/T	Washer, Plain, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		4	
NB.131/8D	Bolt, securing Supports to Chassis		4	
FW.105/T	Washer, Plain, on Bolts		8	
NN.131/L	Nut on Bolts		4	
C.725	Washer, Shakeproof, under Nuts		4	
BD.8403	TIE BAR ASSEMBLY BETWEEN FRONT WINGS		1	
NB.131/15D	Bolt, securing Tie Bar to Wing Supports		4	
NB.131/26D	Bolt, securing Tie Bar to Wing Supports		4	
BD.8701	Distance Piece on Bolts		8	
FW.105/T	Washer, Plain, on Bolts		12	
NN.131/L	Nut on Bolts		8	
C.725	Washer, Shakeproof, on Bolts		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8626	VALANCE ASSEMBLY ALONG TOP OF L.H. FRONT WING		1	
BD.8399	Support between L.H. Front Wing and Chassis Frame		1	
BD.8627	VALANCE ASSEMBLY ALONG TOP OF R.H. FRONT WING		1	
BD.8400	Support between R.H. Front Wing and Chassis Frame		1	
BD.8329	VALANCE ASSEMBLY AT FORWARD END OF L.H. FRONT WING		1	
BD.8330	VALANCE ASSEMBLY AT FORWARD END OF R.H. FRONT WING		1	
BD.8965	Felt ($1\frac{1}{2} \times \frac{1}{4} \times 19$) on front face of Forward Wing Valance, for mounting of Radiator		2	
NS.125/4D	Screw , Set, securing Forward Valances to Wing Supports		2	
FW.104/T	Washer , Plain, on Setscrews		4	
NN.125/L	Nut on Setscrews		2	
C.724	Washer , Shakeproof, under Nuts		2	
BD.8331	VALANCE EXTENSION AT REAR OF L.H. FRONT WING		1	FOR L.H. DRIVE CARS ONLY.
BD.8332	VALANCE EXTENSION AT REAR OF R.H. FRONT WING		1	FOR R.H. DRIVE CARS ONLY.

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9127	COVER PLATE, UNDER R.H. FRONT WING, GIVING ACCESS TO AIR CLEANER		1	
C.5824/2	Screw, Set, securing Cover Plate		3	
BD.4674/2	Clinch Nut for Setscrews		3	
BD.5179/2	Screw, Set, securing Cover Plate		5	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.8401	DIAPHRAGM ASSEMBLY BETWEEN REAR OF L.H. FRONT WING AND DASH		1	Fitted from Chassis No. 807001 to 807051. 817001 to 817274. Then superseded by BD.10569 and BD.10570.
BD.8402	DIAPHRAGM ASSEMBLY BETWEEN REAR OF R.H. FRONT WING AND DASH		1	
BD.10524/2	Sponge Rubber, between edge of Diaphragm and Wing (24" long)		2	
BD.10524/3	Sponge Rubber, between edge of Diaphragm and Wing (14½" long)		2	
BD.10569	DIAPHRAGM ASSEMBLY BETWEEN REAR OF L.H. FRONT WING AND DASH		1	SUPERSEDE BD.8401 AND BD.8402.
BD.10570	DIAPHRAGM ASSEMBLY BETWEEN REAR OF R.H. FRONT WING AND DASH		1	
BD.10704/1	Sponge Rubber, between edge of Diaphragm and Wing (½" × 1⅜" × 40")		2	
BD.5188	VENTILATOR DOOR ASSEMBLY IN FRONT WINGS		2	
AN.102/L	Nut, securing Door to Hinge Plate		6	
AW.102/T	Washer, Plain, under Nuts		6	
C.723	Washer, Shakeproof, under Nuts		6	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.5190	SEAL FOR WING VENTILATOR DOORS		2	
BD.5189	GAUZE ASSEMBLY ON WING VENTILATOR DOORS		2	
BD.711/6	Screw, Self-Tapping, securing Gauze to Doors		4	
BD.5183	VENTILATOR BOX ASSEMBLY IN L.H. FRONT WING		1	
BD.5184	VENTILATOR BOX ASSEMBLY IN R.H. FRONT WING		1	
BD.5127	Hinge Assembly on L.H. Ventilator Box		1	
BD.5128	Hinge Assembly on R.H. Ventilator Box		1	
BD.648	Spring Plunger on Hinges		2	
R.303/5W	Rivet , securing Plungers		2	
C.3350	Washer (Brass) at each side of Plunger		4	
BD.650	Loose Head for end of Rivets (WB.9223/V.68)		2	
AS.502/3H	Screw, Set , securing Hinge to Ventilator Box		6	
AN.102/L	Nut on Setscrews		6	
AG.102/X	Washer , Spring, under Nuts		6	
BD.5176	Spring , Tension, for Ventilator Doors		2	
BD.5125	Sleeve , housing Springs		2	
L.104/10U	Pin , Split, securing Sleeve to side of Ventilator Box		2	
C.3371	Slug , adjusting tension on Springs		2	
BD.3712/1	Adjusting Plate , between Hinge and Ventilator Door (.064" thick)		As req'd	} CHOOSE ADJUSTING PLATE OF DESIRED THICKNESS.
BD.3712/2	Adjusting Plate , between Hinge and Ventilator Door (.048" thick)		As req'd	
BD.37123	Adjusting Plate , between Hinge and Ventilator Door (.036" thick)		As req'd	
BD.3712/4	Adjusting Plate , between Hinge and Ventilator Door (.022" thick)		As req'd	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
C.4387	CAR HEATER ASSEMBLY		1	
C.4391	Sealing Rubber , on Pipes of Heater Unit		2	
FN.104/L	Nut , securing Heater Unit		3	
FW.104/T	Washer , Plain, on Studs of Heater Unit		3	
FG.104/X	Washer , Spring, under Nuts		3	
C.4392	VALVE, ON HEATER BOX UNDER BONNET, CONTROLLING WATER SUPPLY TO HEATER		1	
C.4393	Knob , operating Valve		1	
C.5233/1	Screw , Set, securing Knob to Valve Spindle		1	
C.4395	Bracket , for mounting of Valve		1	
BD.1492/1	Screw , Set, securing Bracket		1	
FG.104/X	Washer , Spring, on Setscrew		1	
C.8105	HEATER HOSE, FROM WATER MANIFOLD TO CONTROL VALVE		1	
C.4397	HEATER HOSE, FROM CONTROL VALVE TO HEATER UNIT		1	
C.4398	HEATER HOSE, FROM HEATER UNIT TO INTERMEDIATE PIPE		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8104	HEATER HOSE, FROM INTERMEDIATE PIPE TO FRONT RETURN PIPE		1	
C.2905/1	Clip, securing Hose to Control Valve, Intermediate Return Pipe, Front Return Pipe, Water Manifold and Heater Unit		6	
C.2905/2	Clip, securing Hose to Control Valve and Intermediate Return Pipe		2	
C.4400	INTERMEDIATE PIPE FOR CONNECTION OF HOSES BETWEEN CONTROL VALVE AND FRONT RETURN PIPE		1	
	NOTE: FOR HEATER CONNECTIONS ON ENGINE, SEE PAGE 12.			
NS.319/3H NN.119/L C.723/A	Screw, Set, securing Earth Lead for Heater Motor Nut on Setscrew Washer, Shakeproof, under Nut		1 1 1	
C.4543	RHEOSTAT SWITCH, OPERATING HEATER MOTOR (LUCAS 78262/B)		1	
DEMISTER CONNECTIONS BEHIND INSTRUMENT PANEL				
BD.6521	DEMISTER OUTLET ASSEMBLY FOR HEATER UNIT		1	
BD.711/1	Screw, Self Tapping, securing Outlet to Heater Unit		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9073	AIR DUCT AND BRACKET ASSEMBLY FOR L.H. SIDE OF WINDSCREEN		1	
BD.9074	AIR DUCT AND BRACKET ASSEMBLY FOR R.H. SIDE OF WINDSCREEN		1	
NS.131/4D C.725	Screw, Set, securing Air Duct Washer, Shakeproof, on Setscrews		2 2	
BD.5281/4	HOSE, 23" LONG, CONNECTING OUTLET TO L.H. AIR DUCT		1	
BD.5281/3	HOSE, 20" LONG, CONNECTING OUTLET TO R.H. AIR DUCT		1	
BD.6429	ESCUTCHEON, ON SHROUD PANEL, FOR DEMISTER AIR TO WINDSCREEN		2	
BD.8570	BATTERY BOX ASSEMBLY IN L.H. FRONT WING		1	R.H. DRIVE CARS ONLY.
BD.6596 R.102/4W	Spring, on Battery Box, for "DZUS" Fasteners Rivet, securing Springs		2 4	
BD.9065 C.5647	Rubber Pad ($\frac{1}{8}$ " \times $9\frac{1}{2}$ " \times 16") for Battery Seating Rubber Plug for Battery Box		1 1	R.H. DRIVE CARS ONLY.
BD.8572	DOOR FOR BATTERY BOX IN L.H. FRONT WING		1	R.H. DRIVE CARS ONLY.
BD.8580	"DZUS" Fastener on Battery Box Door (AW.6 $\frac{1}{2}$ -45)		2	
BD.8581	Grommet, securing "DZUS" Fasteners (GA.6 $\frac{1}{2}$ -375)		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
DOOR FOR BATTERY BOX (continued)				
BD.8583	Clip, on Battery Box Door		2	
BD.1814/2	Rivet, securing Clips		4	
BD.8582/1	Sealing Strip (Sponge Rubber $\frac{3}{16}$ " \times $\frac{1}{4}$ " \times 46" long) around Battery Box Door		1	
DOOR FOR BATTERY BOX ASSEMBLY IN R.H. FRONT WING				
BD.8571			1	L.H. DRIVE CARS ONLY.
BD.6596	Spring, on Battery Box, for "DZUS" Fasteners		2	
R.102/4W	Rivet, securing Springs		4	
BD.9066	Rubber Pad ($\frac{1}{8}$ " \times $9\frac{1}{2}$ " \times 16") for Battery Seating		1	L.H. DRIVE CARS ONLY.
C.5647	Rubber Plug for Battery Box		1	
DOOR FOR BATTERY BOX IN R.H. FRONT WING				
BD.8573			1	L.H. DRIVE CARS ONLY.
BD.8580	"DZUS" Fastener, on Battery Box Door (AW.6 $\frac{1}{2}$ -45)		2	
BD.8581	Grommet, securing "DZUS" Fasteners (GA.6 $\frac{1}{2}$ -375)		2	
BD.8583	Clip, on Battery Box Door		2	
BD.1814/2	Rivet, securing Clips		4	
BD.8582/1	Sealing Strip (Sponge Rubber $\frac{3}{16}$ " \times $\frac{1}{4}$ " \times 46" long) around Battery Box Door		1	
NS.125/5D	Screw, Set, for fixing of Battery Box		3	R.H. DRIVE CARS ONLY.
NS.125/4D	Screw, Set, for fixing of Battery Box		7	
FW.104/T	Washer, Plain, on Setscrews		8	
NN.125/L	Nut on Setscrews		10	
C.724	Washer, Shakeproof, under Nuts		10	
BD.542/3	Washer, Special, for Battery Box fixing		12	R.H. DRIVE CARS ONLY.
BRACKET ASSEMBLY SUPPORTING BATTERY BOX IN L.H. FRONT WING				
BD.8568			1	R.H. DRIVE CARS ONLY.
BRACKET ASSEMBLY SUPPORTING BATTERY BOX IN R.H. FRONT WING				
BD.8569			1	L.H. DRIVE CARS ONLY.
NS.131/5D	Screw, Set, securing Support Bracket		2	
NS.131/6D	Screw, Set, securing Support Bracket		2	
C.725	Washer, Shakeproof, on Setscrews		4	
BD.10291	Tapping Plate, for Support Bracket		1	
NS.131/6D	Screw, Set, for Tapping Plate		2	} R.H. DRIVE CARS ONLY.
FW.105/T	Washer, Plain, on Setscrews		2	
C.725	Washer, Shakeproof, on Setscrews		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9104	Steady Bracket , for Battery Box Mounting		1	
NS.125/5D	Screw , Set, securing Steady Bracket to Battery Box		1	
FW.104/T	Washer , Plain, on Setscrew		1	
NN.125/L	Nut on Setscrew		1	
C.724	Washer , Shakeproof, under Nut		1	
NS.131/4D	Screw , Set, securing Steady Bracket to Chassis Frame		1	
C.725	Washer , Shakeproof, on Setscrew		1	
BD.8710	CLAMP BRACKET ASSEMBLY SECURING BATTERY IN BOX		1	L.H. DRIVE CARS ONLY.
BD.8711	CLAMP BRACKET ASSEMBLY SECURING BATTERY IN BOX		1	R.H. DRIVE CARS ONLY.
BD.8679	Rod (Long) for fixing of Battery		1	
BD.8680	Rod (Short) for fixing of Battery		1	
NN.125/L	Nut , securing fixing Rods to Battery Box		4	
FW.104/T	Washer , Plain, under Nuts		2	
C.724	Washer , Shakeproof, under Nuts		2	
BD.8704	Barrel Nut , holding Battery in Box		2	
BD.10927	SHIELD ASSEMBLY, ON WING VALANCE, PROTECTING DISTRIBUTOR		1	} Fitted to Chassis No. 807096 and subs. 817389 and subs.
BD.3143	Felt , $\frac{1}{8}$ " \times 1" \times 15", for Shield		1	
BD.10928	BRACKET ASSEMBLY FOR MOUNTING OF DISTRIBUTOR SHIELD		2	} Fitted from Chassis No. 807096 and subs. 817389 and subs.
NS.125/5D	Screw , Set, for fixing of Distributor Shield		3	
C.724	Washer , Shakeproof, on Setscrews		3	
BD.542/3	Washer , Special, on Setscrews to Brackets		2	
FW.104/T	Washer , Plain, on Setscrew		1	
NN.125/L	Nut on Setscrew		1	
BD.8986/I	Screw , Set, securing Distributor Shield to Battery Box		1	
AW.102/T	Washer , Plain, on Setscrew		1	
NN.119/L	Nut on Setscrew		1	
C.723/A	Washer , Shakeproof, under Nut		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10248	PLINTH PANEL ASSEMBLY, BEHIND L.H. FRONT BUMPER BAR		1	} REQUIRED ONLY WHEN FOG LIGHTS ARE NOT FITTED.
BD.10249	PLINTH PANEL ASSEMBLY, BEHIND R.H. FRONT BUMPER BAR		1	
BD.9246	PLINTH PANEL ASSEMBLY, BEHIND L.H. FRONT BUMPER BAR		1	} FOR USE WHEN FOG LIGHTS ARE FITTED
BD.9247	PLINTH PANEL ASSEMBLY, BEHIND R.H. FRONT BUMPER BAR		1	
BD.8598	Piping, between Plinth Panels and Front Wings (19½" long)		2	
NS.125/5D	Screw, Set, securing Plinth Panels to Front Wings		8	
FW.104/T	Washer, Plain, on Setscrews		8	
NN.125/L	Nut on Setscrews		8	
C.724	Washer, Shakeproof, under Nuts		8	
BD.9292	Bracket, for attachment of Plinth Panels to Front Bumpers		6	
NN.125/L	Nut, securing Brackets to Bumpers		6	
FW.104/T	Washer, Plain, under Nuts		6	
C.724	Washer, Shakeproof, under Nuts		6	
BD.9301	Bolt (shouldered) securing Plinth Panels to Brackets		6	
BD.541/13	Washer, Special, under head of shouldered Bolts		6	
BD.4984	Washer (Rubber) between Brackets on Bumpers and Brackets on Plinth Panels		6	
NN.119/L	Nut, on shouldered Bolts		6	
BD.4983	Washer, Special, under Nuts		6	
BD.9238	FRONT BUMPER, COMPLETE (PYRENE D.98/07578)		1	
C.9751	Bar only, Front Bumper (70/90366)		1	
C.9754	Support Bracket at right-hand side of Front Bumper (70/51039)		1	
C.9752	Outrigger Bracket, connecting R.H. Support Bracket with Bumper (70/51042)		1	
C.9755	Support Bracket, at L.H. side of Front Bumper (70/51040)		1	
C.9753	Outrigger Bracket, connecting L.H. Support Bracket with Bumper (70/51041)		1	
BD.9874	Spacer, between Outrigger Bracket and Bumper (70/50992)		2	
BD.9871	Bolt, securing Outrigger Bracket to Bumper (70/50991)		2	
FW.206/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9756	Over Rider Assembly, on Bumper (70/90361)		2	
BD.9868/1	Beading, between Over Riders and Bumper (6½" long) (70/50881)		4	
FW.107/T	Washer, Plain, on Over Rider Studs		2	
NN.143/L	Nut, securing Over Riders to Bumper		2	
FG.107/X	Washer, Plain, under Nuts		1	
BD.9856	Panel, for mounting of Front Number Plate (70/50932)		1	
BD.9872	Distance Piece, between Front Number Plate Panel and Bumper (70/50962)		2	
BD.9869	Bolt, securing Number Plate Panel to Front Bumper (70/50945)		2	
FW.205/T	Washer, Plain, on Bolts		2	
NN.131/L	Nut on Bolts		2	
FG.105/X	Washer, Spring, under Nuts		2	
NS.150/12D	Setscrew, securing Front Bumper Supports to Chassis Frame		6	
FW.208/T	Washer, Plain, on Setscrews		6	
C.728	Washer, Shakeproof, on Setscrews		6	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9946	L.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
BD.9947	R.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
C.8896	Bar only, L.H. Rear Bumper (70/51136)		1	
C.8897	Bar only, R.H. Rear Bumper (70/51135)		1	
C.8586	Support Bracket for L.H. Rear Bumper (70/51031)		1	
C.8587	Outrigger Bracket, Inner, linking Outer Bracket to L.H. Support Bracket (70/51033)		1	
C.8588	Outrigger Bracket, Outer, connecting Bumper with L.H. Inner Outrigger Bracket (70/51035)		1	
C.8341	Support Bracket for R.H. Rear Bumper (70/51032)		1	
C.8342	Outrigger Bracket, Inner, linking Outer Bracket to R.H. Support Bracket (70/51034)		1	
C.8343	Outrigger Bracket, Outer, connecting Bumper with R.H. Inner Outrigger Bracket (70/51036)		1	
NB.131/8D	Bolt, at connection of Inner and Outer Outrigger Brackets		4	
NN.131/L	Nut on Bolts		4	
FG.105/X	Washer, Spring, under Nuts		4	
C.8344	Spacer, between Outrigger Brackets and Bumper (70/51018)		2	
BD.9871	Bolt, securing Outrigger Brackets to Bumpers (70/50991)		2	
FW.106/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut, on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9689	Over Rider Assembly on L.H. Rear Bumper (70/90362)		1	
C.8346	Over Rider Assembly on R.H. Rear Bumper (70/90363)		1	
BD.9868/1	Beading, at Inner edge of Over Riders (6$\frac{3}{8}$" long) (70/50881)		2	
BD.9868/2	Beading, at Outer edge of Over Riders (5$\frac{1}{8}$" long) (70/51044)		2	
C.8348	Bolt (Long) on Over Riders (70/51024)		2	
C.8349	Bolt (Short) on Over Riders (70/51023)		2	
C.8351	Spire Nut, securing Bolts to Over Riders (RM.59590)		4	
C.8347	Spacer, between Bumpers and Support Brackets (70/51017)		2	
FW.206/T	Washer, Plain, on Bolts		4	
NN.137/L	Nut, securing Over Riders and Support Brackets to Bumpers		4	
FG.106/X	Washer, Spring, under Nuts		4	
BD.10330	GROMMET, SEALING APERTURE IN REAR WINGS FOR REAR BUMPER OUTRIGGER BRACKETS		2	
BD.10331	GROMMET, SEALING APERTURE IN TONNEAU FOR REAR BUMPER SUPPORT BRACKETS		2	
NB.143/26D	Bolt, securing Rear Bumpers to Chassis Frame		6	
FW.107/T	Washer, Plain, on Bolts		6	
NN.143/L	Nut on Bolts		6	
C.727	Washer, Shakeproof, under Nuts		6	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9428	BONNET ASSEMBLY		1	
BD.9164	AIR DEFLECTOR PANEL AT L.H. SIDE OF RADIATOR GRILLE APERTURE		1	
BD.9165	AIR DEFLECTOR PANEL AT R.H. SIDE OF RADIATOR GRILLE APERTURE		1	
BD.8954	SOCKET ASSEMBLY, ON FRONT WING VALANCE, FOR USE WHEN BONNET PROP NOT IN USE		1	
BD.8691/1	Screw, Self Tapping, securing Socket to Front Wing Valance		2	
BD.8426	PROP ASSEMBLY HOLDING BONNET IN " OPEN " POSITION		1	
BD.9103	Pivot Pin, hingeing Prop to Front Wing Valance		1	
BD.1708/1	Washer, Double Coil Spring, on Pivot Pin		1	
FW.105/T	Washer, Plain, on Pivot Pin, behind Double Coil Spring Washer		1	
L.102/6U	Pin, Split, retaining Prop on Pivot Pin		1	
BD.3428	ESCUTCHEON, UNDER BONNET, PROVIDING SOCKET FOR PROP WHEN BONNET IN " OPEN " POSITION		1	
C.2010/1	Screw, Set, securing Escutcheon to Bonnet		2	
AN.103/L	Nut on Setscrews		2	
C.723	Washer, Shakeproof, under Nuts		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9213	MOULDING DOWN CENTRE OF BONNET		1	
BD.4919	Washer, Special, securing Moulding to Bonnet		11	
AW.102/T	Washer, Plain, on Bolts		11	
NN.116/L	Nut on Bolts		11	
C.722	Washer, Shakeproof, under Nuts		11	
BD.4379	HINGE ASSEMBLY FOR BONNET		2	NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10201	HINGE ASSEMBLY FOR BONNET		2	} FOR USE WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10707	Shim, between Bonnet Hinge and Bracket	As req'd	18	
NS.125/4D	Screw, Set, securing Hinges		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	
BD.4616	BUFFER, IN FLANGE OF FRONT WINGS, FOR BONNET REST		6	
BD.8428	MOUNTING PLATE ASSEMBLY FOR BONNET CATCH		1	
NS.125/6D	Screw, Set, securing Mounting Plate to Bumper Support		3	
NN.125/L	Nut on Setscrews		3	
C.724	Washer, Shakeproof, under Nuts		3	
BD.2950	BONNET CATCH ASSEMBLY		1	
BD.2952	Guide Plate for Bonnet Catch		1	
NS.125/4D	Screw, Set, securing Bonnet Catch		3	
C.724	Washer, Shakeproof, on Setscrews		3	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8432	HOOK AND STRIKER ASSEMBLY FOR BONNET CATCH		1	
NB.125/4D	Bolt , securing Hook and Striker to Bonnet		12	
FW.104/T	Washer , Plain, on Bolts		12	
NN.125/L	Nut on Bolts		12	
C.724	Washer , Shakeproof, under Nuts		12	
BD.2954	CONTROL CABLE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS)		1	
C.3880	Abutment Post for Cable Adjuster		1	
FW.104/T	Washer , Plain, at bottom of Abutment Post		1	
NN.125/L	Nut , securing Abutment Post		1	
C.724	Washer , Shakeproof, under Nut		1	
C.4443	Adjuster at end of Bonnet Control Cable		1	
NN.125/L	Nut , locking Adjuster		1	
BD.9262	RADIATOR GRILLE ON BONNET		1	
NS.119/3D	Screw , Set, securing Radiator Grille		6	
C.723/A	Washer , Shakeproof, on Setscrews		6	
BD.9431	BADGE ("JAGUAR") ON RADIATOR GRILLE		1	
AN.102/L	Nut , securing Badge to Radiator Grille		1	
AW.102/T	Washer , Plain, under Nut		1	
C.723	Washer , Shakeproof, under Nut		1	
BD.7967	WINDSCREEN GLASS		2	
BD.7960	Seal Assembly for Screen Glasses		1	
BD.7961	Embellisher for L.H. Screen Glass		1	
BD.7962	Embellisher for R.H. Screen Glass		1	
BD.7963	Embellisher , Outer, at centre of Screen Glasses		1	
BD.7964	Embellisher , Inner, at centre of Screen Glasses		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8728	INSTRUMENT BOARD ASSEMBLY		1	NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.8639	Diaphragm, on Instrument Board, for supporting L.H. Facia Board		1	
BD.8640	Diaphragm, on Instrument Board, for supporting R.H. Facia Board		1	
BD.8691/2	Screw, for Diaphragms		2	} 4 of each Item required when radio is fitted.
BD.8483	Spire Nut for Screws		2	
BD.8897	Screw (knurled) for attachment of Instrument Board		2	
C.3563	Washer (fibre) on Screws		2	
BD.8714	L.H. FACIA BOARD ASSEMBLY		1	} FITTED TO L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.8717	R.H. FACIA BOARD ASSEMBLY		1	
BD.8717/2	Lid for Cubby Box on R.H. Facia Board		1	
BD.3334	Stop Hinge, for Cubby Box Lid		2	
BD.1497/1	Woodscrew, securing Hinges		12	
BD.656/1	Ball Catch, retaining Lid in closed position		1	
BD.656/2	Plate for Ball Catch		1	
M.102/3K	Woodscrew, securing Plates		4	
BD.5300	Lock, on Cubby Box Lid (WB.7/5631)		1	
BD.8072	Barrel, for Cubby Box Lock (WB.7/5410)		1	
BD.1501/4	Woodscrew, securing Lock		3	
BD.4717	Knob, on Cubby Box Lid		1	
BD.539/16	Screw, Self-Tapping, securing Knob to Cubby Box Lid		2	
BD.9235	Quadrant, for R.H. Cubby Box Lid		1	
BD.8716	L.H. FACIA BOARD ASSEMBLY		1	} FITTED TO R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.8715	R.H. FACIA BOARD ASSEMBLY		1	
BD.8716/2	Lid for Cubby Box on L.H. Facia Board		1	
BD.3334	Stop Hinge, for Cubby Box Lid		2	
BD.1497/1	Woodscrew, securing Hinges		12	
BD.656/1	Ball Catch, retaining Lid in closed position		1	
BD.656/2	Plate, for Ball Catch		1	
M.102/3K	Woodscrew, securing Plate		4	
BD.5300	Lock, on Cubby Box Lid (WB.7/5631)		1	
BD.8072	Barrel, for Cubby Box Lock (WB.7/5410)		1	
BD.1501/4	Woodscrew, securing Lock		3	
BD.4717	Knob, on Cubby Box Lid		1	
BD.539/16	Screw, Self-Tapping, securing Knob to Cubby Box Lid		2	
BD.9234	Quadrant, for L.H. Cubby Box Lid		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10779	INSTRUMENT BOARD ASSEMBLY		1	FITTED TO L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10780	INSTRUMENT BOARD ASSEMBLY		1	FITTED TO R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10783	L.H. FACIA BOARD ASSEMBLY		1	} FOR L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10862	R.H. FACIA BOARD ASSEMBLY		1	
NOTE : All the items enumerated under group headings BD.8714 and BD.8717 are also applicable to Facia Boards BD.10783 and BD.10862.				
BD.10861	L.H. FACIA BOARD ASSEMBLY		1	} FOR R.H. DRIVE CARS ONLY WHEN FITTED WITH AUTOMATIC TRANSMISSION.
BD.10784	R.H. FACIA BOARD ASSEMBLY		1	
NOTE : All the items enumerated under group headings BD.8716 and BD.8715 are also applicable to Facia Boards BD.10861 and BD.10784.				
BD.10786	MOUNTING PLATE FOR L.H. FACIA BOARD		1	} FOR USE ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10787	MOUNTING PLATE FOR R.H. FACIA BOARD		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8705	MOUNTING PLATE FOR L.H. FACIA BOARD		1	} FOR USE ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.8706	MOUNTING PLATE FOR R.H. FACIA BOARD		1	
BD.8721	CUBBY BOX ASSEMBLY BEHIND L.H. FACIA BOARD		1	FOR R.H. DRIVE CARS ONLY.
BD.8722	CUBBY BOX ASSEMBLY BEHIND R.H. FACIA BOARD		1	FOR L.H. DRIVE CARS ONLY.
BD.1502/1	Woodscrew, securing Cubby Boxes		10	
BD.9276	PANEL ASSEMBLY (HIDE COVERED) BETWEEN TOP OF INSTRUMENT PANEL AND WINDSCREEN		1	
BD.6429	Escutcheon, in Panel, for Demister Air Outlet to Windscreens		2	
M.104/5R	Woodscrew, securing Panel		4	
BD.9038	SCREEN RAIL FACIA (COMPLETE WITH RECEPTACLE FOR ASH TRAY)		1	
BD.9151	ASH TRAY FOR SCREEN RAIL FACIA		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8820	DRAWER AT BOTTOM OF INSTRUMENT BOARD (NOT REQUIRED WHEN RADIO IS FITTED)		1	
BD.4717	Knob on front of Drawer		1	
BD.539/16	Screw, Self-Tapping, securing Knob		1	
BD.8821	Slide (Female) on Drawer		2	
BD.1606/5	Woodscrew, securing Female Slides to Drawer		6	
BD.6086	Stop, on Drawer		1	
BD.1501/1	Screw, securing Stop		2	
BD.8823	Slide (Male) on sides of aperture for Drawer		2	
NS.513/4H	Screw, Set, securing Male Slides		4	
AW.104/T	Washer, Plain, on Setscrews		4	
NN.113/L	Nut, on Setscrews		4	
C.721	Washer, Shakeproof, under Nuts		4	
BD.9300	FIXED FLOOR ASSEMBLY (STEEL)		1	
BD.6244	Tapped Plate, for attachment of Seat Slides		4	
NS.525/5H	Screw, Set, securing Tapped Plates to underside of Fixed Floor		8	
BD.9409	Asbestos Sheet, under Fixed Floor		2	
BD.9410	Plate, holding Asbestos Sheet		2	
BD.524/7	Rivet, Bifurcated, securing Asbestos Sheets and Plates to Fixed Floor		22	
BD.1493/2	Screw, Set, securing Fixed Floor to Chassis Frame		2	
FW.104/T	Washer, Plain, on Setscrews		2	
C.724	Washer, Shakeproof, on Setscrews		2	
BD.9411	L.H. FRONT FLOORBOARD ASSEMBLY		1	} NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.9412	R.H. FRONT FLOORBOARD ASSEMBLY		1	
BD.9415	Adaptor Plate, around Jack Cover aperture, on Floorboards		2	
M.106/3R	Woodscrew, securing Adaptor Plate		20	
BD.9448	Spire Nut, under Floorboards, for fixing of Gearbox Cover		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11099	L.H. FRONT FLOORBOARD ASSEMBLY		1	} FITTED TO L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.11101	R.H. FRONT FLOORBOARD ASSEMBLY		1	
BD.9415	Adaptor Plate , around Jack Cover aperture, on Floorboards		2	
M.106/3R	Woodscrew , securing Adaptor Plates		20	
BD.9448	Spire Nut , under Floorboards, for fixing of Gearbox Cover		8	
BD.9909/2	Tee Nut , on Floorboards		3	
BD.11100	L.H. FRONT FLOORBOARD ASSEMBLY		1	} FITTED TO R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.11102	R.H. FRONT FLOORBOARD ASSEMBLY		1	
BD.9415	Adaptor Plate , around Jack Cover aperture, on Floorboards		2	
M.106/3R	Woodscrew , securing Adaptor Plates		20	
BD.9448	Spire Nut , under Floorboards, for fixing of Gearbox Cover		8	
BD.9909/2	Tee Nut , on Floorboards		3	
BD.8691/4 1861	Screw , Self-Tapping, securing Floorboards at Rear Washer , Special, on Self-Tapping Screws		6 6	
BD.9592	Seal (Rubber) on underside of Floorboard, for Handbrake Link		1	
BD.9534	Cover Plate , over redundant hole, for Handbrake Link		1	
BD.8691/4	Screw , Self-Tapping, securing Cover Plate to Floorboard		2	
BD.3037	Plate Assembly , covering Jack Aperture in Floorboards		2	
BD.10318	Felt , $\frac{1}{8}$ " x 2" x 26 $\frac{1}{2}$ ", under Floorboards		2	
BD.10319	Felt , $\frac{1}{8}$ " x 2" x 18 $\frac{1}{2}$ ", under Floorboards		2	
BD.10320	Felt , $\frac{1}{8}$ " x 2" x 15", under Floorboards		2	
BD.9283	GEARBOX COVER ASSEMBLY		1	} NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.1288/3	Spring Clip , for attachment of Dipstick Inspection Cover		2	
BD.1289/2	Rivet , securing Spring Clips to Gearbox Cover		4	
BD.10524/1	Seal (Sponge Rubber) between Gearbox Cover and Prop Shaft Tunnel (12 $\frac{3}{4}$ " long)		1	
BD.8691/4	Screw , Self-Tapping, securing Gearbox Cover to Floor		8	
BD.6196/2	Screw , Set, securing Gearbox Cover to Prop Shaft Tunnel		3	
BD.542/3	Washer , Special, on Screws		11	
BD.6196/2	Screw , Set, securing Gearbox Cover to Cowl		6	
FW.104/T	Washer , Plain, on Setscrews		6	
C.724	Washer , Shakeproof, on Setscrews		6	
BD.3143	Felt , under Gearbox Cover		6	
			As req'd	NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8279	INSPECTION COVER OVER DIPSTICK APERTURE ON GEARBOX COVER		1	} NOT REQUIRED WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.1288/1	Fastener Stud , securing Inspection Cover to Gearbox Cover		2	
BD.1288/2	Washer , securing Stud to Inspection Cover		2	
BD.10583	GEARBOX COVER ASSEMBLY		1	FOR USE ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
BD.10821	INSPECTION COVER ON GEARBOX COVER		3	FOR USE ONLY WHEN AUTOMATIC TRANSMISSION IS FITTED.
CARPETS				
BD.10804	Carpet Assembly , for L.H. Main Floor		1	} L.H. DRIVE CARS ONLY.
BD.10805	Carpet Assembly , for R.H. Main Floor		1	
BD.10804	Carpet Assembly , for L.H. Main Floor		1	} R.H. DRIVE CARS ONLY.
BD.11282	Carpet Assembly , for R.H. Main Floor		1	
BD.10680	Carpet Assembly , for L.H. Pedal Board		1	} L.H. DRIVE CARS ONLY.
BD.10681	Carpet Assembly , for R.H. Toe Board		1	
BD.10682	Carpet Assembly , for R.H. Pedal Board		1	} R.H. DRIVE CARS ONLY.
BD.10683	Carpet Assembly , for L.H. Toe Board		1	
BD.10685	Carpet Assembly , for Gearbox Cover		1	
BD.10686	Carpet Assembly , for Clutch Housing		1	
BD.11171	Heel Pad , on Main Floor Carpets		2	
BD.11177	Carpet , for Rear Compartment (between rear seats)		1	
BD.10595	RETAINER, HOLDING DRAUGHT PIPING ON L.H. DOOR SILL		1	
BD.10596	RETAINER, HOLDING DRAUGHT PIPING ON R.H. DOOR SILL		1	
BD.539/16	Screw , Self-Tapping, securing Retainers to Door Sills		10	
BD.711/1	Screw , Self-Tapping, securing Retainers to Door Sills		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
FELT UNDER CARPETS				
BD.10668/1	Felt, for front of Gearbox Cover (21" × 21")		1	
BD.10668/2	Felt, for rear of Gearbox Cover (15½" × 9")		1	
BD.10668/3	Felt, for top of Gearbox Cover (27" × 21")		1	
BD.10668/4	Felt, for Gauntlet Panel on Gearbox Cover (11" × 9")		1	
BD.10668/5	Felt, for Clutch Housing Panel (26" × 12½")		1	
BD.10669/1	Felt (Rubberised) for top of Gearbox Cover (27" × 21")		1	
BD.10669/2	Felt (Rubberised) for Gauntlet Panel on Gearbox Cover (11" × 9")		1	
BD.10669/3	Felt (Rubberised) for Clutch Housing Panel (26" × 12½")		1	
BD.10676	Felt (Rubberised) for L.H. Toeboard (19½" × 12")		1	
BD.10677	Felt (Rubberised) for R.H. Toeboard (19½" × 12")		1	
BD.524/3	Rivet, Bifurcated, securing Felt to Gearbox Cover		26	

FELT MATS

BD.10656	Mat Assembly, for Luggage Compartment Floor		1	} FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.10660	Mat Assembly, for Front L.H. side of Luggage Compartment		1	
BD.10661	Mat Assembly, at Rear L.H. side of Luggage Compartment		1	
BD.10662	Mat Assembly, at R.H. side of Luggage Compartment		1	
BD.10800	Mat Assembly, for Rear Seat Pan		1	
BD.10801	Mat Assembly, for Fold Down Panel at back of Rear Seat		1	

FIXINGS FOR CARPETS

BD.1286/1	Button, for Fastener, securing Carpets to Main Floorboards, Pedal Board and Toeboard		14
BD.1286/2	Socket, securing Buttons to Carpets		13
BD.1286/3	Stud, receiving Buttons		13
M.104/4R	Woodscrew, securing Studs to Floorboards		6
BD.1814/2	Rivet, securing Studs to Pedal and Toeboards		7
BD.1286/1	Button, at joint of Toeboard with Pedal Board		1
BD.1286/2	Socket, securing Button to Toeboard Carpet		1
BD.3834/1	Stud, receiving Button		1
BD.3834/2	Eyelet, securing Stud to Pedal Board Carpet		1

FIXINGS FOR FELT MATS

BD.1286/1	Button, for Fastener, securing Mat to Luggage Compartment Floor and Rear Seat Pan		1
-----------	---	--	---

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	No. per Unit	Plate No.	Remarks
FIXINGS FOR FELT MATS (continued)				
BD.1286/2	Socket , securing Buttons to Mats		7	
BD.1286/3	Stud , receiving Buttons		7	
BD.1814/2	Rivet , securing Studs to Luggage Compartment Floor and Rear Seat Pan		7	
INTERIOR TRIMMING				
BD.10651	Face Piece (Rexine 12" × 10") for L.H. Beam Panel		1	}
BD.10652	Face Piece (Rexine 12" × 10") for R.H. Beam Panel		1	
BD.10653	Face Piece (Rexine 9" × 4½") at L.H. corner of Boot Aperture		1	
BD.10654	Face Piece (Rexine 9" × 4½") at R.H. corner of Boot Aperture		1	
BD.10655	Face Piece (Moquette 16" × 14") on Cover over Petrol Filler Neck		1	
BD.10790	Face Piece (Moquette 22½" × 4½") for Heel Board		2	
BD.10791	Face Piece (Moquette 11" × 2½") for top of Seat Back Panel		2	
BD.10792	Face Piece (Moquette 30½" × 17½") for L.H. Wheel Arch		1	
BD.10793	Face Piece (Moquette 30½" × 17½") for R.H. Wheel Arch		1	
BD.10794	Face Piece (Moquette 11" × 2½") for Wheel Arch Flange		2	
BD.10795	Face Piece (Moquette 17½" × 10½") for Chassis Cover		2	
BD.10796	Face Piece Assembly (Moquette 26" × 10½" and 21" × 10") for Rear Seat Tunnel		1	
BD.10797	Felt (20" × 12") for Tunnel Upper		1	
BD.10798	Felt (15" × 8½") for Tunnel Lower		1	
BD.2899/4	Draught Piping (27" long) on Door Hinge Pillars		2	
BD.10552	Fillet Assembly , at top of L.H. Wheel Arch		1	
BD.10553	Fillet Assembly , at top of R.H. Wheel Arch		1	
BD.6756	Tacking Rail at L.H. side of Tonneau		1	
BD.6757	Tacking Rail at R.H. side of Tonneau		1	
BD.6755	Tacking Rail at centre of Tonneau		1	
BD.6754/1	Tacking Fillet for L.H. Rear Quarter Panel		1	
BD.6754/2	Tacking Fillet for R.H. Rear Quarter Panel		1	
BD.4789	Fillet for trimming on Beam Panel		2	
BD.8445	CASING ASSEMBLY AT L.H. SIDE OF SCUTTLE		1	
BD.8446	CASING ASSEMBLY AT R.H. SIDE OF SCUTTLE		1	
BD.539/4	Screw , Self-Tapping, securing Scuttle Side Casings		10	
BD.532/1	Cup Washer , on Screws		10	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4789	TRIM FILLET ENCLOSING CORNERS OF BEAM PANEL		2	
BD.540/5	Screw, Self-Tapping, securing Trim Fillets		4	
BD.9001	CASING ASSEMBLY (LARGE) AT TOP OF SCUTTLE		1	FOR L.H. DRIVE CARS ONLY.
BD.8994	Bracket, at L.H. side of Scuttle Top Casing		1	
BD.8995	Bracket, at R.H. side of Scuttle Top Casing		1	
BD.524/3	Rivet, securing Brackets to Casings		6	
BD.8988	CASING ASSEMBLY (SMALL) AT TOP OF SCUTTLE		1	FOR L.H. DRIVE CARS ONLY.
BD.539/1	Screw, Self-Tapping, securing Scuttle Top Casings		8	
BD.532/1	Cup Washer, on Screws		8	
BD.9000	CASING ASSEMBLY (LARGE) AT TOP OF SCUTTLE		1	FOR R.H. DRIVE CARS ONLY.
BD.8994	Bracket, at L.H. side of Scuttle Top Casing		1	
BD.8995	Bracket, at R.H. side of Scuttle Top Casing		1	
BD.524/3	Rivet, securing Brackets		6	
BD.8989	CASING ASSEMBLY (SMALL) AT TOP OF SCUTTLE		1	FOR R.H. DRIVE CARS ONLY.
BD.539/1	Screw, Self-Tapping, securing Scuttle Top Casings		8	
BD.532/1	Cup Washer, on Screws		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10634	CASING ASSEMBLY AT L.H. SIDE OF REAR QUARTER		1	
BD.10635	CASING ASSEMBLY AT R.H. SIDE OF REAR QUARTER		1	
BD.539/1 BD.532/1	Screw, Self-Tapping, securing Rear Quarter Casings Cup Washer, on Screws		6 6	
BD.9105	L.H. FRONT SEAT ASSEMBLY, COMPLETE		1	
BD.9106	R.H. FRONT SEAT ASSEMBLY, COMPLETE		1	
	NOTE : BD.9105 and BD.9106 covers the supply of a fully trimmed seat complete with Base Frame, Squab, Runners, Adjusting Lever and Cushion.			
BD.8613	L.H. FRONT SEAT FRAME AND SQUAB ASSEMBLY		1	
BD.8614	R.H. FRONT SEAT FRAME AND SQUAB ASSEMBLY		1	
	NOTE : BD.8613 and BD.8614 applies to a fully trimmed Seat Squab, complete with Base Frame, Runners, etc., BUT LESS CUSHION.			
BD.9333	L.H. FRONT SEAT BASE FRAME ASSEMBLY		1	
BD.9334	R.H. FRONT SEAT BASE FRAME ASSEMBLY		1	
BD.3258	Lever, for adjustment of L.H. Seat		1	
BD.3259	Lever, for adjustment of R.H. Seat		1	
BD.6624/2	Pivot Pin, securing Levers to Base Frame		2	
FW.104/C	Washer, on Pivot Pins		2	
FW.104/T	Washer, on Pivot Pins		2	
L.102/6U	Split Pin, securing Pivot Pins		2	
C.3317	Spring, for return of Levers		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.3255	Pivot Pin , securing Seat Squab to Base Frame		4	
BD.541/10	Washer , Special, on Pivot Pin		8	
C.4202/2	Nut , on Pivot Pins		4	
FG.105/X	Washer , Spring, under Nuts		4	
BD.9617	L.H. FRONT SEAT SQUAB FRAME ASSEMBLY		1	
BD.9618	R.H. FRONT SEAT SQUAB FRAME ASSEMBLY		1	
BD.9577	Hinge , Inner, for L.H. Seat		1	
BD.9578	Hinge , Inner, for R.H. Seat		1	
BD.9589	Hinge , Outer, for L.H. Seat		1	
BD.9590	Hinge , Outer, for R.H. Seat		1	
FS.504/4H	Screw , Set, securing Hinges to Seat Squab		12	
FS.504/6H	Screw , Set, securing Hinges to Seat Squab		6	
FS.504/8H	Screw , Set, securing Hinges to Seat Squab		6	
FN.104/L	Nut , on Setscrews		6	
C.724	Washer , Shakeproof, under Nuts		6	
BD.8816/7	FRONT SEAT RUNNER (COMPRISING 1 PLAIN AND 1 SLOTTED RUNNER PER SET)		4	
BD.9606	Packing Assembly , under Seat Runners		4	
NS.525/12H	Screw , Set, securing Outer Runners to Floor		8	
FS.504/4H	Screw , Set, securing Runners to Seats		8	
FN.104/L	Nut , fixing Setscrews to Seats		8	
C.724	Washer , Shakeproof, under Nuts		8	
BD.9593	CUSHION ASSEMBLY FOR FRONT SEATS		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10428	CUSHION ASSEMBLY FOR L.H. REAR SEAT		1	
BD.10429	CUSHION ASSEMBLY FOR R.H. REAR SEAT		1	
BD.10437	CUSHION ASSEMBLY FOR L.H. REAR SEAT SQUAB		1	
BD.10438	CUSHION ASSEMBLY FOR R.H. REAR SEAT SQUAB		1	
BD.1286/1	Button, for fixing of Squab Cushion to Rear Seat Pan Back		4	
BD.3833/2	Socket, securing Buttons to Back of Squab Cushion		4	
BD.3833/3	Stud at back of Rear Seat Pan		4	
BD.539/4	Screw, Self-Tapping, securing Stud to back of Rear Seat Pan		4	
BD.9230	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	FITTED TO R.H. DRIVE CARS ONLY at Chassis No. 807001 to 807069.
BD.10600	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	FITTED TO L.H. DRIVE CARS ONLY at Chassis No. 817001 to 817336.
BD.10825	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	Fitted to Chassis No. 807070 and subs. 817337 and subs.
BD.8351	L.H. DOOR ASSEMBLY, COMPLETE (INCLUDING LOCK, HANDLE, CASING, DOOR LIGHT FRAME, GLASS AND FACIA)		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8352	R.H. DOOR ASSEMBLY, COMPLETE (INCLUDING LOCK, HANDLE, CASING, DOOR LIGHT FRAME, GLASS AND FACIA)		1	
BD.11369	L.H. DOOR SHELL ASSEMBLY		1	
BD.11370	R.H. DOOR SHELL ASSEMBLY		1	
BD.8413	Frame Assembly for L.H. Door		1	
BD.8414	Frame Assembly for R.H. Door		1	
BD.8586	Panel, Hinge Face, for L.H. Door		1	
BD.8587	Panel, Hinge Face, for R.H. Door		1	
BD.8708	Panel, Bottom Face, for L.H. Door		1	
BD.8709	Panel, Bottom Face, for R.H. Door		1	
BD.5042	Outer Panel for L.H. Door		1	
BD.5043	Outer Panel for R.H. Door		1	
BD.8204	Stiffener, for L.H. Outer Door Panel		1	
BD.8205	Stiffener, for R.H. Outer Door Panel		1	
BD.8206	Clamping Plate for Stiffeners		4	
BD.8956	Tension Strap Assembly inside Doors		2	
BD.8982	Lock on L.H. Door		1	
BD.8983	Lock on R.H. Door		1	
M.108/6R	Woodscrew, securing Locks		8	
BD.5015	DOOR HINGE ASSEMBLY		4	
BD.4156	Pivot Pin, mounting Door Hinges		4	
FW.104/T	Washer, Plain, on Pivot Pins		4	
FN.104/L	Nut on Pivot Pins		4	
C.724	Washer, Shakeproof, under Nuts		4	
BD.4701/1	Shim (.036" thick) between Hinge and Door		As req'd	} Choose Shims of desired thickness.
BD.4701/2	Shim (.064" thick) between Hinge and Door		As req'd	
FS.104/5D	Screw, Set, securing Hinges to Body		16	
FB.104/12D	Bolt, securing Hinges to Doors		8	
FB.204/12D	Bolt, securing Hinges to Doors		8	
FN.104/L	Nut on Bolts		16	
C.724	Washer, Shakeproof, for Nuts and Setscrews		32	
BD.8982	LOCK ASSEMBLY ON L.H. DOOR		1	
BD.8983	LOCK ASSEMBLY ON R.H. DOOR		1	
M.108/6R	Screw, Wood, securing Door Locks		8	
BD.5979	Cover Plate, for edge of L.H. Door Lock		1	
BD.5980	Cover Plate, for edge of R.H. Door Lock		1	
BD.539/4	Screw, Self-Tapping, securing Cover Plates		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
2310/1	STRIKER FOR L.H. DOOR LOCK		1	
2311/1	STRIKER FOR R.H. DOOR LOCK		1	
BD.443/1 BD.443/2 BD.4391/1	Packing for Striker Packing for Striker Screw, Set, securing Strikers		As req'd As req'd 8	} Choose Packing of desired thickness.
BD.8963	KNOB, OPERATING REMOTE CONTROL MECHANISM TO L.H. DOOR LOCK		1	
BD.8964	KNOB, OPERATING REMOTE CONTROL MECHANISM TO R.H. DOOR LOCK		1	
BD.9265	Screw, securing Knob to Spindle of Remote Control Mechanism		2	
BD.9263	ESCUTCHEON, OUTER, BEHIND REMOTE CONTROL KNOB (WB.7/5248)		2	
BD.9264	ESCUTCHEON, INNER, BEHIND REMOTE CONTROL KNOB (WB.7/5249)		2	
BD.8065	HANDLE, OPERATING L.H. DOOR LOCK OUTSIDE CAR (WB.1/4411)		1	
BD.8066	HANDLE, OPERATING R.H. DOOR LOCK OUTSIDE CAR (WB.1/4410)		1	
BD.11259	Barrel, for outside Locking Handle (supplied complete with Keys) (WB.1/3533)		1	
BD.1595/1	Woodscrew, securing Outside Door Handles		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8576	RAIL AT CENTRE OF L.H. DOOR CARRYING WINDOW REGULATOR MECHANISM		1	
BD.8577	RAIL AT CENTRE OF R.H. DOOR CARRYING WINDOW REGULATOR MECHANISM		1	
BD.8984	REGULATOR ASSEMBLY, FOR RAISING AND LOWERING OF WINDOW IN L.H. DOOR		1	
BD.8985	REGULATOR ASSEMBLY, FOR RAISING AND LOWERING OF WINDOW IN R.H. DOOR		1	
NS.525/3H	Screw, Set, securing Regulators to Doors		8	
BD.2233	HANDLE OPERATING WINDOW REGULATORS (WB.1/3093)		2	
BD.552/1	Escutcheon, for Regulator Handles (WB.12341/A)		2	
BD.8359	CASING ASSEMBLY ON L.H. DOOR		1	
BD.8360	CASING ASSEMBLY ON R.H. DOOR		1	
BD.9113	Clip, for positioning of Casings on Doors		2	
BD.524/3	Rivet, Bifurcated, securing Clips to Casings		4	
BD.9112	Plate, on Doors, receiving Casing Clips		2	
M.106/3R	Woodscrew, securing Fixing Plates to Doors		4	
BD.539/1	Screw, Self-Tapping, securing Casings		10	
BD.532/1	Cup Washer, on Screws		10	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8038	FRAME AND GLASS ASSEMBLY FOR WINDOWS IN DOORS		2	
BD.6786	Frame only for Door Windows		2	
BD.6758	Glass only		2	
BD.571	Everseal around Glass and Frame (33" long)		2	
BD.9125	Channel , at bottom of Window Glass, operating on L.H. Regulator (W.242/HX)		1	
BD.9126	Channel , at bottom of Window Glass, operating on R.H. Regulator (W.241/HX)		1	
BD.9115	GUIDE ASSEMBLY FOR GLASS FRAME ON L.H. DOOR		1	
BD.9116	GUIDE ASSEMBLY FOR GLASS FRAME ON R.H. DOOR		1	
BD.8747	Packing , under Foot of Glass Guide		2	
M.106/6R	Woodscrew , for securing Glass Guides		2	
BD.10617	Glass Stop , at bottom of Doors		2	
BD.10618	Spacer Block for Glass Stop		2	
BD.10619	Packing for Glass Stop		2	
BD.11243	NO DRAUGHT VENTILATOR COMPLETE, FOR L.H. DOOR		1	
BD.11244	NO DRAUGHT VENTILATOR COMPLETE, FOR R.H. DOOR		1	
BD.9118	Frame Assembly , Outer, for L.H. Ventilator		1	
BD.9119	Frame Assembly , Outer, for R.H. Ventilator		1	
BD.6791	Frame Assembly , complete with Glass, for L.H. Ventilator		1	
BD.6792	Frame Assembly , complete with Glass, for R.H. Ventilator		1	
BD.8865	Pivot Assembly , Upper, for L.H. Ventilator		1	
BD.8866	Pivot Assembly , Upper, for R.H. Ventilator		1	
BD.7846	Seal , for L.H. Ventilator		1	
BD.7847	Seal , for R.H. Ventilator		1	
BD.8755	Spindle , for Lower Pivot on L.H. Ventilator		1	
BD.8756	Spindle , for Lower Pivot on R.H. Ventilator		1	
BD.3796	Bush , Bearing, for Spindle		2	
BD.8861	Friction Pivot Assembly , for L.H. Ventilator		1	
BD.8862	Friction Pivot Assembly for R.H. Ventilator		1	
BD.3981	Handle , locking L.H. Ventilator when closed		1	
BD.3982	Handle , locking R.H. Ventilator when closed		1	
BD.3984	Key Pin , securing Handles to Spindles		2	
BD.3897	Washer (Rubber) behind Handles		2	
BD.3991	Striker Plate for Locking Handles		2	
BD.6037	Packing , under Striker Plates		As req'd	
BD.4899/2	Screw , securing Striker Plates		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9118	OUTER FRAME ASSEMBLY FOR L.H. NO DRAUGHT VENTILATOR		1	
BD.9119	OUTER FRAME ASSEMBLY FOR R.H. NO DRAUGHT VENTILATOR		1	
BD.1503/3	Woodscrew, securing Outer Frames		2	
M.106/8R	Woodscrew, securing Outer Frames		6	
BD.5082/8	Felt, 32" long, in Channel of Outer Frames		2	
BD.6791	GLASS FRAME ASSEMBLY FOR L.H. NO DRAUGHT VENTILATOR (COMPLETE WITH GLASS)		1	
BD.6792	GLASS FRAME ASSEMBLY FOR R.H. NO DRAUGHT VENTILATOR (COMPLETE WITH GLASS)		1	
BD.6759	Glass only for No Draught Ventilators		2	
BD.1300	Everseal between Glass and Ventilator Frames (27" long)		2	
BD.46/6	RUBBER SEAL (13½" LONG) IN REAR CHANNEL OF VENTILATOR OUTER FRAME		2	
BD.7846	MOULDED SEAL AROUND L.H. NO DRAUGHT VENTILATOR		1	
BD.7847	MOULDED SEAL AROUND R.H. NO DRAUGHT VENTILATOR		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8865	UPPER PIVOT ASSEMBLY FOR L.H. VENTILATOR		1	
BD.8866	UPPER PIVOT ASSEMBLY FOR R.H. VENTILATOR		1	
BD.4909/3	Screw, securing Upper Pivots to Outer Frames and Glass Frames		4	
BD.8861	FRICITION PIVOT ASSEMBLY AT BOTTOM OF L.H. NO DRAUGHT VENTILATOR		1	
BD.8862	FRICITION PIVOT ASSEMBLY AT BOTTOM OF R.H. NO DRAUGHT VENTILATOR		1	
BD.8863	Bracket Assembly for L.H. Lower Pivot		1	
BD.8864	Bracket Assembly for R.H. Lower Pivot		1	
BD.5168	Clamping Plate for Lower Pivot Spindles		2	
BD.5169	Spring, applying tension to Clamping Plates		4	
FW.104/T	Washer, Plain, behind Springs		4	
NN.225/L	Nut, securing Clamping Plates		8	
NS.319/5H	Screw, Set, securing Lower Friction Pivot Assembly to Outer Frames		4	
C.723/A	Washer, Shakeproof, on Setscrews		4	
BD.8755	SPINDLE FOR L.H. LOWER FRICTION PIVOT		1	
BD.8756	SPINDLE FOR R.H. LOWER FRICTION PIVOT		1	
NS.516/2H	Screw, Set, securing Spindles to Outer Frames		4	
BD.3981	HANDLE, LOCKING L.H. NO DRAUGHT VENTILATOR WHEN CLOSED		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.3982	HANDLE, LOCKING R.H. NO DRAUGHT VENTILATOR WHEN CLOSED		1	
BD.3897	Washer (Rubber) behind Handles		2	
BD.3984	Key Pin, securing Handles		2	
BD.3991	STRIKER PLATE FOR VENTILATOR HANDLES		2	
BD.6037	Packing, for Striker Plates		As req'd	
BD.4899/2	Screw, securing Striker Plates		4	
BD.8977	GARNISH RAIL, AT TOP OF L.H. DOOR, FOR ATTACHMENT OF FACIAS		1	
BD.8978	GARNISH RAIL, AT TOP OF R.H. DOOR, FOR ATTACHMENT OF FACIAS		1	
BD.6033	FACIA ASSEMBLY AT TOP OF L.H. DOOR		1	
BD.6034	FACIA ASSEMBLY AT TOP OF R.H. DOOR		1	
1758	Clip, securing Facias to Garnish Rails		4	
M.108/3R	Woodscrew, securing Clips to Facias		8	
BD.5073	CAPPING AT TOP OF L.H. DOOR		1	
BD.5074	CAPPING AT TOP OF R.H. DOOR		1	
BD.8548	Finger Pull (Chromium Plated) on Cappings		2	
NS.519/3H	Screw, Set, securing Finger Pulls to Cappings		4	
BD.539/1	Screw, Self-Tapping, securing Cappings to Facias		10	
BD.543/1	Cup Washer, on Screws		10	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8484/1	DRAUGHT STRIP (21 $\frac{1}{2}$ " LONG) BETWEEN DOOR CAPPING AND INNER FACE OF WINDOW		2	
BD.6027	WEATHER STRIP (22" LONG) BETWEEN OUTER FACE OF WINDOW AND DOOR		2	
BD.5358/4	WASTE PIPING (33" LONG) ALONG TOP EDGE OF DOORS		2	
BD.4814/3	SEALING RUBBER (45" LONG) FOR HINGE PILLARS & SCREEN PILLARS		2	
BD.4814/4	SEALING RUBBER (16 $\frac{1}{2}$ " LONG) ON CANTRAILS, SEALING TOP OF DOORS		2	
BD.4814/5	SEALING RUBBER (12" LONG) ON UPPER HEAD PILLARS			

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4920/2	SEALING RUBBER (3 $\frac{3}{4}$ " LONG) ON DOOR POSTS		2	
BD.2159/4	SEALING RUBBER (28 $\frac{1}{2}$ " LONG) FOR SHUT PILLARS		2	
BD.2045/8	SEALING RUBBER (31" LONG) FOR DOOR BOTTOM		2	
BD.8443	RETAINER FOR SEAL ON L.H. HINGE PILLAR		1	
BD.8444	RETAINER FOR SEAL ON R.H. HINGE PILLAR		1	
BD.1814/2	Rivet, securing Retainers		10	
BD.8058	RETAINER FOR SEAL ON SCREEN PILLARS		2	
BD.1814/2	Rivet, securing Retainers		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6055	RETAINER FOR SEAL AT DOOR BOTTOM		2	
BD.1814/2	Rivet, securing Retainers		14	
BD.9923	REAR END ASSEMBLY		1	
BD.8313	Door Sill Assembly, L.H.		1	
BD.8314	Door Sill Assembly, R.H.		1	
BD.8475	Pan Assembly, for L.H. Rear Seat		1	
BD.8476	Pan Assembly, for R.H. Rear Seat		1	
BD.9920	Tonneau Panel Assembly		1	
BD.8915	Wheel Arch Assembly, L.H.		1	
BD.8916	Wheel Arch Assembly, R.H.		1	
BD.9341	Floor Assembly, at forward end of Luggage Com- partment		1	
BD.8926	Plate, inside Luggage Compartment, for mounting of Radio Power Pack when required		1	
BD.8928	Parcel Tray at back of Rear Seats		1	
BD.8313	L.H. DOOR SILL ASSEMBLY		1	
BD.8314	R.H. DOOR SILL ASSEMBLY		1	
BD.8373	Outer Panel, for L.H. Door Sill		1	
BD.8374	Outer Panel, for R.H. Door Sill		1	
BD.8502	Inner Panel Assembly, for L.H. Door Sill		1	
BD.8503	Inner Panel Assembly, for R.H. Door Sill		1	
BD.4107	Plate, reinforcing Sill Mountings		4	
BD.8377	Diaphragm, at front end of L.H. Sill		1	
BD.8378	Diaphragm, at front end of R.H. Sill		1	
BD.4112	Diaphragm, Inner, L.H. Shut Pillar		1	
BD.4113	Diaphragm, Inner, R.H. Shut Pillar		1	
BD.4216	Diaphragm, Outer, L.H. Shut Pillar		2	
BD.4217	Diaphragm, Outer, R.H. Shut Pillar		2	
BD.8379	Diaphragm, Intermediate, for Door Sills		6	
BD.4164	Bracket, Locating, L.H. Shut Pillar		1	
BD.4165	Bracket, Locating, R.H. Shut Pillar		1	
BD.9446	Seal Plate, at bottom of L.H. Shut Pillar		1	
BD.9447	Seal Plate, at bottom of R.H. Shut Pillar		1	
BD.4116	Stiffener, for Shut Pillars		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9920	TONNEAU PANEL ASSEMBLY		1	
BD.9919	Panel only, for Tonneau		1	
BD.9344	Panel Assembly, Lower, for Tonneau		1	
BD.9427	Panel, Bottom, for Tonneau		1	
BD.4191	Diaphragm, at L.H. corner of Boot		1	
BD.4192	Diaphragm, at R.H. corner of Boot		1	
BD.9357	Gutter Assembly, for Luggage Compartment Lid Aperture		1	
BD.8915	L.H. WHEEL ARCH ASSEMBLY		1	
BD.8916	R.H. WHEEL ARCH ASSEMBLY		1	
BD.8917	Panel, for L.H. Wheel Arch		1	
BD.8918	Panel, for R.H. Wheel Arch		1	
BD.4160	Butt Strap, for Wheel Arches		2	
BD.8681	Clip for Electrical Wiring		9	
BD.9311	Support Assembly at rear of L.H. Wheel Arch		1	
BD.9312	Support Assembly at rear of R.H. Wheel Arch		1	
C.5647	Plug (Rubber) in Wheel Arch Panel		4	
BD.9336	RECESS PANEL ASSEMBLY FOR SPARE WHEEL		1	
BD.10253	Felt around Recess Panel (11" × 1")		2	
BD.10254	Felt around Recess Panel (29" × 1")		2	
BD.6196/4	Screw, Set, securing Recess Panel to Spare Wheel Tray		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	
BD.9625	COVER PANEL, IN LUGGAGE COMPARTMENT, FOR PETROL FILLER NECK		1	
BD.9584	Seal (Rubber) for Cover Panel		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11262	LID ASSEMBLY, IN LUGGAGE COMPARTMENT, EXPOSING SPARE WHEEL		1	NOT REQUIRED FOR SPECIAL EQUIPMENT MODELS.
BD.9372	LID ASSEMBLY, IN LUGGAGE COMPARTMENT, EXPOSING SPARE WHEEL		1	FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.9374	Hinge, for Lid		3	
NS.519/3D	Screw, Set, securing Hinges to Lid		9	
BD.9909/1	"T" Nut for Setscrews		9	
BD.2121	Budget Lock at L.H. side of Lid		1	
BD.2122	Budget Lock at R.H. side of Lid		1	
NS.519/3D	Screw, Set, securing Budget Locks		4	
BD.9909/1	"T" Nut for Setscrews		4	
C.4630	Bezel, in aperture, for Budget Lock Key		2	SPECIAL EQUIPMENT MODELS ONLY.
BD.6250	Tab (Leather) for Lifting Lid		1	
BD.3556	Clip, securing Tab		1	
BD.539/4	Screw, Self-Tapping, securing Clips		2	
BD.9579	BRACKET ASSEMBLY, IN TRAY, FOR MOUNTING OF SPARE WHEEL		1	
NS.419/3D	Screw, Set, securing Bracket to Spare Wheel Tray		12	
C.723/A	Washer, Shakeproof, on Setscrews		12	
BD.6240	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.6241	Screw, for fixing of Spare Wheel		1	
BD.5232	Dome Plate on Screw		1	
BD.5561	Hand Knob operating Screw		1	
C.704/1	Mills Pin, securing Hand Knob to Screw		1	
BD.9583	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.9582	Screw, for fixing of Spare Wheel		1	
BD.9581	Spacing Washer on Screw		1	
BD.5232	Dome Plate on Screw		1	
BD.5561	Hand Knob operating Screw		1	
C.704/1	Mills Pin, securing Hand Knob to Screw		1	
BD.9959	LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE		1	Fitted from Chassis No. : 807001 to 807004. 817001 to 817090.
BD.10640	Lid only (comprising Panel, Wood Frame and Attachment Brackets)		1	
BD.9585	Bracket, holding Lock Release Mechanism (Centre)		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE (continued)				Fitted from Chassis No. : 807001 to 807004 817001 to 817090
M.106/4R BD.9387	Woodscrew , securing Bracket		6	
	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer behind Release Mechanism (RS.14-307)		1	
AS.102/11H	Screw, Set , securing Spacer		4	
C.724	Washer , Shakeproof, on Setscrews		4	
BD.9388	Lock at L.H. side of Luggage Compartment (WB.3/6630/0)		1	
BD.9389	Lock at R.H. side of Luggage Compartment (WB.3/6631/0)		1	
BD.1503/3	Woodscrew , securing Side Locks		8	
BD.9390	Cable , coupling Centre Release Mechanism with Side Lock (WB.3/6644/0)		2	
BD.9942	Handle Assembly , on Lid (complete with Moulding)		1	
BD.10243	Housing , for Number Plate Lamp		1	
BD.9943	Moulding , down centre of Lid		1	
BD.9628	Spire Nut , securing centre Moulding		4	
BD.9152	Plaque at bottom of centre Moulding		1	
NN.119/L	Nut securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	
C.1040/23	Clip , securing Harness		2	
BD.9392	Casing for Luggage Compartment Lid		1	
BD.10352	Strap , holding Spare Wheel Lid in "open" position		1	
BD.539/11	Screw , Self-Tapping, securing Strap		1	
BD.532/2	Cup Washer on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip , anchoring Prop when not in use		1	
BD.9160	Plate behind Spring Clip		1	
BD.4908/6	Woodscrew , securing Clip		2	
BD.1708/1	Washer , Spring (Double Coil) on Prop		1	
FW.105/T	Washer , Plain, behind Spring Washer		1	
L.103/7U	Pin , Split, securing Prop in Bracket		1	
BD.826	Lamp Assembly , illuminating Luggage Compartment		1	
C.4073	Bracket , operating Luggage Compartment Lamp Switch		1	
LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE				Fitted to Chassis No. : 807005 and subs. 817091 and subs.
BD.9377			1	
BD.10584	Lid only (comprising Panel, Wood Frame and Attachment Brackets)		1	
BD.10533	Bracket , holding Lock Release Mechanism (Centre)		1	
M.106/4R	Woodscrew , securing Bracket		6	
BD.9387	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer , behind Release Mechanism (RS.14/307)		1	
AS/302/14H	Screw, Set , securing Spacer		1	
NS.319/3H	Screw, Set , securing Release Mechanism		4	
C.724	Washer , Shakeproof, on Setscrews		4	
BD.9388	Lock , at L.H. side of Luggage Compartment Lid (WB.3/6630/0)		1	
BD.9389	Lock , at R.H. side of Luggage Compartment Lid (WB.3/6631/0)		1	
BD.1503/3	Woodscrew , securing Side Locks		8	
BD.9390	Cable , coupling Centre Release Mechanism with Side Locks (WB.3/6644/0)		2	
BD.9639	Handle Assembly on Lid (complete with Moulding)		1	
BD.10245	Housing for Number Plate Lamp		1	
BD.9090	Moulding down centre of Lid		1	
BD.9628	Spire Nut , securing Centre Moulding		4	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
LUGGAGE COMPARTMENT LID ASSEMBLY COMPLETE <i>(continued)</i>				Fitted to Chassis No. : 807005 and subs. 817091 and subs.
BD.9152	Plaque at bottom of Centre Moulding		1	
NN.119/L	Nut, securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	
C.1040/23	Clip, securing Harness		2	
BD.9392	Casing for Luggage Compartment Lid		1	
BD.10352	Strap, on Casing, holding Spare Wheel Lid In "open" position		1	
BD.539/11	Screw, Self-Tapping, securing Strap		1	
BD.532/2	Cup Washer, on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip, anchoring Prop when not in use		1	
BD.9160	Plate, behind Spring Clip		1	
BD.4908/6	Woodscrew, securing Clip		2	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T	Washer, Plain, behind Spring Washer		1	
L.103/7U	Pin, Split, securing Prop in Bracket		1	
BD.826	Lamp Assembly, illuminating Luggage Compartment		1	
BD.4073	Bracket, operating Luggage Compartment Lamp Switch		1	
BD.9432	Striker Bar, on Luggage Compartment Floor, for locking of Luggage Lid (VB.3/6645/0)		2	
NN.225/L	Nut, securing Striker Bars		8	
BD.9942	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID		1	Fitted from Chassis No. : 807001 to 807004. 817001 to 817090.
BD.11261	Locking Barrel, for Handle (WB.1/6438) for use with "FNR" series Key		1	
BD.9639	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID (COMPLETE WITH SEATING MOULDING)		1	Fitted to Chassis No. : 807005 and subs. 817091 and subs.
BD.11265	Handle, less Seating Moulding		1	
BD.11266	Seating Moulding under Handle (WB.1/6436/0)		1	
BD.11261	Locking Barrel, for Handle (WB.1/6438) for use with "FNR" series Key		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9345/2	SEALING RUBBER AROUND LUGGAGE COMPARTMENT LID (95" LONG)		1	
BD.9345/3	SEALING RUBBER, IN RETAINER AT FRONT OF LUGGAGE COMPARTMENT APERTURE FOR SEALING LID (31" LONG)		1	
BD.4287	HINGE FOR LUGGAGE COMPARTMENT LID		2	
FS.104/5D BD.541/9 C.724	Screw, Set, securing Hinges to Lid Washer, Special, on Setscrews Washer, Shakeproof, on Setscrews		6 6 6	
BD.4311	PIVOT PIN, SECURING HINGES TO BODY		2	
FN.204/L C.724	Nut, securing Pivot Pins Washer, Shakeproof, under Nuts		4 2	
BD.9211	BRACKET ASSEMBLY FOR MOUNTING OF L.H. LUGGAGE LID HINGE		2	
BD.9212	BRACKET ASSEMBLY FOR MOUNTING OF R.H. LUGGAGE LID HINGE		2	
BD.4332 FS.104/4D FW.104/T C.724	Cover Plate for Luggage Lid Hinges Screw, Set, securing Brackets Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		2 8 4 8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9565	MOULDING ASSEMBLY, ON TONNEAU PANEL ABOVE LUGGAGE COMPARTMENT LID		1	
BD.4919	Bolt, securing Moulding to Tonneau Panel		2	
NN.116/L	Nut on Bolts		2	
AW.102/T	Washer, Plain, on Bolts		2	
C.722	Washer, Shakeproof, under Nuts		4	
BD.9510	HINGED PANEL ASSEMBLY AT BACK OF LUGGAGE COMPARTMENT AND ABOVE REAR SEATS		1	
BD.9395	Sliding Catch, locking Panel		2	
BD.1499/6	Woodscrew, securing Sliding Catches		12	
BD.9441	Hinge for Panel		2	
NS.519/3D	Screw, securing Hinges		10	
BD.9912	Striker Plate, for use when hinged Panel is in vertical position		2	
BD.10297	Striker Plate, for use when hinged Panel is in horizontal position		2	
BD.4814/7	Seal (Rubber) for Hinged Panel		1	
BD.9397	PETROL FILLER BOX ASSEMBLY		1	
BD.9489	" Snapsac " Sleeve, on Filler Box, for Lock Striker		1	
BD.4368	Hose, connecting Filler Box with Petrol Tank		1	
C.824	Clip, securing Hose to Box and Tank		2	
BD.4369	Extension Tube (Rubber) for Drain Pipe on Filler Box		1	
BD.4358	HINGE ASSEMBLY FOR PETROL FILLER DOOR		1	
AS.302/3H	Screw, Set, securing Hinge inside Petrol Filler Box		2	
C.738	Washer, Shakeproof, on Setscrews		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4357	DOOR ASSEMBLY FOR PETROL FILLER BOX		1	
AN.102/L FW.105/T C.738	Nut, securing Door to Hinges Washer, Packing, between Door and Hinge Washer, Shakeproof, under Nuts		4 As req'd 4	
BD.4354	Seal (Rubber) around Filler Box aperture, for Door Seating		1	
BD.4360	LOCK ASSEMBLY FOR PETROL FILLER DOOR		1	
BD.8071	Spring Clip, securing Lock to Door (WB.7/4098)		1	
BD.4353	STRIKER ASSEMBLY FOR PETROL FILLER LOCK		1	
BD.10641 NN.119/L AW.102/T C.738	Stud Plate, for fixing of Striker Inside Petrol Filler Box Nut, securing Stud Plate and Striker Washer, Plain, on Studs Washer, Shakeproof, under Nuts		1 2 2 2	
BD.3699	FILLER CAP ON HINGE		1	
BD.3189 BD.4394 L.102/4U C.2501/3	Seal (Cork) inside Filler Cap Spring, between Filler Cap and Hinge Pin, Split, securing Filler Cap to Hinge Washer, Plain, under Split Pin		1 1 1 1	
BD.9402	L.H. REAR WING ASSEMBLY		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.9403	R.H. REAR WING ASSEMBLY		1	
BD.11178	Sealing Rubber around Wheel Aperture in Rear Wings		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9516	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.9517	R.H. REAR WING ASSEMBLY		1	
BD.7769	Moulding around Wheel Aperture in L.H. Rear Wing		1	
BD.7770	Moulding around Wheel Aperture in R.H. Rear Wing		1	
BD.1814/1	Pop Rivet, securing Mouldings to Wings		32	
BD.11275	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN WIRE SPOKE ROAD WHEELS AND SPECIAL REAR WHEEL COVERS ARE FITTED.
BD.11276	R.H. REAR WING ASSEMBLY		1	
BD.6615	Mounting Bracket Assembly (complete with Spring for "Dzus" Fastener)		2	} SUPPLIED TO SPECIAL ORDER ONLY.
BD.6615	MOUNTING BRACKET ASSEMBLY, ON REAR WINGS, FOR "DZUS" FASTENERS		2	} FOR USE ON REAR WINGS SUIT- ABLE FOR WIRE SPOKE ROAD WHEELS AND SPECIAL REAR WHEEL COVERS.
BD.6596	Spring, receiving "Dzus" Fasteners on Rear Wheel Covers		2	
BD.6600/1	Rivet, securing "Dzus" Springs		4	} SUPPLIED TO SPECIAL ORDER ONLY.
BD.2401/1	Screw, Set, securing Rear Wings		4	
BD.2401/2	Screw, Set, securing Rear Wings		4	
BD.2401/7	Screw, Set, securing Rear Wings		6	
BD.542/2	Washer, Special, on Setscrews		14	
C.725	Washer, Shakeproof, on Setscrews		14	
BD.8598	Piping Assembly between Rear Wings and Wheel Arches (72" long)		2	
BD.9317	SEALING PLATE ASSEMBLY, BE- TWEEN L.H. REAR WING AND SHUT PILLAR		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9318	SEALING PLATE ASSEMBLY, BETWEEN R.H. REAR WING AND SHUT PILLAR		1	
BD.9317/4	Rubber Strip for Sealing Plates (27" long)		2	
BD.8691/3	Screw, Metal , securing Sealing Plate to Shut Pillar		8	
BD.711/9	Screw, Metal , securing Sealing Plate to Shut Pillar		6	
AW.102/T	Washer, Plain , on Screws		14	
NS.119/4D	Screw, Set , securing Sealing Plates to Rear Wings		4	
NN.119/L	Nut , on Setscrews		4	
C.723/A	Washer, Shakeproof , under Nuts		4	
BD.3786	"Rubo" Gasket , between Sealing Plate and Rear Wings (27" long)		2	
BD.6194	STEADY BAR FOR L.H. REAR WING		1	
BD.6195	STEADY BAR FOR R.H. REAR WING		1	
BD.4449	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.4450	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.2121	Lock on L.H. Cover (WB.12288/A)		1	
BD.2122	Lock on R.H. Cover (WB.12288/B)		1	
AS.502/4H	Screw, Set , securing Locks to Covers		4	
AN.102/L	Nut on Setscrews		4	
C.723	Washer, Shakeproof , under Nuts		4	
BD.11267	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WITH BD.11275 AND BD.11276 REAR WINGS WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.11268	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.6616	"Dzus" Fastener , on Rear Wheel Covers		2	} SUPPLIED TO SPECIAL ORDER ONLY.
BD.6617	Grommet , securing "Dzus" Fasteners to Rear Wheel Covers		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
2312	ESCUTCHEON FOR REAR WING COVERS (WB.16049)		2	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.540/9	Screw, Self-Tapping, securing Escutcheon to Rear Wing Covers		4	
BD.8929	HOOD STICKS ASSEMBLY		1	
BD.9029	Main Head Pillar Assembly, complete with Hood Stick		1	
BD.8670	Hinge Assembly, Lower, on L.H. Main Head Pillar		1	
BD.8671	Hinge Assembly, Lower, on R.H. Main Head Pillar		1	
BD.8009	Bolt, Special, securing Lower Hinges		2	
BD.541/18	Washer, on Special Bolts		2	
BD.6738	Panel for L.H. Head Pillar		1	
BD.6739	Panel for R.H. Head Pillar		1	
BD.8061	Retainer for Seal on L.H. Head Pillar		1	
BD.8062	Retainer for Seal on R.H. Head Pillar		1	
BD.6732	Front Rail, L.H.		1	
BD.6733	Front Rail, R.H.		1	
BD.6730	Tie Plate, at joint of Front Rails		1	
BD.6725	Canopy Rail, L.H.		1	
BD.6726	Canopy Rail, R.H.		1	
BD.8674	Hood Stick, No. 3		1	
BD.8675	Hood Stick, No. 4		1	
BD.8657	Hood Stick, No. 4 (laminated bend)		1	
BD.8658	Link, No. 1 L.H.		1	
BD.8659	Link, No. 1 R.H.		1	
BD.8660	Link Assembly, No. 2 L.H.		1	
BD.8661	Link Assembly, No. 2 R.H.		1	
BD.8664	Link, No. 3 L.H. and R.H.		2	
BD.8666	Link, No. 4 L.H.		1	
BD.8667	Link, No. 4 R.H.		1	
BD.8668	Link, No. 5 L.H. and R.H.		2	
BD.9031	Spring, tensioning Hood Sticks		2	
BD.9466	Locating Block (Rubber) on L.H. Cantrail		1	
BD.9467	Locating Block (Rubber) on R.H. Cantrail		1	
BD.9469	Bracket, housing Locating Block on L.H. Cantrail		1	
BD.9470	Bracket, housing Locating Block on R.H. Cantrail		1	
NN.125/L	Nut, securing Brackets to Cantrail		4	
AW.104/T	Washer, Plain, under Nuts		4	
C.724	Washer, Shakeproof, under Nuts		4	
BD.5783/3	Screw, Set, securing Rubber Locating Block to Bracket		2	
BD.541/21	Washer, Special, on Setscrews		2	
BD.8043	Front Rail Assembly		1	
BD.11615	HOOD CLOTH ASSEMBLY		1	
	(COMPLETE WITH BACK CURTAIN AND ZIP FASTENER)			
BD.10574	Zip Fastener around Backlight (24" long)		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11616	HEAD LINING ASSEMBLY		1	
BD.9123	BACKLIGHT PANEL		1	
BD.862	INTERIOR LAMP ON HOOD (WB.12136/C)		1	
BD.8044	TOGGLE CLAMP ASSEMBLY SECUR- ING HOOD AT L.H. SIDE		1	
BD.8045	TOGGLE CLAMP ASSEMBLY SECUR- ING HOOD AT R.H. SIDE		1	
BD.4863/1	Screw, Set, securing Toggle Clamps		6	
BD.8046	TOGGLE CLAMP ASSEMBLY SECUR- ING HOOD AT CENTRE		1	
BD.4863/1	Screw, Set, securing Toggle Clamp		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6799	HOOK, ENGAGING WITH TOGGLE CLAMPS WHEN SECURING HOOD		3	
BD.6796	Mounting Plate (serrated) for Centre Hook		1	
BD.6797	Mounting Plate (serrated) for Side Hooks		2	
BD.8687	Packing Block under Mounting Plates for Side Hooks		2	
BD.8449	Packing Plate, under Mounting Plates for Side Hooks		As req'd	
BD.4863/4	Screw, Set, securing Mounting Plates		10	
BD.8079/2	Screw, Set (Special) securing Hooks		3	
BD.4814/3	SEALING RUBBER ALONG TOP OF CANOPY RAIL (45" LONG)		1	
BD.8473	CASING ASSEMBLY FOR REAR PARCEL SHELF		1	
BD.6772	CHROME BEADING ON L.H. MAIN HEAD PILLAR		1	
BD.6773	CHROME BEADING ON R.H. MAIN HEAD PILLAR		1	
BD.6774	CHROME BEADING AROUND L.H. SIDE OF TONNEAU		1	
BD.6775	CHROME BEADING AROUND R.H. SIDE OF TONNEAU		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6776	CHROME BEADING FOR CANOPY RAIL		1	
BD.6777	CHROME BEADING FOR REAR HOOD STICK		1	
BD.10350	CLAMP ASSEMBLY, ON L.H. WHEEL ARCH, SECURING HOOD WHEN CLOSED		1	
BD.10351	CLAMP ASSEMBLY, ON R.H. WHEEL ARCH, SECURING HOOD WHEN CLOSED		1	
BD.3265/2	Screw, Set, securing Clamps		6	
FW.102/T	Washer, Plain, on Setscrews		6	
NN.119/L	Nut on Setscrews		6	
C.723/A	Washer, Shakeproof, under Nuts		6	
BD.10578	HOOK, ENGAGING HOLDING DOWN CLAMPS		2	
BD.1814/2	Rivet, securing Hooks		4	
BD.11327	ENVELOPE ASSEMBLY ENCLOSING HOOD WHEN FOLDED		1	
BD.568/1	Socket, on Envelope, for "Lift-the-Dot" Fasteners		2	
BD.568/2	Clinch Plate, on Envelope, for "Lift-the-Dot" Fasteners		2	
BD.3833/1	Button, on Envelope, for "Durable Dot" Fasteners		2	
BD.3833/2	Socket, on Envelope, for "Durable Dot" Fasteners		2	
BD.1750	Stud (Woodscrew Base) for "Lift-the-Dot" Fasteners		2	
BD.3833/3	Stud, for "Durable Dot" Fasteners		2	
BD.539/4	Screw, Self-Tapping, securing "Durable Dot" Studs		2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6750	CAPPING ON L.H. SCREEN PILLAR		1	
BD.6751	CAPPING ON R.H. SCREEN PILLAR		1	
BD.711/1	Screw, Self-Tapping, securing Screen Pillar Cappings		6	
BD.9045	CAPPING ON L.H. CANTRAIL		1	
BD.9046	CAPPING ON R.H. CANTRAIL		1	
BD.711/7	Screw, Self-Tapping, securing Cantrail Cappings		6	
BD.9047	CAPPING ON L.H. MAIN HEAD PILLAR		1	
BD.9048	CAPPING ON R.H. MAIN HEAD PILLAR		1	
BD.9049	CAPPING ON L.H. DOOR POST		1	
BD.9050	CAPPING ON R.H. DOOR POST		1	
BD.711/7	Screw, Self-Tapping, securing Cappings to Main Head Pillars and Door Posts		8	
BD.8004	CHROMIUM FINISHING PLATE AT TOP OF L.H. SCREEN PILLAR CAPPING		1	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8005	CHROMIUM FINISHING PLATE AT TOP OF R.H. SCREEN PILLAR CAPPING		1	
BD.9051	CHROMIUM FINISHING PLATE AT BOTTOM OF L.H. MAIN HEAD PILLAR		1	
BD.9052	CHROMIUM FINISHING PLATE AT BOTTOM OF R.H. MAIN HEAD PILLAR		1	
BD.9053	CHROMIUM FINISHING PLATE OVER HOOD CLOTH OF MAIN HEAD PILLARS		2	
BD.9054	CHROMIUM FINISHING PLATE AT TOP OF CAPPING ON L.H. DOOR POST		1	
BD.9055	CHROMIUM FINISHING PLATE AT TOP OF CAPPING ON R.H. DOOR POST		1	
BD.540/1	Screw, Self-Tapping, securing Chromium Finishing Plates		14	
BD.9098	BRACKET, UPPER, SUPPORTING STEERING COLUMN		1	
NS.131/4D C.725	Screw, Set, securing Bracket Washer, Shakeproof, on Setscrews		2 2	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
C.4389	FRONT NUMBER PLATE		1	
NS.125/4D	Screw, Set, securing Front Number Plate		2	
FW.104/T	Washer, Plain, on Setscrews		2	
NN.125/L	Nut on Setscrews		2	
C.724	Washer, Shakeproof, under Nuts		2	
BD.9932	PANEL ASSEMBLY FOR ATTACHMENT OF REAR NUMBER PLATE		1	
NS.125/4D	Screw, Set, securing Panel to Body, and Number Plate to Panel		8	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.9932/1	PIPING BETWEEN REAR NUMBER PLATE PANEL AND BODY (33' LONG)		1	STATE COLOUR OF BODY WHEN ORDERING.
BD.9945	BEADING (CHROMIUM PLATED) AT TOP OF REAR NUMBER PLATE PANEL		1	
BD.10039	Clip Assembly, securing Beading to Number Plate Panel		5	
C.2945	REAR NUMBER PLATE		1	NOT REQUIRED FOR U.S.A. AND CANADA.

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
C.1107	LICENCE HOLDER		1	
TOOL FIXINGS				
BD.3431	Clip, securing Jack		1	ALTERNATIVE TO BD.6811.
BD.6811	Clip and Bracket Assembly, securing Jack		1	
BD.3527	Rubber Socket, housing end of Jack		1	
BD.3535	Clip, securing Rubber Socket for Jack		1	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		1	
		See remarks		3 required when BD.3431 is used. 6 required when BD.6811 is used.
C.5217	Strap around Jack		1	
BD.1501/2	Woodscrew, securing Strap to Spare Wheel Lid		2	
BD.531/1	Cup Washer on Woodscrews		2	
BD.10760	Pad (Foam Rubber) on Spare Wheel Lid, for Jack		1	
BD.3432	Clip, securing Jack Ratchet		2	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.2385	Clip, securing Wheel Brace		4	} NOT REQUIRED WHEN WIRE SPOKE ROAD WHEELS ARE FITTED
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.5211	Clip, securing Grease Gun		2	
BD.3430	Clip, securing Grease Gun		2	Fitted to Chassis No. : 807207 and subs. 817604 and subs.
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.3438	Clip, securing Budget Key		2	
BD.711/3	Screw, Self-Tapping, securing Clips to Cowl around Petrol Filler Neck		2	
SD.1036	BODY MOUNTINGS PACKAGE		1	
BD.6635	Packing, at Mounting of Chassis to Door Sills		4	
BD.2070	Packing Washer (Fibre) at Mounting of Chassis to Door Sills		As req'd	
NS.137/14D	Screw, Set, securing Door Sills to Chassis		4	
BD.541/14	Special Washer, on Setscrews		4	
C.3968/3	Nut, Self-Locking, on Setscrews		4	
FW.106/T	Washer, Plain, under Nuts		4	
BD.4548/1	Alum Packing at mounting of Chassis to Dash		As req'd	
BD.4548/2	Alum Packing at mounting of Chassis to Dash		As req'd	
NS.137/8D	Screw, Set, securing Dash to Chassis		2	
FW.106/T	Washer, Plain, on Setscrews		2	
C.726	Washer, Shakeproof, on Setscrews		2	
BD.6626	Alum Pad at mounting of Chassis to Luggage Compartment		2	
NS.131/16D	Screw, Set, securing Body to Chassis at Luggage Compartment		2	
C.1904	Special Washer, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		2	
BD.6626	Alum Pad at mounting of Chassis to rear end of Body		4	
BD.2070	Packing Washer (Fibre) at mounting of Chassis to rear end of Body		As req'd	
BD.6635	Packing at mounting of Chassis to rear end of Body		As req'd	
NB.137/30D	Bolt, securing rear end of Body to Chassis		2	
NB.137/32D	Bolt, securing rear end of Body to Chassis		2	
C.3968/3	Nut, Self-Locking, on Bolts		4	
FW.106/T	Washer, Plain, under Nuts		8	

BODY AND FITTINGS—DROP HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BODY MOUNTINGS PACKAGE (contd.)				
C.5647	Rubber Plug in mounting holes inside Luggage Compartment		4	
BD.1493/2	Screw, Set, securing Floor to Chassis		2	
FW.104/T	Washer, Plain, on Setscrews		2	
C.724	Washer, Shakeproof, on Setscrews		2	
BD.10280	Felt, 3" × 45", for packing between Door Sills and Chassis		2	
BD.3743	Felt, 12" × 22", for packing between Door Sills and Chassis		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10037	BODY SHELL ASSEMBLY		1	L.H. DRIVE ONLY.
BD.10038	BODY SHELL ASSEMBLY		1	R.H. DRIVE ONLY.
BD.10042	Face Panel Assembly, for L.H. Shut Pillar		1	
BD.10043	Face Panel Assembly, for R.H. Shut Pillar		1	
BD.10042/1	Extension for Shut Face Panel		2	
BD.10321	Closing Plate for L.H. Shut Pillar		1	
BD.10322	Closing Plate for R.H. Shut Pillar		1	
BD.10131	Sealing Plate Assembly for L.H. Shut Pillar		1	
BD.10132	Sealing Plate Assembly for R.H. Shut Pillar		1	
BD.10585	Cover Plate for Door Sills		2	
BD.711/1	Screw, Self-Tapping, securing Cover Plates		4	
BD.9783	Dash Assembly, complete		1	L.H. DRIVE ONLY.
BD.9836	Dash Assembly, complete		1	R.H. DRIVE ONLY.
BD.10948	Dash Assembly, complete		1	L.H. DRIVE ONLY WHEN AUTO TRANSMISSION IS FITTED.
BD.10949	Dash Assembly, complete		1	R.H. DRIVE ONLY WHEN AUTO TRANSMISSION IS FITTED.
BD.9764	Front End Assembly		1	
BD.9980	L.H. Front Wing Assembly		1	
BD.9981	R.H. Front Wing Assembly		1	
BD.8329	Valance Assembly at forward end of L.H. Front Wing		1	
BD.8330	Valance Assembly at forward end of R.H. Front Wing		1	
BD.8965	Felt Strip on forward Wing Valances (1½" × ¼" × 19" long)		2	
BD.9127	Cover Plate, on R.H. Wing Valance, giving access to Air Cleaner		1	
C.5824/2	Screw, Set, securing Cover Plate		3	
BD.5179/2	Screw, Set, securing Cover Plate		5	
BD.4674/2	Clinch Nut for Setscrews		3	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.8693	Support Assembly at forward end of L.H. Front Wing		1	
BD.8695	Bracket Assembly, on L.H. Support, for attachment of Valance Extension		1	
BD.8694	Support Assembly, at forward end of R.H. Front Wing		1	
BD.8696	Bracket Assembly, on R.H. Support, for attachment of Valance Extension		1	
BD.8403	Tie Bar Assembly, between Front Wing Supports		1	
BD.10079	Diaphragm Assembly, between Rear of L.H. Front Wing and Dash		1	
BD.10080	Diaphragm Assembly, between Rear of R.H. Front Wing and Dash		1	
C.5824/2	Screw, Set, securing Diaphragms		12	
FW.104/T	Washer, Plain, on Setscrews		12	
C.724	Washer, Shakeproof, on Setscrews		12	
BD.5183	Ventilator Box Assembly in L.H. Front Wing		1	
BD.5184	Ventilator Box Assembly in R.H. Front Wing		1	
BD.5127	Hinge Assembly for L.H. Ventilator		1	
BD.5128	Hinge Assembly for R.H. Ventilator		1	
BD.10083	Rear End Assembly		1	
BD.9588	Cross Member Assembly for Tonneau		1	
BD.9357	Gutter Assembly around Boot Lid Aperture		1	
BD.10086	Panel for Parcel Tray		1	
BD.9750	Canopy Panel Assembly		1	
BD.9834	Panel Assembly, Upper, for Backlight Surround		1	
BD.9835	Panel, Lower, for Backlight Surround		1	
BD.10579	Screen Surround Assembly		1	
BD.9974	Liner Assembly for L.H. Screen Pillar		1	
BD.9975	Liner Assembly for R.H. Screen Pillar		1	
BD.9354	Bracket Assembly, for attachment of L.H. Sun Visor		1	
BD.9355	Bracket Assembly, for attachment of R.H. Sun Visor		1	
BD.10736	Listing Rod, No. 1		1	
BD.10737	Listing Rod, No. 2		1	
BD.10738	Listing Rod, No. 3		1	
BD.10739	Listing Rod, No. 4		1	
BD.10740	Listing Rod, No. 5		1	
BD.10741	Listing Rod, No. 6		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BODY SHELL ASSEMBLY (continued)				
BD.540/3	Screw, Self-Tapping, securing Listing Rods		16	
BD.8475	L.H. Rear Seat Pan Assembly		1	
BD.8476	R.H. Rear Seat Pan Assembly		1	
BD.9366	Back Panel Assembly for L.H. Rear Seat		1	
BD.9367	Back Panel Assembly for R.H. Rear Seat		1	
BD.10640	Boot Lid Shell Assembly		1	Fitted from Chassis No. : 804001 to 804007. 814001 to 814003.
BD.10584	Boot Lid Shell Assembly		1	Fitted to Chassis No. : 804008 and subs. 814004 and subs.
BD.9397	Petrol Filler Box Assembly		1	
BD.8134	Fixing Plate Assembly for Petrol Filler Lid		1	
BD.4358	Hinge Assembly for Petrol Filler Lid		1	
BD.9773	Bonnet Assembly		1	
BD.10125	Rear Wing Assembly, L.H.		1	} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.10126	Rear Wing Assembly, R.H.		1	
BD.10129	Rear Wing Assembly, L.H.		1	} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.10130	Rear Wing Assembly, R.H.		1	
BD.4512	Steady Assembly for L.H. Rear Wing		1	} FOR USE WITH DISC TYPE ROAD WHEELS ONLY.
BD.4513	Steady Assembly for R.H. Rear Wing		1	
BD.4449	Cover Assembly for L.H. Rear Wing		1	} FOR USE WITH WIRE SPOKE ROAD WHEELS ONLY.
BD.4450	Cover Assembly for R.H. Rear Wing		1	
BD.7769	Moulding on L.H. Rear Wing		1	
BD.7770	Moulding on R.H. Rear Wing		1	
BD.10042	FACE PANEL ASSEMBLY FOR L.H. SHUT PILLAR		1	
BD.10043	FACE PANEL ASSEMBLY FOR R.H. SHUT PILLAR		1	
BD.10550	Striker for L.H. Door Lock		1	
BD.10551	Striker for R.H. Door Lock		1	
BD.9829	Tapped Plate for fixing of Strikers		2	
BD.9830	Retainer for Tapped Plate on L.H. Shut Pillar		1	
BD.9831	Retainer for Tapped Plate on R.H. Shut Pillar		1	
BD.10930	Packing for Door Lock Strikers		As req'd	
BD.11289	Screw, Set, securing Strikers		4	
BD.2906/5	Washer, Shakeproof Countersunk, on Setscrews		4	
BD.10131	SEALING PLATE ASSEMBLY FOR L.H. SHUT PILLAR		1	
BD.10132	SEALING PLATE ASSEMBLY FOR R.H. SHUT PILLAR		1	
BD.9317/4	Seal (Sponge Rubber) on Sealing Plate ($\frac{1}{4}$ " \times $1\frac{1}{8}$ " \times 27")		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BD.9783	DASH ASSEMBLY, COMPLETE		1	FOR L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.9836	DASH ASSEMBLY, COMPLETE		1	FOR R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.11052	Panel Assembly for Dash Front		1	FOR R.H. DRIVE CARS ONLY.
BD.11053	Panel Assembly for Dash Front		1	
BD.10942	Extension Assembly for Dash Front Panel		1	FOR L.H. DRIVE CARS ONLY.
BD.9837	Upper Panel for Dash		1	
BD.10939	Centre Panel for Dash		1	FOR R.H. DRIVE CARS ONLY.
BD.10934	Panel Assembly for Clutch Housing		1	
BD.10014	Retainer for Felt Seal (Pedal)		1	FOR L.H. DRIVE CARS ONLY.
BD.10016	Felt Seal for Pedal		1	
BD.10015	Retainer for Felt Seal (Pedal)		1	FOR R.H. DRIVE CARS ONLY.
BD.10689	Felt Seal for Pedal		1	
BD.10802	Bracket, Upper, supporting Steering Column		1	FOR L.H. DRIVE CARS ONLY.
BD.9133	Tapped Plate for mounting of Steering Column		2	
NS.131/4D	Screw, Set, securing Support Bracket		2	FOR R.H. DRIVE CARS ONLY.
C.725	Washer, Shakeproof, on Setscrews		2	
BD.9121	Support Bracket for Steering Column		2	FOR L.H. DRIVE CARS ONLY.
BD.10026	Support Bracket, L.H., for Steering Column		1	
BD.10027	Support Bracket, R.H., for Steering Column		1	FOR R.H. DRIVE CARS ONLY.
BD.10019	Side Structure Assembly at L.H. side of Dash		1	
BD.10020	Side Structure Assembly at R.H. side of Dash		1	FOR L.H. DRIVE CARS ONLY.
BD.10051	Beam Panel Assembly		1	
BD.10315	Support for Rear L.H. side of Beam Panel		1	FOR R.H. DRIVE CARS ONLY.
BD.10316	Support for Rear R.H. side of Beam Panel		1	
BD.10053	Tie Plate Assembly for Beam Panel		1	FOR L.H. DRIVE CARS ONLY.
BD.10055	Bracket Assembly for Bonnet Lock Control		1	
BD.10061	Closing Panel from R.H. Wing to Dash		1	FOR R.H. DRIVE CARS ONLY.
BD.10521	Closing Panel, from L.H. Wing to Dash		1	
BD.5603	Mounting Plate Assembly for Door Hinges		4	SELECTIVE THICKNESSES.
BD.4555	Shim for Lower Door Hinges	As req'd	1	
BD.4701/1	Shim for Upper Door Hinges (20 s.w.g.)	As req'd	1	
BD.4701/2	Shim for Upper Door Hinges (14 s.w.g.)	As req'd	1	
FS.104/5D	Screw, Set, securing Mounting Plates to Dash Structure		16	
FN.104/L	Nut on Setscrews		16	
C.724	Washer, Shakeproof, under Nuts		16	
BD.10201	Hinge Assembly for Bonnet		2	
BD.10948	DASH ASSEMBLY, COMPLETE		1	FOR L.H. DRIVE CARS FITTED WITH AUTO TRANSMISSION.
BD.10949	DASH ASSEMBLY, COMPLETE		1	FOR R.H. DRIVE CARS FITTED WITH AUTO TRANSMISSION.
BD.11044	Panel Assembly for Dash Front		1	FOR L.H. DRIVE CARS ONLY.
BD.10950	Panel Assembly for Dash Front		1	
BD.9838	Upper Panel for Dash		1	FOR R.H. DRIVE CARS ONLY.
BD.9825	Centre Panel for Dash		1	
BD.10952	Panel Assembly for Clutch Housing		1	FOR L.H. DRIVE CARS ONLY.
BD.10690	Retainer for Felt Seal (Pedal)		1	
BD.9121	Felt Seal for Pedal		1	FOR R.H. DRIVE CARS ONLY.
BD.10026	Support Bracket for Steering Column		2	
BD.10027	Support Bracket, L.H., for Steering Column		1	FOR L.H. DRIVE CARS ONLY.
BD.10019	Support Bracket, R.H., for Steering Column		1	
BD.10020	Side Structure Assembly at L.H. side of Dash		1	FOR R.H. DRIVE CARS ONLY.
BD.10020	Side Structure Assembly at R.H. side of Dash		1	
BD.10715	Beam Panel Assembly		1	FOR L.H. DRIVE CARS ONLY.
BD.11135	Beam Panel Assembly		1	
BD.10315	Support for Rear L.H. side of Beam Panel		1	FOR R.H. DRIVE CARS ONLY.
BD.10316	Support for Rear R.H. side of Beam Panel		1	
BD.10716	Tie Plate Assembly for Beam Panel		1	FOR L.H. DRIVE CARS ONLY.
BD.10055	Bracket Assembly for Bonnet Lock Control		1	
BD.10061	Closing Panel from R.H. Wing to Dash		1	FOR R.H. DRIVE CARS ONLY.
BD.10521	Closing Panel from L.H. Wing to Dash		1	
BD.5603	Mounting Plate Assembly for Door Hinges		4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
DASH ASSEMBLY, COMPLETE (cont'd)				
BD.4555	Shim for Lower Door Hinges		As req'd	} SELECTIVE THICKNESSES.
BD.4701/1	Shim for Upper Door Hinges (20 s.w.g.)		As req'd	
BD.4701/2	Shim for Upper Door Hinges (14 s.w.g.)		As req'd	
FS.104/5D	Screw, Set, securing Mounting Plate to Dash Structure		16	
FN.104/L	Nut on Setscrews		16	
C.724	Washer, Shakeproof, under Nuts		16	
BD.10201	Hinge Assembly for Bonnet		2	
FS.104/4D	Screw, Set, securing Bonnet Hinges to Dash		8	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.11009	Foot Rest, for operation of Headlamp Dipper Switch		1	} FOR L.H. DRIVE CARS ONLY.
BD.11010	Stud Plate Assembly, securing Foot Rest		1	
BD.11052	FRONT PANEL ASSEMBLY FOR DASH		1	FOR L.H. DRIVE CARS NOT FITTED WITH AUTOMATIC TRANSMISSION
BD.11053	FRONT PANEL ASSEMBLY FOR DASH		1	FOR R.H. DRIVE CARS NOT FITTED WITH AUTOMATIC TRANSMISSION
BD.9121	Support Bracket for Steering Column		2	FOR L.H. DRIVE CARS ONLY.
BD.10026	Support Bracket, L.H., for Steering Column		1	} FOR R.H. DRIVE CARS ONLY.
BD.10027	Support Bracket, R.H., for Steering Column		1	
BD.11044	FRONT PANEL ASSEMBLY FOR DASH		1	FOR L.H. DRIVE CARS FITTED WITH AUTOMATIC TRANSMISSION.
BD.9121	Support Bracket for Steering Column		1	
BD.10053	TIE PLATE ASSEMBLY FOR BEAM PANEL		1	NOT REQUIRED WHEN AUTO TRANSMISSION IS FITTED.
BD.10055	Bracket Assembly for Bonnet Lock Control		1	
BD.10716	TIE PLATE ASSEMBLY FOR BEAM PANEL		1	FOR USE ONLY WHEN AUTO TRANSMISSION IS FITTED.
BD.10055	Bracket Assembly for Bonnet Lock Control		1	
BD.9764	FRONT END ASSEMBLY		1	
BD.10368	Dash Top Assembly		1	
BD.9980	Front Wing Assembly, L.H.		1	
BD.9981	Front Wing Assembly, R.H.		1	
BD.2489	Fairing Panel for Front Wings		1	
BD.10081	Face Plate, on L.H. Front Wing, for Door Hinges		1	
BD.10082	Face Plate, on R.H. Front Wing, for Door Hinges		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10368	DASH TOP ASSEMBLY		1	
BD.4140	Front Panel		1	
BD.10367	Shroud Panel		1	
BD.9980	L.H. FRONT WING ASSEMBLY		1	
BD.9981	R.H. FRONT WING ASSEMBLY		1	
BD.9728	Container, on L.H. Front Wing, for Headlamp Light Unit		1	
BD.9745	Container, on R.H. Front Wing, for Headlamp Light Unit		1	
C.7284	Casing, on Front Wings, for Sidelamps		2	
BD.9984	Valance Assembly, along top of L.H. Front Wing		1	
BD.9985	Valance Assembly, along top of R.H. Front Wing		1	
BD.2561	Motif, at top of Headlamp Containers		2	
BD.2563/1	Screw, Set (Special), securing Motifs		4	
FW.105/T	Washer, Plain, on Setscrews		8	
AW.104/T	Washer, Plain, on Setscrews		4	
BD.8695	BRACKET ASSEMBLY, UNDER L.H. FRONT WING, FOR ATTACHMENT OF WING SUPPORT		1	
BD.8696	BRACKET ASSEMBLY, UNDER R.H. FRONT WING, FOR ATTACHMENT OF WING SUPPORT		1	
NS.125/4D	Screw, Set, securing Brackets to Front Wings through Headlamp Containers		12	
FW.104/T	Washer, Plain, on Setscrews		24	
NN.125/L	Nut, on Setscrews		12	
C.724	Washer, Shakeproof, under Nuts		12	
BD.8693	SUPPORT ASSEMBLY, UNDER L.H. FRONT WING		1	
BD.8694	SUPPORT ASSEMBLY, UNDER R.H. FRONT WING		1	
BD.2070	Washer, Kautex, between Front Wing Supports and attachment Brackets		As req'd	
NS.131/9D	Screw, Set, securing Supports to attachment Brackets		4	NOTE : If more than 4 Kautex Washers are fitted, use Setscrews NS.131/12D.
FW.105/T	Washer, Plain, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		4	
NB.131/8D	Bolt, securing Supports to Chassis		4	
FW.105/T	Washer, Plain, on Bolts		8	
NN.131/L	Nut, on Bolts		4	
C.725	Washer, Shakeproof, under Nuts		4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BD.8403	TIE BAR ASSEMBLY, BETWEEN FRONT WINGS		1	
NB.131/15D	Bolt , securing Tie Bar to Wing Supports		4	
NB.131/26D	Bolt , securing Tie Bar to Wing Supports		4	
BD.8701	Distance Piece on Bolts		8	
FW.105/T	Washer , Plain, on Bolts		12	
NN.131/L	Nut , on Bolts		8	
C.725	Washer , Shakeproof, on Bolts		8	
BD.8626	VALANCE ASSEMBLY, ALONG TOP OF L.H. FRONT WING		1	
BD.8399	Support , between L.H. Front Wing and Chassis Frame		1	
BD.9985	VALANCE ASSEMBLY, ALONG TOP OF R.H. FRONT WING		1	
BD.8400	Support , between R.H. Front Wing and Chassis Frame		1	
BD.8329	VALANCE ASSEMBLY AT FORWARD END OF L.H. FRONT WING		1	
BD.8330	VALANCE ASSEMBLY AT FORWARD END OF R.H. FRONT WING		1	
BD.8695	Felt ($1\frac{1}{2}'' \times \frac{1}{4}'' \times 19''$) on front face of forward Wing Valance, for mounting of Radiator		2	
NS.125/4D	Screw , Set, securing Forward Valances to Wing Supports		2	
FW.104/T	Washer , Plain, on Setscrews		4	
NN.125/L	Nut , on Setscrews		2	
C.724	Washer , Shakeproof, under Nuts			

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BD.9127	COVER PLATE, UNDER R.H. FRONT WING, GIVING ACCESS TO AIR CLEANER		1	
C.5824/2	Screw, Set, securing Cover Plate		3	
BD.5179/2	Screw, Set, securing Cover Plate		5	
FW.104/T	Washer, Plain, on Setscrews		8	
C.724	Washer, Shakeproof, on Setscrews		8	
BD.10079	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF L.H. FRONT WING AND DASH		1	
BD.10080	DIAPHRAGM ASSEMBLY, BETWEEN REAR OF R.H. FRONT WING AND DASH		1	
BD.10704/2	Sponge Rubber, between edge of Diaphragm and Wings ($\frac{1}{2}'' \times 1\frac{3}{8}'' \times 32''$)		2	
BD.10704/3	Sponge Rubber, between edge of Diaphragm and Wings ($\frac{1}{2}'' \times 1\frac{3}{8}'' \times 8''$)		2	
BD.5188	VENTILATOR DOOR ASSEMBLY IN FRONT WINGS		2	
AN.102/L	Nut, securing Doors to Hinge Plates		6	
AW.102/T	Washer, Plain, under Nuts		6	
C.723	Washer, Shakeproof, under Nuts		6	
BD.5190	SEAL FOR WING VENTILATOR DOORS		2	
BD.5189	GAUZE ASSEMBLY ON WING VENTILATOR DOORS		2	
BD.711/6	Screw, Self-Tapping, securing Gauze to Doors		4	
BD.5183	VENTILATOR BOX ASSEMBLY IN L.H. FRONT WING		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.5184	VENTILATOR BOX ASSEMBLY IN R.H. FRONT WING		1	
BD.5127	Hinge Assembly, on L.H. Ventilator Box		1	
BD.5128	Hinge Assembly, on R.H. Ventilator Box		1	
BD.648	Spring Plunger, on Hinges		2	
R.303/5W	Rivet, securing Plungers		2	
C.3350	Washer (Brass) at each side of Plungers		4	
BD.650	Loose Head for end of Rivets (WB.9223/V68)		2	
AS.502/3H	Screw, Set, securing Hinge to Ventilator Box		6	
AN.102/L	Nut, on Setscrews		6	
AG.102/X	Washer, Spring, under Nuts		6	
BD.5176	Spring, Tension, for Ventilator Doors		2	
BD.5125	Sleeve, housing Springs		2	
L.104/10U	Split Pin, securing Sleeve to side of Ventilator Box		2	
C.3571	Plug, adjusting tension on Springs		As req'd	
BD.3712/1	Adjusting Plate, between Hinge and Ventilator Door (.064" thick)		As req'd	} CHOOSE ADJUSTING PLATE OF DESIRED THICKNESS.
BD.3712/2	Adjusting Plate, between Hinge and Ventilator Door (.048" thick)		As req'd	
BD.3712/3	Adjusting Plate, between Hinge and Ventilator Door (.036" thick)		As req'd	
BD.3712/4	Adjusting Plate, between Hinge and Ventilator Door (.022" thick)		As req'd	
C.8886/1	CAR HEATER ASSEMBLY		1	
C.4391	Sealing Rubber, on Pipes of Heater Unit		2	
FN.104/L	Nut, securing Heater Unit		3	
FW.104/T	Washer, Plain, on Studs of Heater Unit		3	
FG.104/X	Washer, Spring, under Nuts		3	
C.4392	VALVE, CONTROLLING WATER SUPPLY TO HEATER		1	
C.4393	Knob, operating Valve		1	
C.5233/1	Screw, Set, securing Knob to Valve Spindle		1	
C.9552	Bracket, on Water Manifold, for Mounting of Valve		1	
C.4397	HEATER HOSE, FROM WATER MANIFOLD TO CONTROL VALVE		1	
C.8887	HEATER HOSE, FROM CONTROL VALVE TO HEATER UNIT		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8888	HEATER HOSE, FROM HEATER UNIT TO RETURN PIPE		1	
C.2905/1	Clip, securing Hoses to Control Valve, Heater Unit and Front Return Pipe		4	
C.2905/2	Clip, securing Hoses to Water Manifold and Control Valve.		2	
NS.319/4H	Screw, Set, securing Earth Lead for Heater Motor		1	
NN.119/L	Nut, on Setscrews		1	
C.723/A	Washer, Shakeproof, under Nut		1	
C.4543	RHEOSTAT SWITCH, OPERATING HEATER MOTOR (LUCAS 78262/B)		1	
	NOTE : FOR HEATER CONNECTIONS ON ENGINE, SEE PAGE 12.			
	DEMISTER CONNECTIONS BEHIND INSTRUMENT PANEL			
BD.6521	DEMISTER OUTLET ASSEMBLY FOR HEATER UNIT		1	
BD.711/1	Screw, Self-Tapping, securing Outlet to Heater Unit		2	
BD.9073	AIR DUCT AND BRACKET ASSEMBLY FOR L.H. SIDE OF WINDSCREEN		1	
BD.9074	AIR DUCT AND BRACKET ASSEMBLY FOR R.H. SIDE OF WINDSCREEN		1	
NS.131/4D	Screw, Set, securing Air Ducts		2	
C.725	Washer, Shakeproof, on Setscrews		2	
BD.5281/7	HOSE, 13" LONG, CONNECTING DEMISTER OUTLET TO L.H. AIR DUCT		1	
BD.5281/8	HOSE, 16" LONG, CONNECTING DEMISTER OUTLET TO R.H. AIR DUCT		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BD.6429	ESCUTCHEON, ON TOP PANEL ABOVE INSTRUMENT BOARD, FOR DEMISTER AIR TO WINDSCREENS		2	
BD.9832	L.H. DRIP MOULDING		1	
BD.9833	R.H. DRIP MOULDING		1	
BD.1814/2	Rivet, securing Drip Mouldings		32	
BD.10062	BATTERY BOX ASSEMBLY IN L.H. FRONT WING		1	} FOR L.H. DRIVE CARS ONLY.
BD.10063	BATTERY BOX ASSEMBLY, IN R.H. FRONT WING		1	
BD.6596 R.102/4W	Spring, on Battery Box, for "Dzus" Fasteners Rivet, securing Springs		4 8	
BD.10304	BATTERY BOX ASSEMBLY IN L.H. FRONT WING		1	} FOR R.H. DRIVE CARS ONLY.
BD.10305	BATTERY BOX ASSEMBLY IN R.H. FRONT WING		1	
BD.6596 R.102/4W	Spring, on Battery Box, for "Dzus" Fasteners Rivet, securing Springs		4 8	
BD.10065	Rubber Pad ($1\frac{1}{8}'' \times 9\frac{1}{2}'' \times 11''$) for Battery Seating		2	
BD.10069	DOOR ASSEMBLY FOR L.H. BATTERY BOX		1	
BD.10071	DOOR ASSEMBLY FOR R.H. BATTERY BOX		1	
BD.8580	"Dzus" Fastener on Battery Box Doors (AW.6 $\frac{1}{2}$ -45)		4	
BD.8581	Grommet, securing "Dzus" Fasteners (GA.6 $\frac{1}{2}$ -375)		4	
BD.8583	Clip on Battery Box Doors		4	
BD.1814/2	Rivet, securing Clips		8	
BD.8582/2	Sealing Strip (Sponge Rubber $\frac{3}{8}'' \times \frac{1}{4}'' \times 54''$) around Battery Box Doors		2	
BD.9104	Steady Bracket, for fixing of Battery Box		1	
BD.10288	Steady Bracket, for fixing of Battery Box		1	
NS.131/4D	Screw, Set, securing Steady Brackets to Chassis		2	
C.725	Washer, Shakeproof, on Setscrews		2	
UFS.511/4H	Screw, Set, securing Battery Boxes		8	
UFN.111/L	Nut on Setscrews		8	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	No. Plate	Unit No. per	Remarks
BD.10076	CLAMP PLATE, SECURING BATTERY IN BOX		2	
C.2653	Rubber Block between Clamp Plate and Batteries		4	
BD.10301	Fixing Rod Assembly , retaining Battery in Box		4	
NN.125/K	Nut (Brass) on Fixing Rods		4	
BD.10927	SHIELD ASSEMBLY, ON WING VALANCE, PROTECTING DISTRIBUTOR		1	
BD.3143	Felt, $\frac{3}{8}$" x 1" x 15" , for Shield		1	
BD.10928	BRACKET ASSEMBLY FOR MOUNTING OF DISTRIBUTOR SHIELD		2	
NS.125/5D	Screw, Set , for fixing of Distributor Shield		3	
C.724	Washer, Shakeproof , on Setscrews		3	
BD.542/3	Washer, Special , on Setscrews to Brackets		2	
FW.104/T	Washer, Plain , on Setscrew		1	
NN.125/L	Nut , on Setscrew		1	
BD.8986/1	Screw, Set , securing Distributor Shield to Battery Box Extension		1	
AW.102/T	Washer, Plain , on Setscrew		1	
NN.119/L	Nut , on Setscrew		1	
C.723/A	Washer, Shakeproof , under Nut		1	
BD.9246	PLINTH PANEL ASSEMBLY, BEHIND L.H. FRONT BUMPER BAR		1	} FOR USE WHEN FOGLIGHTS ARE REQUIRED.
BD.9247	PLINTH PANEL ASSEMBLY, BEHIND R.H. FRONT BUMPER BAR		1	
BD.10248	PLINTH PANEL ASSEMBLY, BEHIND L.H. FRONT BUMPER BAR		1	} REQUIRED WHEN FOGLIGHTS ARE NOT FITTED.
BD.10249	PLINTH PANEL ASSEMBLY, BEHIND R.H. FRONT BUMPER BAR		1	
BD.8598	Piping , between Plinth Panel and Front Wings (19½" long)		2	
NS.125/5D	Screw, Set , securing Plinth Panels to Front Wings		8	
FW.104/T	Washer, Plain , on Setscrews		8	
NN.125/L	Nut , on Setscrews		8	
C.724	Washer, Shakeproof , under Nuts		8	
BD.9292	Bracket , for attachment of Plinth Panels to Front Bumper		6	
NN.125/L	Nut , securing Brackets to Bumpers		6	
FW.104/T	Washer, Plain , under Nuts		6	
C.724	Washer, Shakeproof , under Nuts		6	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9301	Bolt (Shouldered) securing Plinth Panels to Brackets		6	
BD.541/13	Washer, Special, under Head of Shouldered Bolts		6	
BD.4984	Washer (Rubber) between Brackets on Bumpers and Brackets on Plinth Panels		6	
NN.119/L	Nut, on Shouldered Bolts		6	
BD.4983	Washer, Special, under Nuts		6	
BD.9238	FRONT BUMPER, COMPLETE (PYRENE D.98/07578)		1	
C.9751	Bar only, Front Bumper (70/90366)		1	
C.9754	Support Bracket, at R.H. side of Front Bumper (70/51039)		1	
C.9752	Outrigger Bracket, connecting R.H. Support Bracket with Bumper (70/51042)		1	
C.9755	Support Bracket, at L.H. side of Front Bumper (70/51040)		1	
C.9753	Outrigger Bracket, connecting L.H. Support Bracket with Bumper (70/51041)		1	
BD.9874	Spacer, between Outrigger Bracket and Bumper (70/50992)		2	
BD.9871	Bolt, securing Outrigger Brackets to Bumper (70/50991)		2	
FW.206/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut, on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9756	Over Rider Assembly, on Bumpers (70/90361)		2	
BD.9868/1	Beading, between Over Riders and Bumper (6 $\frac{1}{2}$ " long) (70/50881)		4	
FW.107/T	Washer, Plain, on Over Rider Studs,		2	
NN.143/L	Nut, securing Over Riders to Bumper		2	
FG.107/X	Washer, Spring, under Nuts		2	
BD.9856	Panel, for mounting of Front Number Plate (70/50932)		1	
BD.9872	Distance Piece, between Front Number Plate Panel and Bumper (70/50962)		2	
BD.9869	Bolt, securing Number Plate Panel to Front Bumper (70/50945)		2	
FW.205/T	Washer, Plain, on Bolts		2	
NN.131/L	Nut, on Bolts		2	
FG.105/X	Washer, Spring, under Nuts		2	
NS.150/12D	Screw, Set, securing Front Bumper Supports to Chassis Frame		6	
FW.208/T	Washer, Plain, on Setscrews		6	
C.728	Washer, Shakeproof, on Setscrews		6	
BD.9946	L.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
BD.9947	R.H. REAR BUMPER, COMPLETE (PYRENE D.98/07579)		1	
C.8896	Bar only, L.H. Rear Bumper (70/51136)		1	
C.8897	Bar only, R.H. Rear Bumper (70/51135)		1	
C.8586	Support Bracket, for L.H. Rear Bumper (70/51031)		1	
C.8587	Outrigger Bracket, Inner, linking outer Bracket to L.H. Support Bracket (70/51033)		1	
C.8588	Outrigger Bracket, Outer, connecting Bumper with L.H. Inner Outrigger Bracket (70/51035)		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
REAR BUMPER, COMPLETE (PYRENE D.98/07579) (Continued)				
C.8341	Support Bracket, for R.H. Rear Bumper (70/51032)		1	
C.8342	Outrigger Bracket, Inner, linking Outer Bracket to R.H. Support Bracket (70/51034)		1	
C.8343	Outrigger Bracket, Outer, connecting Bumper with R.H. Inner Outrigger Brackets (70/51036)		1	
NB.131/8D	Bolt, at connection of Inner and Outer Outrigger Brackets		4	
NN.131/L	Nut, on Bolts		4	
FG.105/X	Washer, Spring, under Nuts		4	
C.8344	Spacer, between Outrigger Brackets and Bumper (70/51018)		2	
BD.9871	Bolt, securing Outrigger Brackets to Bumper (70/50991)		2	
FW.106/T	Washer, Plain, on Bolts		2	
NN.137/L	Nut, on Bolts		2	
FG.106/X	Washer, Spring, under Nuts		2	
C.9689	Over Rider Assembly, on L.H. Rear Bumper (70/90362)		1	
C.8346	Over Rider Assembly, on R.H. Rear Bumper (70/90363)		1	
BD.9868/1	Beading, at Inner edge of Over Riders (6 $\frac{5}{8}$ " long) (70/50881)		2	
BD.9868/2	Beading, at Outer edge of Over Riders (5 $\frac{1}{2}$ " long) (70/51044)		2	
C.8348	Bolt (Long) on Over Riders (70/51024)		2	
C.8349	Bolt (Short) on Over Riders (70/51023)		2	
C.8351	Spire Nut, securing Bolts to Over Riders (RM.59590)		4	
C.8347	Spacer, between Bumpers and Support Brackets (70/51017)		2	
FW.206/T	Washer, Plain, on Bolts		4	
NN.137/L	Nut, securing Over Riders and Support Brackets to Bumpers		4	
FG.106/X	Washer, Spring, under Nuts		4	
BD.10330	GROMMET, SEALING APERTURE IN REAR WINGS, FOR REAR BUMPER OUTRIGGER BRACKETS		2	
BD.10331	GROMMET, SEALING APERTURE IN TONNEAU, FOR REAR BUMPER SUPPORT BRACKETS		2	
NB.143/26D	Bolt, securing Rear Bumpers to Chassis Frame		6	
FW.107/T	Washer, Plain, on Bolts		6	
NN.143/L	Nut, on Bolts		6	
C.727	Washer, Shakeproof, under Nuts		6	
BD.9773	BONNET ASSEMBLY		1	
BD.9164	AIR DEFLECTOR PANEL AT L.H. SIDE OF RADIATOR GRILLE APERTURE		1	
BD.9165	AIR DEFLECTOR PANEL AT R.H. SIDE OF RADIATOR GRILLE APERTURE		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10803	BRACKET, ON BONNET, FOR BONNET PROP PIVOT		1	
BD.10858	Pin, retaining Bonnet Prop in Pivot Bracket		1	
BD.1708/I	Washer, Spring, on Pivot Pin		2	
FW.104/T	Washer, Plain, on Pivot Pin		1	
L.102/6U	Split Pin, through Pivot Pin		1	
BD.10123	PROP ASSEMBLY, HOLDING BONNET IN "OPEN" POSITION		1	
BD.11095	CLIP AND BRACKET ASSEMBLY, ON BONNET, FOR PROP WHEN NOT IN USE		1	
C.10144	BRACKET, ON RADIATOR, FOR PROP WHEN BONNET IS IN "OPEN" POSITION		1	
BD.9779	MOULDING ASSEMBLY DOWN CENTRE OF BONNET		1	
BD.2248	Bolt, Special, securing Moulding to Bonnet		10	
AW.102/L	Washer, Plain, on Bolts		10	
NN.116/L	Nut, on Bolts		10	
C.723	Washer, Shakeproof, under Nuts		10	
BD.10201	HINGE ASSEMBLY FOR BONNET		2	
NS.125/4D	Screw, Set, securing Hinges		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	
BD.4616	BUFFER, IN FLANGE OF FRONT WINGS, FOR BONNET REST		6	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8428	MOUNTING PLATE ASSEMBLY FOR BONNET CATCH		1	
NS.125/6D NN.125/L C.724	Screw, Set, securing Mounting Plate Nut, on Setscrews Washer, Shakeproof, under Nuts		3 3 3	
BD.2950	BONNET CATCH ASSEMBLY		1	
BD.2952 NS.125/4D C.724	Guide Plate, for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews		1 3 3	
BD.8432	HOOK AND STRIKER ASSEMBLY FOR BONNET CATCH		1	
NB.125/4D FW.104/T NN.125/L C.724	Bolt, securing Hook and Striker, also Deflector Panels to Bonnet Washer, Plain, on Bolts Nut, on Bolts Washer, Shakeproof, under Nuts		12 12 12 12	
BD.2954	CONTROL CABLE RELEASING BON- NET CATCH (COMPLETE WITH KNOB AND FITTINGS)		1	
C.3880 FW.104/T NN.125/L C.724 C.4443 NN.125/L	Abutment Post, for Cable Adjuster Washer, Plain, at bottom of Abutment Post Nut, securing Abutment Post to Bracket Washer, Shakeproof, under Nut Adjuster at end of Bonnet Control Cable Nut, locking Adjuster		1 1 1 1 1 1	
BD.9262	RADIATOR GRILLE ON BONNET		1	
NS.119/3D C.723/A	Screw, Set, securing Radiator Grille Washer, Shakeproof, on Setscrews		6 6	
BD.9431	BADGE ("JAGUAR") ON RADIATOR GRILLE		1	
AW.102/T AN.102/L C.723	Washer, Plain, on Badge Stud Nut, securing Badge to Radiator Grille Washer, Shakeproof, under Nut		1 1 1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.7967	WINDSCREEN GLASS		2	
BD.7960	Seal Assembly, for Screen Glasses		1	
BD.7961	Embellisher, for L.H. Screen Glass		1	
BD.7962	Embellisher, for R.H. Screen Glass		1	
BD.7963	Embellisher, Outer, at centre of Screen Glasses		1	
BD.7964	Embellisher, Inner, at centre of Screen Glasses		1	
BD.9629	SUN VISOR ASSEMBLY COMPLETE		2	
BD.9630	Tinted Perspex, for Sun Visors		2	
BD.9631	Hinge Assembly		2	
BD.3265/2	Screw, Set, securing Sun Visors		6	
BD.8728	INSTRUMENT BOARD ASSEMBLY		1	
BD.8639	Diaphragm, on Instrument Board, for supporting L.H. Facia Board		1	
BD.8640	Diaphragm, on Instrument Board, for supporting R.H. Facia Board		1	
BD.8691/2	Screw, securing Diaphragm		2	
BD.8483	Spire Nut, for Screws		2	
BD.8897	Screw (knurled) for attachment of Instrument Board		2	
C.3563	Washer (Fibre) on Screws		2	
BD.8714	L.H. FACIA BOARD ASSEMBLY		1	} FITTED TO L.H. DRIVE CARS ONLY.
BD.8717	R.H. FACIA BOARD ASSEMBLY		1	
BD.8717/2	Lid for Cubby Box on R.H. Facia Board		1	
BD.3334	Stop Hinge, for Cubby Box Lid		2	
BD.1497/1	Woodscrew, securing Hinges		12	
BD.656/1	Ball Catch, retaining Lid in closed position		1	
BD.656/2	Plate for Ball Catch		1	
M.102/3K	Woodscrew, securing Plate		2	
BD.5300	Lock on Cubby Box Lid (WB.7/5631)		1	
BD.8072	Barrel for Cubby Box Lock (WB.7/5410)		1	
BD.1501/4	Woodscrew, securing Lock		3	
BD.4717	Knob, on Cubby Box Lid		1	
BD.539/16	Screw, Self-Tapping, securing Knob to Cubby Box Lid		2	
BD.9234	Quadrant, for R.H. Cubby Box Lid		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8716	L.H. FACIA BOARD ASSEMBLY		1	} FITTED TO R.H. DRIVE CARS ONLY.
BD.8715	R.H. FACIA BOARD ASSEMBLY		1	
BD.8716/2	Lid for Cubby Box on L.H. Facia Board		1	
BD.3334	Stop Hinge, for Cubby Box Lid		2	
BD.1497/1	Woodscrew, securing Hinges		12	
BD.656/1	Ball Catch, retaining Lid in closed position		1	
BD.656/2	Plate, for Ball Catch		1	
M.102/3K	Woodscrew, securing Plate		2	
BD.5300	Lock, on Cubby Box (WB.7/5631)		1	
BD.8072	Barrel, for Cubby Box Lock (7/5410)		1	
BD.1501/4	Woodscrew, securing Lock		3	
BD.4717	Knob, on Cubby Box Lid		1	
BD.539/16	Screw, Self-Tapping, securing Knob to Cubby Box Lid		2	
BD.9235	Quadrant, for Cubby Box Lid		1	
BD.8705	MOUNTING PLATE FOR L.H. FACIA BOARD		1	
BD.8706	MOUNTING PLATE FOR R.H. FACIA BOARD		1	
BD.8721	CUBBY BOX ASSEMBLY BEHIND L.H. FACIA BOARD		1	FOR R.H. DRIVE CARS ONLY.
BD.8722	CUBBY BOX ASSEMBLY BEHIND R.H. FACIA BOARD		1	FOR L.H. DRIVE CARS ONLY.
BD.1502/1	Woodscrew, securing Cubby Boxes		10	
BD.9276	PANEL ASSEMBLY (HIDE COVERED) BETWEEN TOP OF INSTRUMENT PANEL AND WINDSCREEN		1	
BD.6429	Escutcheon, in Top Panel, for Demister Air Outlet to Windscreen		2	
M.104/5R	Woodscrew, securing Panel		4	
BD.9038	SCREEN RAIL FACIA (COMPLETE WITH RECEPTACLE FOR ASH TRAY)		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9151	ASH TRAY FOR SCREEN RAIL FACIA		2	
BD.8820	DRAWER AT BOTTOM OF INSTRUMENT BOARD (NOT REQUIRED WHEN RADIO IS FITTED)		1	
BD.4717	Knob on Front of Drawer		1	
BD.539/16	Screw, Self-Tapping, securing Knob		2	
BD.8823	Slide (Male) on Drawer		2	
BD.1606/5	Woodscrew, securing Male Slides to Drawer		6	
BD.6086	Stop on Drawer		1	
BD.1501/1	Screw, securing Stop		2	
BD.8821	Slide (Female) on sides of Aperture for Drawer		2	
NS.513/4H	Screw, Set, securing Female Slides		4	
AW.104/T	Washer, Plain, on Setscrews		4	
NN.113/L	Nut, on Setscrews		4	
C.721	Washer, Shakeproof, under Nuts		4	
BD.9300	FIXED FLOOR ASSEMBLY (STEEL)		1	
BD.6244	Tapped Plate, for attachment of Seat Slides		4	
NS.525/5H	Screw, Set, securing Tapped Plates to underside of Fixed Floor		8	
BD.9409	Asbestos Sheet under Fixed Floor		2	
BD.9410	Plate, holding Asbestos Sheets		2	
BD.524/7	Rivet, Bifurcated, securing Asbestos Sheets and Plates to Fixed Floor		22	
BD.1493/2	Screw, Set, securing Fixed Floor to Chassis Frame		2	
FW.104/T	Washer, Plain, on Setscrews		2	
C.724	Washer, Shakeproof, on Setscrews		2	
BD.9827	L.H. FRONT FLOOR BOARD ASSEMBLY		1	} REQUIRED FOR L.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.9828	R.H. FRONT FLOOR BOARD ASSEMBLY		1	
BD.9415	Adaptor Plate, around Jack Cover Aperture, on Floorboards		2	
M.106/3R	Woodscrew, securing Adaptor Plates		20	
BD.9448	Spire Nut, under Floorboards, for fixing of Gearbox Cover		8	
BD.10945	L.H. FRONT FLOOR BOARD ASSEMBLY		1	} REQUIRED FOR R.H. DRIVE CARS ONLY WHEN AUTOMATIC TRANSMISSION IS NOT FITTED.
BD.10946	R.H. FRONT FLOOR BOARD ASSEMBLY		1	
BD.9415	Adaptor Plate, around Jack Cover Aperture, on Floorboards		2	
M.106/3R	Woodscrew, securing Adaptor Plates		20	
BD.9448	Spire Nut, under Floorboards, for fixing of Gearbox Cover		8	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10602	L.H. FRONT FLOOR BOARD ASSEMBLY		1	} REQUIRED ONLY WHEN AUTO TRANSMISSION IS FITTED.
BD.10603	R.H. FRONT FLOOR BOARD ASSEMBLY		1	
BD.9415	Adaptor Plate , around Jack Cover Aperture, on Floorboards		2	
M.106/3R	Woodscrew , securing Adaptor Plates		20	
BD.9448	Spire Nut , under Floorboards, for fixing of Gearbox Cover		8	
BD.8691/4 1861	Screw , Self-Tapping, securing Floorboards at rear Washer , Special, on Self-Tapping Screws		6 6	
BD.9592	Seal (Rubber) on underside of Floorboard, for Handbrake Link		1	
BD.9534	Cover Plate , over redundant hole for Handbrake Link		1	
BD.8691/4	Screw , Self-Tapping, securing Cover Plate to Floorboard		2	
BD.3037	Plate Assembly , covering Jack Aperture in Floorboards		2	
BD.10318	Felt , $\frac{1}{8}$ " x 2" x 26 $\frac{1}{2}$ ", under Floorboards		2	
BD.10319	Felt , $\frac{1}{8}$ " x 2" x 18 $\frac{1}{2}$ ", under Floorboards		2	
BD.10320	Felt , $\frac{1}{8}$ " x 2" x 15", under Floorboards		2	
BD.9283	GEARBOX COVER ASSEMBLY		1	NOT REQUIRED WHEN AUTO TRANSMISSION IS FITTED.
BD.1288/3	Spring Clip , for attachment of Dipstick Inspection Cover		2	
BD.1289/2	Rivet , securing Spring Clips to Gearbox Cover		4	
BD.10524/1	Seal (Sponge Rubber) between Gearbox Cover and Prop Shaft Tunnel (12 $\frac{3}{4}$ " long)		1	
BD.8691/4	Screw , Self-Tapping, securing Gearbox Cover to Floor		8	
BD.8691/5	Screw , Self-Tapping, securing Gearbox Cover to Prop Shaft Tunnel		3	
BD.542/3	Washer , Special, on Screws		11	
BD.6196/2	Screw , Set, securing Gearbox Cover to Clutch Cowl		6	
FW.104/T	Washer , Plain, on Setscrews		6	
C.724	Washer , Shakeproof, on Setscrews		6	
BD.3143	Felt , 1" x 20", under Gearbox Cover		6	As req'd NOT REQUIRED WHEN AUTO TRANSMISSION IS FITTED.
BD.8279	INSPECTION COVER OVER DIPSTICK APERTURE ON GEARBOX COVER		1	NOT REQUIRED WHEN AUTO TRANSMISSION IS FITTED.
BD.1288/1	Fastener Stud , securing Inspection Cover to Gearbox Cover		2	
BD.1288/2	Washer , securing Stud to Inspection Cover		2	
BD.10583	GEARBOX COVER ASSEMBLY		1	FOR USE ONLY WHEN AUTO TRANSMISSION IS FITTED.
BD.10821	INSPECTION COVER ON GEARBOX COVER		3	FOR USE ONLY WHEN AUTO TRANSMISSION IS FITTED.

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
CARPETS FOR L.H. DRIVE CARS				
BD.11310	Carpet Assembly, for L.H. Main Floor		1	
BD.11311	Carpet Assembly, for R.H. Main Floor		1	
BD.11316	Carpet Assembly, for L.H. Pedal Board		1	
BD.11317	Carpet Assembly, for R.H. Toe Board		1	
BD.11168	Carpet Assembly, at L.H. side of Bulkhead, behind Clutch Housing		1	
BD.11170	Carpet Assembly, at R.H. side of Bulkhead, behind Clutch Housing		1	
BD.11314	Carpet Assembly, for Clutch Housing		1	
BD.10685	Carpet Assembly, for Gearbox Cover		1	
BD.11139	Carpet Assembly, for Prop Shaft Tunnel, behind Front Seats		1	
BD.11171	Heel Pad, on Main Floor Carpets		2	
CARPETS FOR R.H. DRIVE CARS				
BD.11312	Carpet Assembly, for L.H. Main Floor		1	
BD.11311	Carpet Assembly, for R.H. Main Floor		1	
BD.11318	Carpet Assembly, for R.H. Pedal Board		1	
BD.11319	Carpet Assembly, for L.H. Toe Board		1	
BD.11169	Carpet Assembly, at L.H. side of Bulkhead, behind Clutch Housing		1	
BD.11170	Carpet Assembly, at R.H. side of Bulkhead, behind Clutch Housing		1	
BD.11315	Carpet Assembly, for Clutch Housing		1	
BD.10685	Carpet Assembly, for Gearbox Cover		1	
BD.11139	Carpet Assembly, on Prop Shaft Tunnel, behind Front Seats		1	
BD.11171	Heel Pad, on Main Floor Carpets		2	
BD.10857	RETAINER, HOLDING DRAUGHT PIPING ON DOOR SILLS		2	
BD.540/3	Screw, Self-Tapping, securing Retainers to Door SilIs		12	
FELT UNDER CARPETS				
BD.11193	Felt (Rubberised) for Pedal Board (18" × 12½")		1	} FITTED TO L.H. DRIVE CARS ONLY.
BD.11194	Felt (Rubberised) for Toe Board (17½" × 13½")		1	
BD.11222	Felt (Rubberised) for Pedal Board (17½" × 13½")		1	} FITTED TO R.H. DRIVE CARS ONLY.
BD.11223	Felt (Rubberised) for Toe Board (18" × 12½")		1	
BD.11195	Felt (Rubberised) for Clutch Housing at top L.H. side (15" × 13½")		1	
BD.11196	Felt (Rubberised) for Clutch Housing at top R.H. side (18½" × 14½")		1	
BD.11197	Felt (Rubberised) for Clutch Housing at front (16" × 10")		1	
BD.11224	Felt (Flintkote) for Clutch Housing at top L.H. side (18½" × 13½")		1	
BD.11225	Felt (Flintkote) for Clutch Housing at top R.H. side (14" × 12½")		1	
BD.11201	Felt (Rubberised) for Bulkhead (8" × 6")		1	} FOR L.H. DRIVE CARS ONLY.
BD.11198	Felt (Rubberised) for Gearbox Cover (27" × 21½")		1	
BD.11226	Felt (Flintkote) for Gearbox Cover (26" × 21½")		1	
BD.11227	Felt (Flintkote) for Gearbox Cover (21" × 21½")		1	
BD.11199	Felt (Rubberised) for Gear Lever Fairing (11" × 9")		1	
BD.11228	Felt (Flintkote) for Gear Lever Fairing (15½" × 9")		1	
BD.11229	Felt (Flintkote) for Gear Lever Fairing at top (11" × 9")		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
FELT MATS				
BD.11172	Mat Assembly , for Luggage Compartment Floor		1	} FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.11173	Mat Assembly , for Front L.H. side of Luggage Compartment		1	
BD.11174	Mat Assembly , at Rear L.H. side of Luggage Compartment		1	
BD.11175	Mat Assembly , at R.H. side of Luggage Compartment		1	
BD.11221	Mat , around Petrol Filler Neck, inside Luggage Compartment		1	
FIXINGS FOR CARPETS				
BD.1286/1	Button , for Fasteners, securing Carpets to Main Floorboards, Pedal Board and Toe Board		14	
BD.1286/2	Socket , securing Buttons to Carpets		14	
BD.1286/3	Stud , receiving Buttons		14	
M.104/4R	Woodscrew , securing Studs to Floorboards		8	
BD.1814/2	Rivet , securing Studs to Pedal and Toe Boards		6	
FIXINGS FOR FELT MATS				
BD.1286/1	Button , for Fastener, securing Mat to Luggage Compartment Floor		4	
BD.1286/2	Socket , securing Buttons to Mat		4	
BD.1286/3	Stud , receiving Buttons		4	
BD.1814/2	Rivet , securing Studs to Luggage Compartment Floor		4	
CASING ASSEMBLY AT L.H. SIDE OF SCUTTLE				
BD.10168	CASING ASSEMBLY AT L.H. SIDE OF SCUTTLE		1	
CASING ASSEMBLY AT R.H. SIDE OF SCUTTLE				
BD.10169	CASING ASSEMBLY AT R.H. SIDE OF SCUTTLE		1	
BD.539/4	Screw , Self-Tapping, securing Scuttle Side Casings		10	
BD.532/1	Cup Washer , on Self-Tapping Screws		10	
TRIM FILLET ENCLOSING CORNERS OF BEAM PANEL				
BD.4789	TRIM FILLET ENCLOSING CORNERS OF BEAM PANEL		2	
BD.540/5	Screw , Self-Tapping, securing Trim Fillets		4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10171	CASING ASSEMBLY AT TOP L.H. SIDE OF SCUTTLE		1	} FOR L.H. DRIVE CARS ONLY.
BD.10174	CASING ASSEMBLY AT TOP R.H. SIDE OF SCUTTLE		1	
BD.8994	Bracket, at L.H. side of Scuttle Top Casing		1	
BD.8995	Bracket, at R.H. side of Scuttle Top Casing		1	
BD.524/3	Rivet, securing Brackets to Casings		6	
BD.539/4	Screw, Self-Tapping, securing Scuttle Top Casings		4	
BD.539/1	Screw, Self-Tapping, securing Scuttle Top Casings		8	
BD.532/1	Cup Washer, on Self-Tapping Screws		12	
BD.10843	CASING ASSEMBLY, CENTRE, AT TOP OF SCUTTLE		1	FOR L.H. DRIVE CARS ONLY.
BD.10176	CASING ASSEMBLY AT TOP L.H. SIDE OF SCUTTLE		1	} FOR R.H. DRIVE CARS ONLY.
BD.10179	CASING ASSEMBLY AT TOP R.H. SIDE OF SCUTTLE		1	
BD.8994	Bracket, at L.H. side of Scuttle Top Casing		1	
BD.8995	Bracket, at R.H. side of Scuttle Top Casing		1	
BD.524/3	Rivet, securing Brackets		6	
BD.539/1	Screw, Self-Tapping, securing Scuttle Top Casings		8	
BD.539/4	Screw, Self-Tapping, securing Scuttle Top Casings		4	
BD.532/1	Cup Washer, on Self-Tapping Screws		12	
BD.10845	CASING ASSEMBLY, CENTRE, AT TOP OF SCUTTLE		1	FOR R.H. DRIVE CARS ONLY.
BD.9105	L.H. FRONT SEAT ASSEMBLY, COMPLETE		1	
BD.9106	R.H. FRONT SEAT ASSEMBLY, COMPLETE		1	

NOTE : BD.9105 and BD.9106 covers the supply of a fully trimmed seat, complete with Base Frame, Squab, Runners, Adjusting Lever and Cushions.

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8613	L.H. FRONT SEAT FRAME AND SQUAB ASSEMBLY		1	
BD.8614	R.H. FRONT SEAT FRAME AND SQUAB ASSEMBLY		1	
	NOTE : BD.8613 and BD.8614 applies to a fully trimmed Seat Squab, complete with Base Frame, Runners, etc., BUT LESS CUSHION.			
BD.9333	L.H. FRONT SEAT BASE FRAME ASSEMBLY		1	
BD.9334	R.H. FRONT SEAT BASE FRAME ASSEMBLY		1	
BD.10969	Lever, for adjustment of L.H. Front Seat		1	
BD.10970	Lever, for adjustment of R.H. Front Seat		1	
BD.6624/2	Pivot Pin, securing Levers to Base Frame		2	
FW.104/C	Washer, on Pivot Pins		2	
FW.104/T	Washer, on Pivot Pins		2	
L.102/6U	Split Pin, securing Pivot Pins to Base Frame		2	
C.3317	Spring, for return of Levers		2	
BD.3255	Pivot Pin, securing Seat Squab to Base Frame		4	
BD.541/10	Washer, Special, on Pivot Pins		8	
C.4202/2	Nut, on Pivot Pins		4	
FG.105/X	Washer, Spring, under Nuts		4	
BD.9617	L.H. FRONT SEAT SQUAB FRAME ASSEMBLY		1	
BD.9618	R.H. FRONT SEAT SQUAB FRAME ASSEMBLY		1	
BD.9577	Hinge, Inner, for L.H. Front Seat		1	
BD.9578	Hinge, Inner, for R.H. Front Seat		1	
BD.9589	Hinge, Outer, for L.H. Front Seat		1	
BD.9590	Hinge, Outer, for R.H. Front Seat		1	
FS.504/4H	Screw, Set, securing Hinges to Seat Squab		12	
FS.504/6H	Screw, Set, securing Hinges to Seat Squab		6	
FS.504/8H	Screw, Set, securing Hinges to Seat Squab		6	
FN.104/L	Nut, on Setscrews		6	
C.724	Washer, Shakeproof, under Nuts		6	
BD.8816/7	SEAT RUNNER (COMPRISING 1 PLAIN AND 1 SLOTTED RUNNER PER SET)		4	
BD.10912	Packing Assembly, under Seat Runners		4	
NS.525/12H	Screw, Set, securing Outer Runners to Floor		8	
FS.504/4H	Screw, Set, securing Runners to Seats		8	
FN.104/L	Nut, fixing Setscrews to Seats		8	
C.724	Washer, Shakeproof, under Nuts		8	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9593	CUSHION ASSEMBLY FOR FRONT SEATS		2	
BD.10422	CUSHION ASSEMBLY FOR L.H. REAR SEAT		1	
BD.10423	CUSHION ASSEMBLY FOR R.H. REAR SEAT		1	
BD.10437	CUSHION ASSEMBLY FOR L.H. REAR SEAT SQUAB		1	
BD.10438	CUSHION ASSEMBLY FOR R.H. REAR SEAT SQUAB		1	
BD.1286/1	Button, for fixing of Squab Cushion to Rear Seat Pan Back		4	
BD.3833/2	Socket, securing Buttons to back of Squab Cushion		4	
BD.3833/3	Stud, at back of Rear Seat Pan		4	
BD.539/4	Screw, Self-Tapping, securing Stud to back of Rear Seat Pan		4	
BD.9230	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	FITTED TO R.H. DRIVE CARS ONLY. At Chassis No. : 804001 to 804068.
BD.10600	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	FITTED TO L.H. DRIVE CARS ONLY. At Chassis No. : 814001 to 814132.
BD.10825	COVER ASSEMBLY, OVER PROP SHAFT TUNNEL, BETWEEN FRONT SEATS		1	Fitted to Chassis No. : 804069 and subs. 814133 and subs.
BD.10238	L.H. DOOR ASSEMBLY, COMPLETE (INCLUDING LOCK, HANDLE, CASING, DOOR LIGHT FRAME, GLASS AND FACIA)		1	
BD.10239	R.H. DOOR ASSEMBLY, COMPLETE (INCLUDING LOCK, HANDLE, CASING, DOOR LIGHT FRAME, GLASS AND FACIA)		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11371	L.H. DOOR SHELL ASSEMBLY		1	
BD.11372	R.H. DOOR SHELL ASSEMBLY		1	
BD.10028	Frame Assembly, for L.H. Door		1	
BD.10029	Frame Assembly, for R.H. Door		1	
BD.10028/8	Panel, Hinge Face, for L.H. Door		1	
BD.10029/8	Panel, Hinge Face, for R.H. Door		1	
BD.10028/9	Panel, Bottom Face, for L.H. Door		1	
BD.10029/9	Panel, Bottom Face, for R.H. Door		1	
BD.9785/1	Outer Panel, for L.H. Door		1	
BD.9784/1	Outer Panel, for R.H. Door		1	
BD.10545	Tension Strap Assembly inside Doors		2	
BD.10234	Lock Assembly on L.H. Door		1	
BD.10235	Lock Assembly on R.H. Door		1	
M.108/6R	Woodscrew, securing Door Locks		8	
BD.10088	Garnish Rail on L.H. Door		1	
BD.10089	Garnish Rail on R.H. Door		1	
BD.9902	DOOR HINGE ASSEMBLY		4	
BD.4156	Pivot Pin, mounting Door Hinges		4	
FW.104/T	Washer, Plain, on Pivot Pins		4	
FN.104/L	Nut, on Pivot Pins		4	
C.724	Washer, Shakeproof, under Nuts		4	
BD.4701/1	Shim (.036" thick) between Hinge and Door		As req'd	} Choose Shims of desired thickness.
BD.4701/2	Shim (.064" thick) between Hinge and Door		As req'd	
FS.104/5D	Screw, Set, securing Hinges to Body		16	
FB.104/12D	Bolt, securing Hinges to Doors		8	
FB.204/12D	Bolt, securing Hinges to Doors		8	
FN.104/L	Nut, on Bolts		16	
C.724	Washer, Shakeproof, for Nuts and Setscrews		32	
BD.10234	LOCK ASSEMBLY ON L.H. DOOR (COMPLETE WITH REMOTE CONTROL)		1	
BD.10235	LOCK ASSEMBLY ON R.H. DOOR (COMPLETE WITH REMOTE CONTROL)		1	
M.108/6R	Woodscrew, securing Door Locks		8	
BD.8986/1	Screw, Set, securing Locks to Shut Face Panel on Doors		6	
BD.10504	OPERATING LEVER, ON INSIDE OF L.H. DOOR SHUT PANEL, BETWEEN OUTSIDE HANDLE AND LOCK		1	
BD.10505	OPERATING LEVER, ON INSIDE OF R.H. DOOR SHUT PANEL, BETWEEN OUTSIDE HANDLE AND LOCK		1	
BD.10532	Special Bolt, securing Operating Levers to Shut Panels		2	
NN.125/L	Nut on Special Bolts		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10088	GARNISH RAIL, CARRYING WINDOW REGULATOR MECHANISM, ON L.H. DOOR		1	
BD.10089	GARNISH RAIL, CARRYING WINDOW REGULATOR MECHANISM, ON R.H. DOOR		1	
NS.519/4H M.108/8R	Screw, Set, securing Garnish Rails to Doors Woodscrew, securing Garnish Rails to Doors		6 8	
BD.10613	OUTSIDE HANDLE ON L.H. DOOR		1	
BD.10614	OUTSIDE HANDLE ON R.H. DOOR		1	
BD.11260	Locking Barrel, complete with Key, for Door Handles (FA Series) (WB.1/6437)		2	
NS.419/3D AW.102/T C.723/A	Screw, Set, securing Outside Handles to Doors Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		4 4 4	
NS.425/6D	Screw, Set, for adjustment between Outside Door Handles and Operating Levers		2	
NN.125/L	Nut, locking Setscrews after adjustment		2	
BD.8963	KNOB, OPERATING REMOTE CONTROL ON L.H. DOOR LOCK		1	
BD.8964	KNOB, OPERATING REMOTE CONTROL ON R.H. DOOR LOCK		1	
BD.9265	Screw, securing Knobs to Remote Controls		2	
BD.9263	OUTER ESCUTCHEON COVERING APERTURE FOR DOOR LOCK REMOTE CONTROLS (WB.7/5248)		2	
BD.9264	INNER ESCUTCHEON COVERING APERTURE FOR DOOR LOCK REMOTE CONTROLS (WB.7/5249)		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10417	SEAL PLATE AT LOWER CORNERS OF DOOR SHUT PANELS		2	
BD.10418	SEAL PLATE AT UPPER CORNER OF SHUT PANEL ON L.H. DOOR		1	
BD.10419	SEAL PLATE AT UPPER CORNER OF SHUT PANEL ON R.H. DOOR		1	
BD.10420	Insert, for Upper Seal Plates		2	
BD.10421	Insert, for Lower Seal Plates		2	
BD.540/14	Screw, Self-Tapping, securing Seal Plates to Doors		8	
BD.10092	REGULATOR ASSEMBLY FOR OPERATION OF WINDOW IN L.H. DOOR		1	
BD.10093	REGULATOR ASSEMBLY FOR OPERATION OF WINDOW IN R.H. DOOR		1	
UFN.125/L	Nut, securing Window Regulators to Garnish Rails		12	
BD.2233	HANDLE, OPERATING WINDOW REGULATORS (WB.1/3093)		2	
BD.552/1	Escutcheon behind Window Regulator Handles (WB.1/2341/A)		2	
BD.9991	L.H. DOOR LIGHT FRAME, COMPLETE WITH NO DRAUGHT VENTILATOR		1	
BD.9992	R.H. DOOR LIGHT FRAME, COMPLETE WITH NO DRAUGHT VENTILATOR		1	
BD.9807	Frame only for L.H. Door Light		1	
BD.9808	Frame only for R.H. Door Light		1	
BD.10098	Felt, in front and rear Pillars of Door Light Frame (32" long)		4	
BD.10099	Felt, in top rail of Door Light Frames (28" long)		2	
BD.10211	Seal (Moulded Rubber) around L.H. No Draught Ventilator		1	
BD.10212	Seal (Moulded Rubber) around R.H. No Draught Ventilator		1	
BD.10240	No Draught Ventilator Assembly for L.H. Door		1	
BD.10241	No Draught Ventilator Assembly for R.H. Door		1	
BD.46/4	Rubber Insert, in Front Channel of Door Light Frame, for sealing of Front No Draught Ventilators (12½" long)		2	
BD.3981	Handle, locking L.H. No Draught Ventilator when closed		1	
BD.3982	Handle, locking R.H. No Draught Ventilator when closed		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
DOOR LIGHT FRAME, COMPLETE WITH NO DRAUGHT VENTILATOR (continued)				
BD.3897	Washer (Rubber) behind Locking Handles		2	
BD.3984	Key Pin, securing Handles to No Draught Ventilators		2	
BD.3991	Striker Plate, on Door Light Frames, for Locking Handles		2	
BD.4899/2	Screw, securing Striker Plates to Door Light Frames		4	
BD.10240	L.H. NO DRAUGHT VENTILATOR, COMPLETE		1	
BD.10241	R.H. NO DRAUGHT VENTILATOR, COMPLETE		1	
BD.9994	Frame only, for L.H. No Draught Ventilator		1	
BD.9995	Frame only, for R.H. No Draught Ventilator		1	
BD.9996	Glass only, for No Draught Ventilators		2	
BD.1300	Everseal, between Glass and No Draught Ventilator Frames		2	
BD.5383	Spindle, for Friction Pivot at bottom of L.H. No Draught Ventilator		1	
BD.5384	Spindle, for Friction Pivot at bottom of R.H. No Draught Ventilator		1	
BD.8865	Upper Pivot Assembly on L.H. No Draught Ventilator		1	
BD.8866	Upper Pivot Assembly on R.H. No Draught Ventilator		1	
BD.4909/3	Screw, securing Upper Pivots to No Draught Ventilator Frames		2	
BD.6171	FRICITION PIVOT ASSEMBLY FOR NO DRAUGHT VENTILATOR		2	
BD.6172	Bracket Assembly for Friction Pivots		2	
BD.5168	Clamping Plate for Friction Pivots		2	
BD.5169	Spring, tensioning Clamping Plates		4	
FW.104/T	Washer, Plain, for Spring Seating		4	
NN.225/L	Locknut, securing Clamping Plates		8	
NS.319/5H	Screw, Set, securing Friction Pivots to Doors		4	
C.723/A	Washer, Shakeproof, on Setscrews		4	
BD.11030/1	RUBBER INSERT, IN REAR CHANNEL OF DOOR LIGHT FRAME, FOR SEALING ON REAR QUARTER VENTILATOR (15$\frac{1}{4}$" LONG)		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10094	CHANNEL, CARRYING GLASS FOR WINDOW IN L.H. DOOR		1	
BD.10095	CHANNEL, CARRYING GLASS FOR WINDOW IN R.H. DOOR		1	
BD.10227	GLASS FOR WINDOWS IN DOORS		2	
BD.4714	Everseal, between Window and Glass Carrier Channel (15" long)		2	
BD.10303	Weather Excluder, between Window and Door (27" long)		2	
BD.5358/4	Piping along top edge of Doors ($\frac{7}{8}$" Flange \times 33" long)		2	
BD.10102	CASING ASSEMBLY FOR L.H. DOOR		1	
BD.10103	CASING ASSEMBLY FOR R.H. DOOR		1	
BD.9113	Clip, securing Casings to Doors at bottom		4	
BD.524/3	Bifurcated Rivet, securing Clips to Casings		4	
BD.9112	Fixing Plate, on Doors, engaging Casing Clips		4	
M.106/3R	Woodscrew, securing Fixing Plates to Doors		8	
BD.539/1	Screw, Self-Tapping, securing Casings to Doors		12	
BD.532/1	Cup Washer, on Screws		12	
BD.10474	FACIA ASSEMBLY FOR L.H. DOOR		1	
BD.10475	FACIA ASSEMBLY FOR R.H. DOOR		1	
1758	Clip, securing Facias to Doors		6	
M.108/3R	Woodscrew, securing Clips to Facias		12	
BD.10481	CAPPING FOR L.H. DOOR		1	
BD.10482	CAPPING FOR R.H. DOOR		1	
BD.539/1	Screw, Self-Tapping, securing Cappings to Facias		10	
BD.543/1	Cup Washer, on Self-Tapping Screws		10	
BD.2701/4	Velvet Strip, between Cappings and Door Glasses (27" long)		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8548	FINGER PULL ON DOOR CAPPINGS		2	
NS.519/3H	Screw, Set, securing Finger Pulls to Door Cappings		4	
BD.9997	L.H. REAR QUARTER VENTILATOR ASSEMBLY, COMPLETE		1	
BD.9998	R.H. REAR QUARTER VENTILATOR ASSEMBLY, COMPLETE		1	
BD.11515	L.H. Ventilator Window Assembly		1	
BD.11516	R.H. Ventilator Window Assembly		1	
BD.10004	Outer Frame Assembly for L.H. Rear Quarter Ventilator		1	
BD.10005	Outer Frame Assembly for R.H. Rear Quarter Ventilator		1	
BD.10002	Seal, between Inner and Outer Frames on L.H. Rear Quarter Ventilator		1	
BD.10003	Seal, between Inner and Outer Frames on R.H. Rear Quarter Ventilator		1	
BD.8238	Catch Assembly for L.H. Rear Quarter Ventilator		1	
BD.8239	Catch Assembly for R.H. Rear Quarter Ventilator		1	
BD.5433	Carrier Bracket for Rear Quarter Ventilator Catches		2	
BD.4919/1	Special Screw, securing Carriers to Frames		2	
BD.4919/2	Special Screw, securing Carrier to Frames		2	
AN.103/L	Nut on Special Screws		4	
C.722	Washer, Shakeproof, under Nuts		4	
BD.5434	Cover, for Ventilator Catches		2	
BD.5454/3	Screw, Set, securing Covers		4	
BD.540/14	Screw, Self-Tapping, securing Rear Quarter Ventilators to Body		12	
BD.11515	L.H. WINDOW ASSEMBLY FOR REAR QUARTER VENTILATOR		1	
BD.11516	R.H. WINDOW ASSEMBLY FOR REAR QUARTER VENTILATOR		1	
BD.10008	Inner Frame only for L.H. Ventilator		1	
BD.10009	Inner Frame only for R.H. Ventilator		1	
BD.9999	Glass only for Ventilators		2	
BD.1300/5	Everseal, between Glass and Inner Frames (34" long)		2	
BD.8238	CATCH ASSEMBLY FOR L.H. REAR QUARTER VENTILATOR		1	
BD.8239	CATCH ASSEMBLY FOR R.H. REAR QUARTER VENTILATOR		1	
BSK.318	Special Screw, connecting Catches to Ventilator Frames		2	
BD.5453	Washer (Fibre) on Special Screws		4	
BD.3563/1	Nut on Special Screws		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.8598	PIPING, BETWEEN OUTER VENTILATOR FRAME AND BODY (39" LONG)		2	
BD.2012/5	SEALING RUBBER AROUND CANT-RAIL (45" LONG)		2	
BD.2012/6	SEALING RUBBER AROUND APERTURE FOR REAR QUARTER VENTILATOR (37" LONG)		2	
BD.2195/5	SEALING RUBBER ON DOOR SHUT PILLARS (29½" LONG)		2	
BD.2045/9	SEALING RUBBER ON DOOR HINGE PILLARS (28½" LONG)		2	
BD.2045/10	SEALING RUBBER ON SILL AT BOTTOM OF DOORS (36" LONG)		2	
BD.10144	RETAINER FOR SEAL ON L.H. SCREEN PILLAR		1	
BD.10145	RETAINER FOR SEAL ON R.H. SCREEN PILLAR		1	
BD.10147	RETAINER FOR SEAL ON L.H. CANTRAIL		1	
BD.10148	RETAINER FOR SEAL ON R.H. CANTRAIL		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10151	RETAINER FOR SEAL ON L.H. REAR QUARTER		1	
BD.10152	RETAINER FOR SEAL ON R.H. REAR QUARTER		1	
BD.8443	RETAINER FOR SEAL ON L.H. DOOR HINGE PILLAR		1	
BD.8444	RETAINER FOR SEAL ON R.H. DOOR HINGE PILLAR		1	
BD.10158	RETAINER FOR SEAL ON SILL AT BOTTOM OF DOORS		2	
BD.10160	TRIM FILLET FOR SCREEN PILLARS		2	
BD.10161	TRIM FILLET FOR CANTRAILS		2	
BD.10162	TRIM FILLET FOR REAR QUARTERS		2	
BD.10466	CAPPING FOR L.H. SCREEN PILLAR		1	
BD.10467	CAPPING FOR R.H. SCREEN PILLAR		1	
BD.538/3	Screw, Self-Tapping, securing Screen Pillar Cappings		6	
BD.10468	CAPPING FOR L.H. CANTRAIL		1	
BD.10469	CAPPING FOR R.H. CANTRAIL		1	
BD.711/7	Screw, Self-Tapping, securing Cantrail Cappings		14	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10470	CAPPING FOR UPPER PORTION OF L.H. REAR QUARTER VENTILATOR		1	
BD.10471	CAPPING FOR UPPER PORTION OF R.H. REAR QUARTER VENTILATOR		1	
BD.10472	CAPPING FOR LOWER PORTION OF L.H. REAR QUARTER VENTILATOR		1	
BD.10473	CAPPING FOR LOWER PORTION OF R.H. REAR QUARTER VENTILATOR		1	
BD.10483	CAPPING, FORWARD OF CATCH, ON L.H. REAR QUARTER VENTILATOR		1	
BD.10484	CAPPING, FORWARD OF CATCH, ON R.H. REAR QUARTER VENTILATOR		1	
BD.711/7	Screw, Self-Tapping, securing Rear Quarter Cappings		16	
BD.10083	REAR END ASSEMBLY		1	
BD.9907	Door Sill Assembly, L.H.		1	
BD.9908	Door Sill Assembly, R.H.		1	
BD.8475	Pan Assembly, for L.H. Rear Seat		1	
BD.8476	Pan Assembly, for R.H. Rear Seat		1	
BD.9790	Tonneau Assembly		1	
BD.8454	Wheel Arch Assembly, L.H.		1	
BD.8455	Wheel Arch Assembly, R.H.		1	
BD.9341	Floor Assembly, at Forward End of Luggage Compartment		1	
BD.10086	Parcel Tray Assembly		1	
BD.9541	Plate and Bracket Assembly, for mounting of Radio Power Unit		1	
BD.9326	Spare Wheel Tray Assembly		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9907	L.H. DOOR SILL ASSEMBLY		1	
BD.9908	R.H. DOOR SILL ASSEMBLY		1	
BD.9879	Outer Panel, for L.H. Door Sill		1	
BD.9880	Outer Panel, for R.H. Door Sill		1	
BD.10040	Inner Panel Assembly, for L.H. Door Sill		1	
BD.10041	Inner Panel Assembly, for R.H. Door Sill		1	
BD.4107	Plate, reinforcing Sill Mountings		4	
BD.8377	Diaphragm, at front end of L.H. Sill		1	
BD.8378	Diaphragm, at front end of R.H. Sill		1	
BD.10445	Diaphragm, Inner, for L.H. Shut Pillar		1	
BD.10446	Diaphragm, Inner, for R.H. Shut Pillar		2	
BD.10447	Diaphragm, Outer, for L.H. Shut Pillar		2	
BD.10448	Diaphragm, Outer, for R.H. Shut Pillar		2	
BD.8379	Diaphragm, Intermediate, for Door Sills		6	
BD.4164	Bracket, locating L.H. Shut Pillar		1	
BD.4165	Bracket, locating R.H. Shut Pillar		1	
BD.10131	Seal Plate Assembly for L.H. Shut Pillar		1	
BD.10132	Seal Plate Assembly for R.H. Shut Pillar		1	
BD.9790	TONNEAU PANEL ASSEMBLY		1	
BD.9791	Panel only, for Tonneau		1	
BD.9344	Panel Assembly, Lower, for Tonneau		1	
BD.9427	Panel, Bottom, for Tonneau		1	
BD.4191	Diaphragm, at L.H. corner of Boot		1	
BD.4192	Diaphragm, at R.H. corner of Boot		1	
BD.9357	Gutter Assembly, for Luggage Compartment Lid Aperture		1	
BD.8454	L.H. WHEEL ARCH ASSEMBLY		1	
BD.8455	R.H. WHEEL ARCH ASSEMBLY		1	
BD.8454/1	Panel, for L.H. Wheel Arch		1	
BD.8455/1	Panel, for R.H. Wheel Arch		1	
BD.4160	Butt Strap for Wheel Arches		2	
BD.8681	Clip for Electrical Wiring on Wheel Arch		9	
BD.9311	Support Assembly at rear of L.H. Wheel Arch		1	
BD.9312	Support Assembly at rear of R.H. Wheel Arch		1	
C.5647	Rubber Plug in Wheel Arch Panels		4	
BD.9336	RECESS PANEL ASSEMBLY FOR SPARE WHEEL		1	
BD.10253	Felt, around Recess Panel (11" × 1")		2	
BD.10254	Felt, around Recess Panel (29" × 1")		2	
BD.6196/4	Screw, Set, securing Recess Panel to Spare Wheel Tray		18	
FW.104/T	Washer, Plain, on Setscrews		18	
C.724	Washer, Shakeproof, on Setscrews		18	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9625	COVER PANEL, IN LUGGAGE COM- PARTMENT, FOR PETROL FILLER NECK		1	
BD.9584	Seal (Rubber) for Cover Panel		1	
BD.11262	LID ASSEMBLY, IN LUGGAGE COM- PARTMENT, EXPOSING SPARE WHEEL		1	FITTED TO STANDARD MODELS ONLY.
BD.9372	LID ASSEMBLY, IN LUGGAGE COM- PARTMENT, EXPOSING SPARE WHEEL		1	FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.9374	Hinge for Lid		3	
NS.519/3D	Screw, Set, securing Hinges to Lid		9	
BD.9909/1	" T " Nut for Setscrews		9	
BD.2121	Budget Lock at L.H. side of Lid		1	
BD.2122	Budget Lock at R.H. side of Lid		1	
NS.519/3D	Screw, Set, securing Budget Locks		4	
BD.9909/1	" T " Nut for Setscrews		4	
C.4630	Bezel, in Aperture for Budget Lock Key		2	FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
BD.6250	Tab (Leather) for lifting Lid		1	
BD.3556	Clip, securing Tab		1	
BD.539/4	Screw, Self-Tapping, securing Clip		2	
BD.9579	BRACKET ASSEMBLY, IN TRAY, FOR MOUNTING OF SPARE WHEEL		1	
BD.4864/1	Screw, Set, securing Bracket to Spare Wheel Tray		12	
C.723/A	Washer, Shakeproof, on Setscrews		12	
BD.10222	Tapping Plate for fixing of Bracket		2	
BD.6240	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.6241	Screw, for fixing of Spare Wheel		1	
BD.5232	Dome Plate on Screw		1	
BD.5561	Hand Knob operating Screw		1	
C.704/1	Mills Pin, securing Hand Knob to Screw		1	
BD.9583	CLAMP ASSEMBLY, SECURING SPARE WHEEL		1	FOR USE ONLY WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.9582	Screw, for fixing of Spare Wheel		1	
BD.9581	Spacing Washer on Screw		1	
BD.10904	Dome Plate on Screw		1	
BD.5561	Hand Knob operating Screw		1	
C.704/1	Mills Pin, securing Hand Knob to Screw		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9959	LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE		1	Fitted from Chassis No. : 804001 to 804007. 814001 to 814003.
BD.10640	Lid only (comprising Panel, Wood Frame and Attachment Brackets)		1	
BD.9585	Bracket, holding Lock Release Mechanism (centre)		1	
M.106/4R	Woodscrew, securing Bracket		6	
BD.9387	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer, behind Release Mechanism (RS.14/307)		1	
AS.302/13H	Screw, Set, securing Spacer		1	
UFS.319/4H	Screw, Set, securing Release Mechanism		4	
C.724	Washer, Shakeproof, on Setscrews		4	
BD.9388	Lock, at L.H. side of Luggage Compartment Lid (WB.3/6630/0)		1	
BD.9389	Lock, at R.H. side of Luggage Compartment Lid (WB.3/6631/0)		1	
BD.1503/3	Woodscrew, securing Side Locks		8	
BD.9390	Cable, coupling Centre Release Mechanism with Side Locks (WB.3/6644/0)		2	
BD.9942	Handle Assembly, on Lid (complete with Moulding)		1	
BD.10243	Housing, for Number Plate Lamp		1	
BD.9943	Moulding, down Centre of Lid		1	
BD.9628	Spire Nut, securing Centre Moulding		4	
BD.9152	Plaque at bottom of Centre Moulding		1	
NN.119/L	Nut securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	
C.1040/23	Clip, securing Harness		2	
BD.9392	Casing for Luggage Compartment Lid		1	
BD.10352	Strap, holding Spare Wheel Lid in "open" position		1	
BD.539/11	Screw, Self-Tapping, securing Strap		1	
BD.532/2	Cup Washer on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip, anchoring Prop when not in use		1	
BD.9160	Plate, behind Spring Clip		1	
BD.4908/6	Woodscrew, securing Clips		2	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T	Washer, Plain, behind Spring Washer		1	
L.103/7U	Split Pin, securing Prop in Brackets		1	
BD.826	Lamp Assembly, illuminating Luggage Compartment		1	
C.4073	Bracket, operating Luggage Compartment Lamp Switch		1	
BD.9377	LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE		1	Fitted to Chassis No. : 804008 and subs. 814004 and subs.
BD.10584	Lid only (comprising Panel, Wood Frame and Attachment Brackets)		1	
BD.10533	Bracket, holding Lock Release Mechanism (centre)		1	
M.106/4R	Woodscrew, securing Bracket		6	
BD.9387	Release Mechanism for operation of Side Locks (WB.3/6650/2)		1	
BD.9376	Spacer, behind Release Mechanism (RS.14-307)		1	
AS.302/13H	Screw, Set, securing Spacer		1	
UFS.319/4H	Screw, Set, securing Release Mechanism		4	
C.724	Washer, Shakeproof, on Setscrews		4	
BD.9388	Lock, at L.H. side of Luggage Compartment Lid (WB.3/6630/0)		1	
BD.9389	Lock, at R.H. side of Luggage Compartment Lid (WB.3/6631/0)		1	
BD.1503/3	Woodscrew, securing Side Locks		8	
BD.9390	Cable, coupling Centre Release Mechanism with Side Locks (WB.3/6644/0)		2	
BD.9639	Handle Assembly, on Lid (complete with Moulding)		1	
BD.10245	Housing for Number Plate Lamp		1	
BD.9090	Moulding down Centre of Lid		1	
BD.9628	Spire Nut, securing Centre Moulding		4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
LUGGAGE COMPARTMENT LID ASSEMBLY, COMPLETE (continued)				
BD.9152	Plaque at bottom of Centre Moulding		1	
NN.119/L	Nut, securing Plaque		2	
C.2831/1	Harness for Number Plate Lamp		1	
C.1040/23	Clip, securing Harness		2	
BD.9392	Casing, for Luggage Compartment Lid		1	
BD.10352	Strap, on Casing, holding Spare Wheel Lid in "open" position		1	
BD.539/11	Screw, Self-Tapping, securing Strap		1	
BD.532/2	Cup Washer, on Screw		1	
BD.1286	Fastener on Strap		1	
BD.9570	Prop Assembly for Luggage Compartment Lid		1	
BD.3839	Spring Clip, anchoring Prop when not in use		1	
BD.9160	Plate, behind Spring Clip		1	
BD.4908/6	Woodscrew, securing Clips		2	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T	Washer, Plain, behind Spring Washer		1	
L.103/7U	Split Pin, securing Prop in Bracket		1	
BD.826	Lamp Assembly, illuminating Luggage Compartment		1	
C.4073	Bracket, operating Luggage Compartment Lamp Switch		1	
BD.9432	Striker Bar, on Luggage Compartment Floor, for locking of Luggage Lid (WB.3/6645/0)		2	
NN.225/L	Nut, securing Striker Bars		8	
BD.9942	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID		1	Fitted from Chassis No. : 804001 to 804007. 814001 to 814003.
BD.11261	Locking Barrel, for Handle (WB.1/6438) for use with "FNR" series Key		1	
BD.9639	HANDLE ASSEMBLY FOR LUGGAGE COMPARTMENT LID (COMPLETE WITH SEATING MOULDING)		1	Fitted to Chassis No. : 804008 and subs. 814004 and subs.
BD.11265	Handle, less Seating Moulding		1	
BD.11266	Seating Moulding under Handle (WB.1/6436/0)		1	
BD.11261	Locking Barrel, for Handle (WB.1/6438) for use with "FNR" series Key		1	
BD.9345/2	SEALING RUBBER AROUND LUG- GAGE COMPARTMENT LID (95" LONG)		1	
BD.9345/3	SEALING RUBBER, IN RETAINER, AT FRONT OF LUGGAGE COMPART- MENT APERTURE, FOR SEALING LID (31" LONG)		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4287	HINGE FOR LUGGAGE COMPARTMENT LID		2	
FS.104/5D BD.541/9 C.724	Screw, Set, securing Hinges to Lid Washer, Special, on Setscrews Washer, Shakeproof, on Setscrews		6 6 6	
BD.4311	PIVOT PIN, SECURING HINGES TO BODY		2	
FN.204/L C.724	Nut, securing Pivot Pins Washer, Shakeproof, under Nuts		4 2	
BD.9211	BRACKET ASSEMBLY FOR MOUNTING OF L.H. LUGGAGE LID HINGE		2	
BD.9212	BRACKET ASSEMBLY FOR MOUNTING OF R.H. LUGGAGE LID HINGE		2	
BD.4332 FS.104/4D FW.104/T C.724	Cover Plate, for Luggage Lid Hinges Screw, Set, securing Brackets Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		2 8 8 8	
BD.9565	MOULDING ASSEMBLY ON TONNEAU PANEL ABOVE LUGGAGE COMPARTMENT LID		1	
BD.4919 NN.116/L AW.102/T C.722	Bolt, securing Mouldings to Tonneau Panel Nut on Bolts Washer, Plain, on Bolts Washer, Shakeproof, under Nuts		2 2 2 2	
BD.10454	FOLDING SQUAB ASSEMBLY, AT BACK OF LUGGAGE COMPARTMENT AND ABOVE REAR SEATS		1	
BD.2121 BD.2122 BD.10456 BD.10457 BD.5783/4 BD.9441 NS.519/3D	Budget Lock securing Folding Squab at L.H. side Budget Lock securing Folding Squab at R.H. side Escutcheon, over L.H. Budget Lock Escutcheon, over R.H. Budget Lock Screw, Set, securing Budget Locks and Escutcheons Hinge for Folding Squab Screw, Set, securing Hinges		1 1 1 1 4 2 10	
BD.10459 M.106/4R	Striker Plate for engagement of Budget Locks Woodscrew, securing Striker Plate		2 4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10458	TOP RAIL ABOVE FOLDING SQUAB		1	
NS.519/8D NN.119/L C.723/A	Screw, Set, securing Top Rails Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2	
BD.10925	STRAP HOLDING FOLDING SQUAB IN HORIZONTAL POSITION		2	
BD.10918 BD.531/2 C.2015/1 AN.102/L AW.102/T	Plate, holding Strap to Folding Squab Dome Nut, securing Strap and Plate to Folding Squab Screw, Set, securing Strap to Body Nut, on Setscrews Washer, Plain, under Nuts		2 2 2 2 2	
BD.10919	QUADRANT AT L.H. SIDE OF FOLD- ING SQUAB		1	} ALTERNATIVE TO STRAP BD.10925.
BD.10920	QUADRANT AT R.H. SIDE OF FOLD- ING SQUAB		1	
BD.5783	Screw, Set, securing Quadrants		8	
BD.9397	PETROL FILLER BOX ASSEMBLY		1	
BD.9489 BD.4368 C.824 BD.4369	" Snapsac " Sleeve, on Filler Box, for Lock Striker Hose, connecting Filler Box with Petrol Tank Clip, securing Hose to Box and Tank Extension Tube (Rubber) for Drain Pipe on Filler Box		1 1 2 1	
BD.4358	HINGE ASSEMBLY FOR PETROL FILLER DOOR		1	
AS.302/3H C.738	Screw, Set, securing Hinge inside Petrol Filler Box Washer, Shakeproof, on Setscrews		2 2	
BD.4357	DOOR ASSEMBLY FOR PETROL FILLER BOX		1	
AN.102/L FW.105/T C.738	Nut, securing Door to Hinges Washer, Packing, between Door and Hinge Washer, Shakeproof, under Nuts		4 As req'd 4	
BD.4354	Seal (Rubber) around Filler Box Aperture for Door Seating		1	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.4360	LOCK ASSEMBLY FOR PETROL FILLER DOOR		1	
BD.8071	Spring Clip, securing Lock to Door (WB.7/4098)		1	
BD.4353	STRIKER ASSEMBLY FOR PETROL FILLER LOCK		1	
BD.10641	Stud Plate, for fixing of Striker inside Petrol Filler Box		1	
NN.119/L	Nut, securing Stud Plate and Striker		2	
AW.102/T	Washer, Plain, on Studs		2	
C.738	Washer, Shakeproof, under Nuts		2	
BD.3699	FILLER CAP ON HINGE		1	
BD.3189	Seal (Cork) inside Filler Cap		1	
BD.4394	Spring, between Filler Cap and Hinge		1	
L.102/4U	Split Pin, securing Filler Cap to Hinge		1	
C.2501/3	Washer, Plain, under Split Pin		1	
BD.10125	L.H. REAR WING ASSEMBLY		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.10126	R.H. REAR WING ASSEMBLY		1	
BD.11178	Sealing Rubber around Wheel Aperture in Rear Wings		2	
BD.10129	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN WIRE SPOKE ROAD WHEELS ARE FITTED.
BD.10130	R.H. REAR WING ASSEMBLY		1	
BD.7769	Moulding around Wheel Aperture in L.H. Rear Wing		1	
BD.7770	Moulding around Wheel Aperture in R.H. Rear Wing		1	
BD.1814/1	Pop Rivet, securing Mouldings to Wings		32	
BD.11275	L.H. REAR WING ASSEMBLY		1	} FOR USE WHEN WIRE SPOKE ROAD WHEELS AND SPECIAL REAR WHEEL COVERS ARE FITTED.
BD.11276	R.H. REAR WING ASSEMBLY		1	
BD.6615	Mounting Bracket Assembly (complete with Spring for "Dzus" Fastener)		2	} SUPPLIED TO SPECIAL ORDER ONLY.

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.6615	MOUNTING BRACKET ASSEMBLY, ON REAR WINGS, FOR "DZUS" FASTENERS		2	} FOR USE ON REAR WINGS SUITABLE FOR WIRE SPOKE ROAD WHEELS AND SPECIAL REAR WHEEL COVERS. } SUPPLIED TO SPECIAL ORDER ONLY.
BD.6596	Spring, receiving "Dzus" Fasteners on Rear Wheel Covers		2	
BD.6600/1	Rivet, securing "Dzus" Springs			
BD.2401/1	Screw, Set, securing Rear Wings		4	
BD.2401/2	Screw, Set, securing Rear Wings		4	
BD.2401/7	Screw, Set, securing Rear Wings		6	
BD.542/2	Washer, Special, on Setscrews		14	
C.725	Washer, Shakeproof, on Setscrews		14	
BD.8598	Piping Assembly between Rear Wings and Wheel Arches (72" long)		2	
BD.10131	SEALING PLATE ASSEMBLY BETWEEN L.H. REAR WING AND SHUT PILLAR		1	
BD.10132	SEALING PLATE ASSEMBLY BETWEEN R.H. REAR WING AND SHUT PILLAR		1	
BD.9317/4	Rubber Strip for Sealing Plates (27" long)		2	
BD.8691/3	Screw, Metal, securing Sealing Plates to Shut Pillar		8	
BD.711/9	Screw, Metal, securing Sealing Plates to Shut Pillar		6	
AW.102/T	Washer, Plain, on Screws		14	
NS.119/4D	Screw, Set, securing Sealing Plates to Rear Wings		4	
NN.119/L	Nut, on Setscrews		4	
C.723/A	Washer, Shakeproof, under Nuts		4	
BD.3786	"Rubo" Gasket, between Sealing Plate and Rear Wings (27" long)		2	
BD.4512	STEADY BAR FOR L.H. REAR WING		1	
BD.4513	STEADY BAR FOR R.H. RIGHT WING		1	
BD.4449	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	} FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.4450	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.2121	Lock, on L.H. Cover (WB.12288/A)		1	
BD.2122	Lock, on R.H. Cover (WB.12288/B)		1	
AS.502/4H	Screw, Set, securing Locks to Covers		4	
AN.102/L	Nut, on Setscrews		4	
C.723	Washer, Shakeproof, under Nuts		4	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.11267	COVER ASSEMBLY FOR L.H. REAR WHEEL		1	FOR USE ONLY WITH BD.11275 AND BD.11276 REAR WINGS WHEN WIRE SPOKE ROAD WHEELS ARE FITTED. SUPPLIED TO SPECIAL ORDER ONLY.
BD.11268	COVER ASSEMBLY FOR R.H. REAR WHEEL		1	
BD.6616 BD.6617	"Dzus" Fastener, on Rear Wheel Covers Grommet, securing "Dzus" Fasteners to Rear Wheel Covers		2 2	
2312	ESCUTCHEON FOR REAR WING COVERS (WB.16049)		2	FOR USE ONLY WHEN DISC TYPE ROAD WHEELS ARE FITTED.
BD.540/9	Screw, Self-Tapping, securing Escutcheons to Rear Wing Covers		4	
BD.9758	GLASS FOR BACKLIGHT IN TONNEAU PANEL		1	
BD.9759	Seal (Rubber) for Backlight Glass		1	
BD.9760	Chrome Surround for Backlight		1	
BD.5366	Finishing Piece for Joint of Chrome Surround		1	
BD.9594	CASING ASSEMBLY, AT L.H. SIDE OF REAR QUARTER, BEHIND DOOR SHUT PANEL		1	
BD.9595	CASING ASSEMBLY, AT R.H. SIDE OF REAR QUARTER, BEHIND DOOR SHUT PANEL		1	
BD.539/10 BD.532/1	Screw, Self-Tapping, securing Casings Cup Washer, on Self-Tapping Screws		2 2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.10615	CASING ASSEMBLY AT TOP OF L.H. REAR QUARTER (WITH POCKET FOR INTERIOR LAMP)		1	
BD.10616	CASING ASSEMBLY AT TOP OF R.H. REAR QUARTER (WITH POCKET FOR INTERIOR LAMP)		1	
BD.5334	Pocket Assembly , behind L.H. Casing, for Interior Light		1	
BD.5335	Pocket Assembly , behind R.H. Casing, for Interior Light		1	
BD.10451	Tacking Block , at front of Rear Quarter		2	
BD.10452	Tacking Block , at centre of Rear Quarter		2	
BD.10453	Tacking Block , at rear of Rear Quarter		2	
BD.9820	Retainer , for Tacking Strips on L.H. Rear Quarter		1	
BD.9819	Retainer , for Tacking Strips on R.H. Rear Quarter		1	
BD.5367	INTERIOR LAMP FOR L.H. REAR QUARTER		1	
BD.5368	INTERIOR LAMP FOR R.H. REAR QUARTER		1	
BD.5408/1	Screw, Set , securing Interior Lamps		4	
BD.10464	CASING ASSEMBLY FOR PARCEL TRAY BEHIND REAR SEATS		1	
BD.538/1	Screw, Self-Tapping , securing Parcel Tray Casing		6	
C.4389	FRONT NUMBER PLATE		1	
NS.125/4D	Screw, Set , securing Front Number Plate		2	
FW.104/T	Washer, Plain , on Setscrews		2	
NN.125/L	Nut , on Setscrews		2	
C.724	Washer, Shakeproof , under Nuts		2	
BD.9932	PANEL ASSEMBLY FOR ATTACHMENT OF REAR NUMBER PLATE		1	
NS.125/4D	Screw, Set , securing Panel to Body and Number Plate to Panel		8	
FW.104/T	Washer, Plain , on Setscrews		8	
C.724	Washer, Shakeproof , on Setscrews		8	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
BD.9932/1	PIPING BETWEEN REAR NUMBER PLATE PANEL AND BODY (33" LONG)		1	STATE COLOUR OF BODY WHEN ORDERING.
BD.9945	BEADING (CHROMIUM PLATED) AT TOP OF REAR NUMBER PLATE PANEL		1	
BD.10039	Clip Assembly, securing Beading to Number Plate Panel		5	
C.2945	REAR NUMBER PLATE		1	NOT REQUIRED FOR U.S.A. AND CANADA.
C.1107	LICENCE HOLDER		1	
TOOL FIXINGS				
BD.3431	Clip, securing Jack		1	ALTERNATIVE TO BD.6811. ALTERNATIVE TO BD.3431.
BD.6811	Clip and Bracket Assembly, securing Jack		1	
BD.3527	Rubber Socket, housing end of Jack		1	
BD.3535	Clip, securing Rubber Socket for Jack		1	
BD.1501/1	Woodscrew, securing Clip to Spare Wheel Lid		1	See Remarks 3 required when BD.3431 is used. 6 required when BD.6811 is used.
C.5217	Strap around Jack		1	
BD.1501/2	Woodscrew, securing Strap to Spare Wheel Lid		2	
BD.532/1	Cup Washer, on Woodscrews		2	
BD.10760	Pad (Foam Rubber) on Spare Wheel Lid, for Jack		1	
BD.3432	Clip, securing Jack Ratchet		2	
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	} NOT REQUIRED WHEN WIRE SPOKE ROAD WHEELS ARE USED. Fitted from Chassis No. : 804001 to 804269. 814001 to 814453. 804270 and subs. 814454 and subs.
BD.2385	Clip, securing Wheel Brace		4	
BD.1501/1	Woodscrew, securing Clips		4	
BD.5211	Clip, securing Grease Gun		2	
BD.3430	Clip, securing Grease Gun		2	Fitted to Chassis No. 804270 and subs. 814454 and subs.
BD.1501/1	Woodscrew, securing Clips to Spare Wheel Lid		4	
BD.3438	Clip, securing Budget Key		2	
BD.711/3	Screw, Self-Tapping, securing Budget Key Clips to Cowl around Petrol Filler Neck		2	

BODY AND FITTINGS—FIXED HEAD COUPE

Part No.	Description	Plate No.	No. per Unit	Remarks
SD.1036	BODY MOUNTINGS PACKAGE		1	
BD.6635	Packing, at Mounting of Chassis to Door Sills		4	
BD.2070	Packing Washer (Fibre) at Mounting of Chassis to Door Sills		As req'd	
NS.137/14D	Screw, Set, securing Door Sills to Chassis		4	
BD.541/14	Special Washer, on Setscrews		4	
C.3968/3	Nut, Self-Locking, on Setscrews		4	
FW.106/T	Washer, Plain, under Nuts		4	
BD.4548/1	Alum Packing, at Mounting of Chassis to Dash		As req'd	
BD.4548/2	Alum Packing, at Mounting of Chassis to Dash		As req'd	
NS.137/8D	Screw, Set, securing Dash to Chassis		2	
FW.106/T	Washer, Plain, on Setscrews		2	
BD.6626	Alum Pad at Mounting of Chassis to Luggage Compartment		2	
NS.131/16D	Screw, Set, securing Body to Chassis at Luggage Compartment		2	
C.1904	Special Washer, on Setscrews		4	
C.725	Washer, Shakeproof, on Setscrews		2	
BD.6626	Alum Pad at Mounting of Chassis to Rear end of Body		4	
BD.2070	Packing Washer (Fibre) at Mounting of Chassis to Rear end of Body		As req'd	
BD.6635	Packing at Mounting of Chassis to Rear end of Body		As req'd	
NB.137/30D	Bolt, securing Rear end of Body to Chassis		2	
NB.137/32D	Bolt, securing Rear end of Body to Chassis		2	
C.3968/3	Nut, Self-Locking, on Bolts		4	
FW.106/T	Washer, Plain, under Nuts		8	
C.5647	Rubber Plug in Mounting holes inside Luggage Compartment		4	
BD.1493/2	Screw, Set, securing Floor to Chassis		2	
FW.104/T	Washer, Plain, on Setscrews		2	
C.724	Washer, Shakeproof, on Setscrews		2	
BD.10280	Felt, 3" × 45", for Packing between Door Sills and Chassis		2	
BD.3743	Felt, 12" × 22", for Packing between Door Sills and Chassis		2	