Description	No.	Unit	Remarks		
DYNAMO (LUCAS 22462/B—C.45/PVS/5)		ı			
Cover Band Screw, securing Cover Band Nut, on Screw Brush Bracket, Commutator End Bearing, for Commutator End Bracket Spring, for Brush tension Bearing, driving end Bracket, driving end Nut, Commutator Shaft Armature Field Coil Terminal Assembly		1 1 2 1 1 1 2 1 1 1 1 2 1 1 1 1 1 1 1 1			
Pulley, for Dynamo Fan, for Dynamo Pulley Screw, Set, for mounting of Dynamo Nut, on Setscrew					
STARTER MOTOR (LUCAS 26062/A-M.45G/GC.49)	\	i			
Cover Band Cap, protecting end of Shaft Brush Bracket, at Commutator End Bush Spring, tensioning Brushes Main Spring Pinion and Sleeve Spring, retaining Pinion Drive, complete, for Starter Motor Bracket, at Driving End Armature Field Coil (complete with Terminals) Bolt, through Starter Motor Bolt, for mounting of Starter Motor Nut, on Bolts Washer, Spring, under Nuts		1 2 1 4 1 1 1 1 1 4 2			
SOLENOID FOR STARTER MOTOR (LUCAS 76411/DST.950) Screw, Set, securing Starter Solenoid		1 2 2			
	Cover Band Screw, securing Cover Band Nut, on Screw Brush Bracket, Commutator End Bearing, for Commutator End Bracket Spring, for Brush tension Bearing, driving end Bracket, driving end Nut, Commutator Shaft Armature Field Coil Terminal Assembly Bolt Pulley, for Dynamo Fan, for Dynamo Pulley Screw, Set, for mounting of Dynamo Nut, on Setscrew STARTER MOTOR (LUCAS 26062/A—M.45G/GC.49) Cover Band Cap, protecting end of Shaft Brush Bracket, at Commutator End Bush Spring, tensioning Brushes Main Spring Pinion and Sleeve Spring, retaining Pinion Drive, complete, for Starter Motor Bracket, at Driving End Armature Field Coil (complete with Terminals) Bolt, through Starter Motor Nut, on Bolts Washer, Spring, under Nuts	Cover Band Screw, securing Cover Band Nut, on Screw Brush Bracket, Commutator End Bearing, for Commutator End Bearing, for Commutator Send Bracket, Griving end Bracket, driving end Bracket, driving end Nut, Commutator Shaft Armature Field Coil Terminal Assembly Bolt Pulley, for Dynamo Fan, for Dynamo Pulley Screw, Set, for mounting of Dynamo Nut, on Setscrew STARTER MOTOR (LUCAS 26062/A—M.45G/GC.49) Cover Band Cap, protecting end of Shaft Brush Bracket, at Commutator End Bush Spring, tensioning Brushes Main Spring Pinion and Sleeve Spring, retaining Pinion Drive, complete, for Starter Motor Bracket, at Driving End Armature Field Coil (complete with Terminals) Bolt, for mounting of Starter Motor Nut, on Bolts Washer, Spring, under Nuts SOLENOID FOR STARTER MOTOR (LUCAS 76411/D—ST.950)	DYNAMO (LUCAS 22462/B—C.45/PVS/5) Cover Band Screw, securing Cover Band Nut, on Screw Brush Bearing, for Commutator End Bearing, for Commutator End Bearing, for William End Bearing, driving end Bracket, driving end Nut, Commutator Shaft Armature Field Coil Terminal Assembly Boit Pulley, for Dynamo Fan, for Dynamo Pulley Screw, Set, for mounting of Dynamo Nut, on Setscrew STARTER MOTOR (LUCAS 26062/A—M.45G/GC.49) Cover Band Cap, protecting end of Shaft Brush Bracket, at Commutator End Bush Spring, tensioning Brushes Main Spring Plnion and Sleeve Spring, retaining Pinion Drive, complete, for Starter Motor Bracket, at Driving End Armature Field Coil (complete with Terminals) Bolt, for mounting of Starter Motor Bracket, at Driving End Armature Field Coil (complete with Terminals) Bolt, for mounting of Starter Motor Bracket, pring, under Nuts	DYNAMO (LUCAS 22462/B—C.45/PVS/5) Cover Band Screw, securing Cover Band Nut, on Screw 1 Bracket, Commutator End Bearing, for Commutator End Bracket Spring, for Brush tension Bracket, driving and Nut, Commutator Shaft Armature Field Coil Terminal Assembly Bolt Pulley, for Dynamo Plulley Screw, Set, for mounting of Dynamo Nut, on Setscrew STARTER MOTOR (LUCAS 26062/A—M.45G/GC.49) Cover Band Cap, protecting end of Shaft Brush Bracket, at Commutator End Bush Bracket, at Com	DYNAMO (LUCAS 22462/B—C.45/PVS/5) Cover Band

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8749	IGNITION COIL (LUCAS 45054/B—HA.12)		1	
C.5451	Nut, in centre of Coil, for attachment of Ignition		ı	
C.5452	Cable (Lucas 408120) Washer, for connection on end of Ignition Cable (Lucas 185015)		I	
C.5259	BRACKET ASSEMBLY FOR MOUNTING OF IGNITION COIL		1	
NN.125/L FW.104/T	Nut, securing Ignition Coil to Bracket Washer, Plain, under Nuts		2 2	
C.724	Washer, Shakeproof, under Nuts		2	
C.5517	DISTRIBUTOR (LUCAS 40436/A—DVX6A/GC.48/I)			SUITABLE FOR 8:1 COMPRESSION RATIO.
414909 421720	Clamping Plate Vacuum Unit		!	
408913 408948	Housing, for Micrometer Control		į	
407043	Nut, for Adjustment of Micrometer Control Cap (Vertical outlet)		1 1	
410600 C.5452	Nut, for Cap Washer, for connection on end of Ignition		7 7	
404435	Cable (Lucas 185015) Brush and Spring inside Cap		· ·	
407030	Rotor Arm		i	
407044 408940 407010	Condenser Base Plate for Contact Breaker Strap, for connection between Terminal and Contact Breaker		 	
414715	Lead, complete with Eyelets		· į ·	
407050 408999	Contact Set Cam		i	
415729 407131	Weight Assembly Toggle		2	
421721	Spring, for Auto Advance		2	
189272	Shaft and Action Plate Ball Bearing, Top		1	
410590 420262/S	Bush, Bottom Clip, retaining Cap		1 2	
410601	Driving Dog		Ī	
C.5556	DISTRIBUTOR		ı	SUITABLE FOR 7:1 COMPRESSION
	(LUCAS 40435/A—DVX6A/GC.50/I)		÷	RATIO.
421710 421716 410736	Vacuum Unit Spring, for Auto Advance Shaft and Action Plate		! 2 !	
	All other details as for Distributor C.5517.			
C.2430 C.2581	Sealing Ring, for Distributor Shaft Suction Pipe, from Vacuum Unit to Front Carburetter	÷	1	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.2823	PETROL PUMP (SU.223I/LCS)		I	Fitted from Chassis No.: 800001 to 800031. 810001 to 811421. 804001 to 804139. 814001 to 814239. 807001 to 807125. 817001 to 817457.
C.9688	PETROL PUMP (SU.4644/I—AUA.57)		I	Fitted to Chassis No.: 800032 and subs. 81 422 and subs. 804 40 and subs. 81 4240 and subs. 807 126 and subs. 817458 and subs.
C.2839 C.800 C.2539/I BD.541/5 C.974	Cover, for Petrol Pump Stud, for mounting of Petrol Pump Nut, on Studs Washer, under Nuts Grommet, for Petrol Pump mounting		1 2 2 4 2	
C.8821	CONTROL BOX (LUCAS 37189/A—RB.310)		ı	
335610 335544 335563	Cover Screw, securing Cover Rubber Bead, for seal between Cover and Control		i 2 i	
335747 126490	Box Resistance Terminal Screw		! 2	
NS.125/5D C.724	Screw, Set, securing Control Box Washer, Shakeproof, on Setscrews		3	
C.2531	FUSE BOX (LUCAS 37100/E—SF.4)		i	
188218 121610	Fuse, 35 amps. Screw, Terminals		4 8	
C 5543	FLICE BOY (LUCAS 27122 ST.()		ì	
C.5543	FUSE BOX (LUCAS 37132—SF.6)			
188218 121610	Fuse, 35 amps Screw, Terminals		2 4	
NS.316/4H C.5550 C.5576 C.9602 C.9603	Screw, Set, securing Fuse Boxes to Dash Stud, in Fuse Box C.2531, for fixing of Cover Nut, on Stud Stud, in Fuse Box C.2531, for fixing of Cover Nut, on Stud		1	FITTED TO OPEN AND DROP HEAD COUPE MODELS ONLY. FITTED TO FIXED HEAD COUPE MODELS ONLY.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8820	COVER OVER FUSE BOXES		· •	FITTED TO OPEN AND DROP HEAD COUPE MODELS ONLY.
C.9601	COVER OVER FUSE BOXES		t	FITTED TO FIXED HEAD COUPE MODELS ONLY.
C.5549	Knurled Nut securing Cover over Fuse Boxes		1	
C.8822	INSTRUMENT PANEL ASSEMBLY		ı	FITTED TO STANDARD EQUIPMENT MODELS ONLY.
C.2753 C.5577 C.8165 C.2763 C.5459 BD.2411	Ammeter (Lucas 36071/D—BM.4/L.54) Switch, Road Lights (Lucas 31426/A) Escutcheon, for Road Lights Switch (Lucas 30568) Eyelet, for Road Lights Switch (Lucas 304803) Switch, Ignition (Lucas 31287/B—S.45) Barrel, for Ignition Switch (complete with 2 keys)		 	
C.2755	(WB.1/2646) Warning Light, for Ignition Switch (Lucas 38020/A—WL.4/L.11)	•	1	
C.4625	Bezel, for Ignition Warning Light (marked IGN) (Lucas 305414)		, 1	
C.5465 C.5506	Eyelet, for Ignition Switch (Lucas 312169) Switch, Windscreen Wiper (Lucas 31427/A—		1	
C.5463	PRS.7/L) Switch, Interior Lights (Lucas 031413)		1	FITTED TO FIXED HEAD AND DROP
C.2769	Eyelet, for Windscreen Wiper and Interior Lights		2	HEAD COUPE ONLY.
C.4543	Switch (Lucas 305132) Rheostat Switch for Heater (Lucas 78262/B—CHR.I)		1	
C.5460 C.5461 C.4630	Rheostat Switch for Panel Lights (Lucas 78218/D) Switch, Starter (Lucas 31388/A) Eyelet, for Heater, Panel and Starter Switches	-	1 1 3	
C.4617	(Lucas 359679) Warning Light for Direction Indicators		ı	
C.4626	(Lucas 38048/A) Bezel, for Direction Indicator Warning Light (marked TRF) (Lucas 3054 11)		1	
			,	
C.9122	INSTRUMENT PANEL ASSEMBLY (LUCAS 30209/D—GC.1654)		i	FITTED TO SPECIAL EQUIPMENT MODELS ONLY.
C.9117 C.9118	Switch, Road Lights (Lucas 31524/A—PRS.7) Escutcheon, for Road Lights Switch (Lucas 305604)		1	en de la companya de La companya de la co
	All other items as for Instrument Panel C.8822.			
987 C.5586 BD.1503/2	Bulb for Direction Indicator and Ignition Warning Lights Connector for Instrument Panel Wiring (Lucas 998412) Woodscrew, securing Instrument Panel		2 ! !3	

Part No.	Description	Plate No.	No. per Unit	Remarks
	KNOBS FOR ELECTRICAL SWITCHES			
C.5480 C.5481 C.5482 C.5483 C.5485 C.4664	Knob for Starter Switch (Lucas 317370) Knob for Road Lights Switch (Lucas 317603) Knob for Panel Lights Switch (Lucas 768913) Knob for Interior Lights Switch (Lucas 317515) Knob for Heater Switch (Lucas 768472) Knob for Windscreen Wiper Switch (Lucas 316646)			REQUIRED ONLY FOR FIXED HEAD AND DROP HEAD COUPE.
C.1431	OIL PRESSURE AND WATER TEMPE- RATURE GAUGE (SMITH X.42638/6)		ŧ	- N
C.9621	Union for connection of Capillary Bulb to Inlet Manifold		i	
C.8415	PETROL GAUGE (SMITH X.49422/230)		I	1
C.5389	SPEEDOMETER (SMITH X.51691/35) (CALIBRATED IN MILES)		ı	SUITABLE FOR 3.54: I REAR AXLE.
C.5390	SPEEDOMETER (SMITH X.51691/36) (CALIBRATED IN KILOS.)		I	SUITABLE FOR 3.54:1 REAR AXLE.
C.5383	SPEEDOMETER (SMITH X.51691/37) (CALIBRATED IN MILES)		. 1	SUITABLE FOR 3.31:1 REAR AXLE.
C.5384	SPEEDOMETER (SMITH X.51691/38) (CALIBRATED IN KILOS.)		1	SUITABLE FOR 3.31 : I REAR AXLE.
C.8303	FLEXIBLE SPEEDOMETER CABLE, COMPLETE (SMITH SK.52091/42)		ı	
SK.80741/60 SK.80740	Inner Cable only Outer Cable only		}	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.2775	REV. COUNTER AND ELECTRIC CLOCK (SMITH X.49035/6)		1	Fitted from Chassis No. 800001 to 800032. 810001 to 811416. 804001 to 804139. 814001 to 814236. 807001 to 807132. 817001 to 817460.
C.9182	REV. COUNTER AND ELECTRIC CLOCK (SMITH 51-117-102-04)		I	Fitted to Chassis No.: 800033 and subs. 811417 and subs. 804140 and subs. 814237 and subs. 807133 and subs. 817461 and subs.
C.8273	FLEXIBLE REV. COUNTER CABLE, COMPLETE (SMITH X.80710/2)		1	FITTED ONLY TO OPEN CARS.
SK.52108/21 80750	Inner Cable only Outer Cable only		!	
C.8274	FLEXIBLE REV. COUNTER CABLE, COMPLETE (SMITH X.80710/2)		I	FITTED ONLY TO DROP HEAD COUPE
SK.52108/18.5 SK.80750	Inner Cable only Outer Cable only		ļ	
C.9154	FLEXIBLE REV. COUNTER CABLE, COMPLETE (SMITH X.80710/2)		. 1	FITTED ONLY TO FIXED HEAD COUPE.
SK.52108/13.5 SK.80750	Inner Cable only Outer Cable only		ļ	
C.5631	THERMOSTATIC CIGAR LIGHTER, COMPLETE (SMITH SK.76064/26)		ı	
C.5631/1 C.5631/2	Body only, for Cigar Lighter Element only, for Cigar Lighter		! !	
C.8407	PETROL TANK ELEMENT UNIT (SMITH Y.86030)		ı	
C.937	Gasket for Element Unit		ı	

Part No.	Description	Plate No.	No. per Unit	Remarks	_
BD.826	LAMP, COMPLETE, FOR ILLUMINA- TION OF LUGGAGE COMPARTMENT (LUCAS 56015/A—FML.2)		I		
532948 532949	Rim Assembly Window		 		
256 M.204/3R BD.1499/I	Bulb , Festoon, for Luggage Compartment Lamp Woodscrew , securing Base of Lamp to Luggage Lid Woodscrew , securing Lamp Rim to Luggage Lid		1 2 2		-
C.2873	SWITCH, OPERATING LUGGAGE COMPARTMENT LAMP (LUCAS 31185—94L)		1		
C.4073 C.4074 BD.2391 C.2014/3 BD.1498/2	Striking Plate, operating Switch Packing for Striking Plate Tapped Plate for mounting of Switch Screw, Set, securing Tapped Plate Woodscrew, securing Striking Plate		1 2 1 2 2		
C.5525	HEADLAMP, COMPLETE (LUCAS 51505/A—J.700)		2	FITTED TO R.H. DRIVE CARS.	:
554903 554582 554915 554906 554907 144820 553872 554459 554459 553955	Outer Rim Screw, securing Outer Rim Light Unit (Reflector and Glass) Rim, retaining Light Unit Fixing Ring, for attachment of Light Unit Trimmer Screw, for focusing of Light Unit Spring on Trimmer Screws Seal, between Outer Rim and Light Unit Rim Adaptor, Double contact, for Bulbs Gasket (Rubber) between Lamps and Wings		2 2 2 2 2 6 6 2 2		
404	Bulb, 60/36 watt, for R.H. Drive Headlamps		2		
C.5526	HEADLAMP, COMPLETE (LUCAS 51506/A—J.700)		2	FITTED TO L.H. DRIVE CARS.	
554916	Light Unit (Reflector and Glass)		2	:	
	All other items as for Headlamp C.5525.				
406	Bulb, 60/36 watt, for L.H. Drive Headlamps		2		

Part No.	Description	Plate No.	No. per Unit	Remarks
C.5530	HEADLAMP, COMPLETE (LUCAS 51507/A—PF.700)		2	FITTED TO CONTINENTAL CARS (EXCEPT FRANCE).
554917 554602	Light Unit (Reflector and Glass) Adaptor, Double contact, for Bulbs		2 2	
	All other items as for Headlamp C.5525.			
370	Bulb, 45/40 watt, for Continental Headlamps		2	
C.5623	HEADLAMP, COMPLETE (LUCAS 51562/A—PF.700)		2	FOR USE IN CANADA AND U.S.A.
553724	Adaptor, Double contact, for Bulbs		2	
	All other items as for Headlamp C.5525, except that Light Units and Bulbs are not supplied.			
C.5625	HEADLAMP, COMPLETE (LUCAS 51565/A—PF.700)		2	FOR USE IN SWITZERLAND AND HOLLAND.
554665 858543	Light Unit (Reflector and Glass) Adaptor, Double contact, for Bulbs		2 2	
	All other items as for Headlamps C.5525.			
370	Bulb, 45/40 watt, for use in Switzerland and Holland		2	
C.5626	HEADLAMP, COMPLETE (LUCAS 51564/A—PF.700)		2	FOR USE IN NORWAY AND SWEDEN.
554665 858543	Light Unit (Reflector and Glass) Adaptor, Double contact, for Bulbs		2 2	
	All other items as for Headlamp C.5525.		•	
350	Bulb, 35/35 watt, for use in Norway and Sweden		2	
C.5627	HEADLAMP, COMPLETE (LUCAS 51563/A—PF.700EF)		2	FOR USE IN FRANCE.
555288 562303 552943	Light Unit (Reflector and Glass) Adaptor, Double contact, for Bulbs Backshell for Bulbs		2 2 2	
-	All other items as for Headlamp C.5525.			

Part No.	Description	Plate No.	No. per Unit	Remarks
C.2639	HEADLAMP DIPPER SWITCH (LUCAS 31284/A—FS.22/I)		1	
C.2659 C.2837 FS.104/3D C.724 C.4578	Cap (Rubber) for Dipper Switch (Lucas 360026) Bracket, for mounting of Dipper Switch Screw, Set, securing Bracket Washer, Shakeproof, on Setscrews Gasket (Sorbo Rubber), for mounting of Dipper Switch		! ! 2 2 !	FITTED ONLY TO L.H. DRIVE OPEN AND DROP HEAD COUPE. FITTED ONLY TO R.H. DRIVE FIXED HEAD COUPE.
AS.302/3H C.723	Screw, Set, securing Dipper Switch Washer, Shakeproof, on Setscrews		2 2	TIERS COOLE.
C.4517	SIDELAMP, COMPLETE (LUCAS 52175/B—513)		2	
F.F.2.1.0.2	Interview Contact incide Bulb Holder		2	
552103 207	Interior Contact inside Bulb Holder Bulb, 6 watt		2	
523986	Sealing Ring (Rubber) between Side Lamp Rim and Casing		2	
C.4549/2	Screw, securing Interior Contacts to Casings on Front Wings		2	
C.4691	VISUAL INDICATOR INSIDE LAMP CASINGS (LUCAS 573449)		2	
C.4098/2	Spring Clip, securing Visual Indicators (Lucas 571888)		2	
G 0007	FLACULUS INDICATOR LAMBS IN		2	
C.8907	FLASHING INDICATOR LAMPS IN FRONT WINGS (LUCAS 52271/A—L.563)		-	
575289	Rim Assembly, complete with Lens		2	
575292 522224	Lens only Wire Clip, securing Lens inside Rim		2 6	
575290 575294 C.9926	Beading (Rubber) sealing Lens Seating Plate Assembly Gasket (Rubber) between Lamps and Wings (Lucas 575283)	i	2 2 2	
C.5518	L.H. STOP/TAIL LAMP, COMPLETE (LUCAS 53350/A—L.549)	Ē	1	
574654 574890 380 574635 574634 113061	Rim Assembly, complete with Bulb Holder Gasket (Rubber) between Lamp and Tonneau Pane Bulb, 6/21 watt Lens Assembly (incorporating Reflectors) Gasket (Rubber) between Lens and Rim Screw, securing Lens to Rim	I	 	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.5519	R.H. STOP/TAIL LAMP, COMPLETE (LUCAS 53351/A—L.549)		1	
574655	Rim Assembly, complete with Bulb Holder		1	
	All other items as for Stop/Tail Lamp C.5518.			
C.5218 NN.125/L FW.104/T C.724	Switch, operating Stop Light (Lucas 31082/B) Nut, for mounting of Stop/Tail Lamps Washer, Plain, under Nuts Washer, Shakeproof, under Nuts		! 4 4	
C.5581 C.5582	Connector for Stop Light Switch (Lucas 861536) Connector for Stop Light Switch (Lucas 861535)		İ	FITTED TO R.H. DRIVE CARS ONLY FITTED TO L.H. DRIVE CARS ONLY
·				
C.5230	FLASHER UNIT (LUCAS 35003/A—FL.3)		. 1	
C.8400	Bracket, for mounting of Flasher Unit		ı	
			•	
C.4518	DOUBLE RELAY FOR FLASHER CIR- CUIT (LUCAS 33117/A—DB.10)		ı	
NS.125/4D	Screw, Set, securing Double Relay and Flasher Unit to Scuttle		3	
NN.125/L C.725 C.5583	Nut, on Setscrews Washer, Shakeproof, under Nuts Connector for Flasher Unit (Lucas 825307/B)		3 3 1	
		.*		
C.2838	NUMBER PLATE ILLUMINATION AND		I	
	REVERSE LAMP (LUCAS 53159/B—469)			
572347 572328 572326 177014 113351 222 382	Cover Assembly, complete with Lens Lens for Reverse Light Seal (Rubber) at joint of Cover with Body Nut, for fixing of Lamp Screw, securing Cover Bulb, 4 watt, for Number Plate Illumination Bulb, 21 watt, for Reverse Light		1 1 2 2 2	
C.1083 C.4531 C.5643	Switch for Reverse Lamp (Lucas 31077/D—FS.10-1) Gasket, under Reverse Lamp Switch (Lucas 163682) Connector, for Reverse Lamp Switch (Lucas 825304)		!	

Part No.	Description	Plate No.	No. per Unit	Remarks
C,5226	HORN (HIGH NOTE) (LUCAS 70071/D—HF.1748)		. 1	
C.5227	HORN (LOW NOTE) (LUCAS 70063/D—HF.1748)		1	
704651 703726 703727 703722	Bracket, at bottom of Horns Diaphragm Assembly for Low Note Horn Diaphragm Assembly for High Note Horn Contact Breaker Assembly	-	2 	
NS.125/9D NN.125/L C.724	Screw, Set, securing Horns Nut, on Setscrews Washer, Shakeproof, under Nuts		4 4 4	
C.5531	STEERING COLUMN CONTROL (LUCAS 32902/ECC.5)		ı	
32902/E	Top Cover Assembly (comprising Horn Push and Outer Moulding)		1	
330682 330696	Horn Push only Outer Moulding around Horn Push		! !	
330614 322166 331078	Plate for fixing of Control Spring under Horn Push Contact Assembly		; 1	
331417	Contact Plate and Peg Grub Screw, securing Steering Column Control in Hub		i 4	
C.1037	of Steering Wheel		·	
C.10830	SWITCH, ON SCREEN RAIL, OPERA- TING DIRECTION INDICATOR		I	
	LAMPS (LUCAS 31250/A—TPS.I)	•		
C.5560	Escutcheon, for Direction Indicator Switch (Lucas 311302)		1	REQUIRED ONLY FOR FIXED HEAD
C.5561	Eyelet for Direction Indicator Switch (Lucas 311303)		'	AND DROP HEAD COUPE.
C.10831	HANDLE, OPERATING DIRECTION INDICATOR SWITCH (LUCAS 311301)	I }	1	FOR USE ONLY ON FIXED HEAD OR DROP HEAD COUPE.
C.10832	HANDLE, OPERATING DIRECTION INDICATOR SWITCH (LUCAS 311075)	l)	ſ	FOR USE ONLY ON OPEN CARS.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.11840	WINDSCREEN WIPER MOTOR ASSEMBLY (LUCAS 75233/A—DR.I/GC.5I)		1	
C.11840/1 C.11840/2 C.11840/3 C.11840/4 C.11840/5	Brush Gear (Lucas 740687) Brush Set (Lucas 729367) Armature (Lucas 740616) Coil (Lucas 740593) Shaft and Gear (Lucas 745044)		 	
C.5585	Connector, for Screen Wiper Motor (Lucas 825306/E)		l	
C.5522	WHEEL BOX ASSEMBLY FOR WIND- SCREEN WIPER (LUCAS 72649/B)		2	
C.5522/I C.5522/2	Spindle and Gear (Lucas 740786) Rubber Tube for Wheel Box Spindles (Lucas 740711)		2 2	
C.11841	RACK, WITH CROSSHEAD (FLEXIBLE DRIVE BETWEEN SCREEN WIPER MOTOR AND WHEEL BOXES) (LUCAS 741263)		I	
C.5552	OUTER CASING, FOR RACK, FROM MOTOR TO WHEEL BOX (LUCAS 745153)		I	
C.5652	OUTER CASING, FOR RACK, FROM WHEEL BOX TO WHEEL BOX (LUCAS 745127)		1	FITTED TO OPEN CARS ONLY.
C.5520/I	OUTER CASING, FOR RACK, FROM MOTOR TO WHEEL BOX (LUCAS 740952)		1	FITTED TO DROP HEAD COUPE ONLY.
C.9643	OUTER CASING, FOR RACK, FROM MOTOR TO WHEEL BOX (LUCAS 745272)		Ī	FITTED TO FIXED HEAD COUPE ONLY.
C.7634	OUTER CASING, FOR RACK, FROM WHEEL BOX TO WHEEL BOX (LUCAS 740953)		1	FITTED TO DROP HEAD AND FIXED HEAD COUPE MODELS ONLY.
C.5450	OUTER CASING, FOR RACK, AT END OF WHEEL BOX (LUCAS 740746)		1	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.11842	L.H. ARM FOR WINDSCREEN WIPER (LUCAS 741295)		1	
C.11843	R.H. ARM FOR WINDSCREEN WIPER (LUCAS 741294)		I	
C.11844	BLADE FOR WINDSCREEN WIPER ARMS (LUCAS 741680)		2	
C.2608	BATTERY (I2 VOLT) (LUCAS 4011607/F—GTW.IIA/2)		ı	FITTED TO OPEN AND DROP HEAD COUPE MODELS ONLY.
C.9150	BATTERY (6 VOLT) (LUCAS 4022200/F—STGW.IIE)		2	FITTED TO FIXED HEAD COUPE MODELS ONLY.
	For Battery Fixings, see Body Section, pages 123, 176 or 232.			
C.5539	BATTERY CABLE (POSITIVE TO EARTH) (LUCAS 812212)		ı	
C.5535	BATTERY CABLE (NEGATIVE) (LUCAS 810834)		ı	FITTED TO OPEN AND DROP HEAD COUPE MODELS ONLY.
C.9152	BATTERY CABLE (NEGATIVE) (LUCAS 810821)		1	FITTED TO FIXED HEAD COUPE
C.9153	CABLE, ACROSS SCUTTLE, CONNECT- ING BATTERIES (LUCAS 810374)		1	MODELS ONLY.
C,2609	Screw, securing Cables to Battery Posts (Lucas 186111)		See remarks	2 required for Open and Drop Head Coupe Models.4 required for Fixed Head Coupe Models.
C,8151	INTERIOR MIRROR, COMPLETE		1	
C.9940 C.9941 C.9942 C.9943	Glass only, for Mirror Holder, for Mirror Nut, clamping Holder to Base Base, for Mirror		 	
C.8175 UFN.219/L C.723/A BD.9146/I	Screw, Set, securing Mirror Nut, on Setscrews Washer, Shakeproof, under Nuts Screw, Self-Tapping, securing Mirror		2 2 2 2	REQUIRED ONLY FOR OPEN CARS. REQUIRED ONLY FOR DROP HEAD AND FIXED HEAD COUPE.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8046	DISTRIBUTOR SUPPRESSOR		1	
C.8306	SPARKING PLUG SUPPRESSOR		6	
C.5534	BODY HARNESS (LUCAS 826883)		I	
C.8816	PANEL HARNESS (LUCAS 826882)		Ì	
C.8817	CHASSIS HARNESS (LUCAS 82688I)		ı	FITTED TO OPEN AND DROP HEAD COUPE MODELS ONLY.
C.9151	CHASSIS HARNESS (LUCAS 828281)		I	FITTED TO FIXED HEAD COUPE MODELS ONLY.
C.2831/I	LUGGAGE BOOT HARNESS			
	(LUCAS 994631/F)			
	ELECTRICAL CABLES			
C.5511	Cable for Interior Lights (Lucas 861269)		1	FITTED TO DROP HEAD COUPE
C.5245	Cable for Interior Lights (Lucas 860492)		1	MODELS ONLY. FITTED TO FIXED HEAD COUPE MODELS ONLY.
C.5555 C.5553 C.5645 C.5323 C.2884	Cable for Side Lamps (Lucas 861268) Cable for Petrol Pump (Lucas 826884) Cable from Solenoid to Starter (Lucas 999621) Cable from Coil to Distributor (Lucas 999145) Cable from Carburetter Solenoid to Thermo Switch (Lucas 859389)		2 	PIODELS ONLY.

Part No.	Description	Plate No.	No. oer Unit	Remarks
	CABLE CONNECTORS			
C.5581 C.5582 C.5583	Connector for Stop Light Switch (Lucas 861536) Connector for Stop Light Switch (Lucas 861535) Connector for Direction Indicator Lights Switch (Lucas 825307/B)		. 	FITTED TO R.H. DRIVE CARS ONLY. FITTED TO L.H. DRIVE CARS ONLY.
C.5585 C.5586	Connector for Windscreen Wiper Motor (Lucas 825306/E) Connector for Panel Light (Lucas 998412)		. ! !	
C.5512 C.5643	Connector for Interior Lights (Lucas 861270) Connector for Reverse Light Switch (Lucas 825304)		l I	FITTED TO DROP HEAD COUPE MODELS ONLY.
	CABLE SLEEVES			
C.2806 C.2783 C.8580	Sleeve for Side Lamp Cables (Lucas 859321) Sleeve for Headlamp Cables (Lucas 859300) Sleeve for Body Harness (26" long)		 2 	
	ELECTRICAL EARTH CABLES	•		
C.5247	Earth Cable for Interior Lights (Lucas 860494)		2	FITTED TO FIXED HEAD COUPE MODELS ONLY.
C.2612 C.9128	Earth Cable from Engine to Chassis Frame and from Body to Engine (Lucas 859340) Earth Cable for Direction Indicator Lamps (Lucas		2 2	
C.2895	862205) Earth Cable for Petrol Pump (Lucas 859449)		ı	•
C.5204	Earth Terminal for Lamps (Lucas 860019)		I	
	CABLE CLIPS			
C.1069/1	Clip, securing Flasher Relay Cable Clip, securing Stop Light Switch Cable		l I See	4 required for R.H. Drive cars; 6 required for
C.1040/8	Clip, securing Cables to Dynamo, Reverse Switch Connector, Rear Axle, Distributor and Bulkhead		remarks See	L.H. Drive cars.
C.1040/6 C.1040/8 C.1040/9 C.1040/12	Clip, securing Cables to Dynamo, Reverse Switch Con-		remarks See remarks See remarks	L.H. Drive cars.7 required for R.H. Drive cars; 8 required for L.H. Drive cars.8 required for R.H. Drive cars; 7 required for
C.1040/8 C.1040/9	Clip, securing Cables to Dynamo, Reverse Switch Connector, Rear Axle, Distributor and Bulkhead Clip, securing Cables to Side Lamps, Starter Switch, Dipper Switch and Speedometer Cable. Also to Petrol Feed and Oil and Thermometer Pipes Clip, securing Cables to Carburetter Solenoid, Dipper		See remarks See	 L.H. Drive cars. 7 required for R.H. Drive cars; 8 required for L.H. Drive cars. 8 required for R.H. Drive cars; 7 required for L.H. Drive cars. 8 required for Open and Drop Head Coupe Models; 11 required for Fixed Head Coupe
C.1040/8 C.1040/9 C.1040/12 C.1040/13 C.1040/16	Clip, securing Cables to Dynamo, Reverse Switch Connector, Rear Axle, Distributor and Bulkhead Clip, securing Cables to Side Lamps, Starter Switch, Dipper Switch and Speedometer Cable. Also to Petrol Feed and Oil and Thermometer Pipes Clip, securing Cables to Carburetter Solenoid, Dipper Switch, Flasher Harness on Plinths and Petrol Feed Pipes Clip, securing Thermometer Pipe Clip, securing Tubes to Windscreen Washer Clip, securing Cables to Battery and Front Lamps. Also		See remarks See remarks I I See	 L.H. Drive cars. 7 required for R.H. Drive cars; 8 required for L.H. Drive cars. 8 required for R.H. Drive cars; 7 required for L.H. Drive cars. 8 required for Open and Drop Head Coupe Models; 11 required for Fixed Head Coupe Models. 2 required for R.H. Drive cars; 3 required for

Part No.	Description	Plate No.	No. per Unit	Remarks
	RUBBER GROMMETS			
C.1426	Grommet, in Chassis Frame, for Petrol Pipes, Brake Pipes and Petrol Pump Cable. Also in Body for Speedometer Cable and in Dash Beam for Panel Harness and Oil/Thermo Pipes.		See remarks	8 required for R.H. Drive cars; 9 required for L.H. Drive cars.
C.974	Grommet, in Dash Beam, for Windscreen Washer Tubing, in Chassis Frame for Reverse Light Switch Cable, in Hinged Panel for Boot Lid Cables, in Radiator Valance for Lamp Cables and for mounting of Petrol Pump		П,	
C.975	Grommet, in Bulkhead, for Body Harness and in Chassis		2	
C.976	Frame for Petrol Pump Cables Grommet, in Wing Valance, for Chassis Harness		2	
C.977	Grommet, in Side Valance, for Body Cables		ا 9	FOR FIXED HEAD COUPE CARS ONLY
C.2706	Grommet, in Rocker, for Body Harness and Reverse Light Switch Cables, in Bulkhead for Speedometer Cable, Starter Switch Cables and Screen Washer Tubes, in Wings for Side Lamp Cables and on Boot Floor for Petrol Tank Cables		9	
C.2707	Grommet, in Bulkhead, for Windscreen Washer Tubes, Panel Harness and Speedometer Cable and for Oil/ Thermo Pipes		4	
C.2708	Grommet, in Bulkhead, for Panel Harness and in R.H. Battery Box for Body Harness		2	
C.2850 C.5574	Grommet, for Bonnet Release Cable Grommet, in Bulkhead, for Rev. Counter Cable		- !	
C.2784	Grommet, in Rear Number Plate Panel		į	
513	Grommet, for Oil and Thermo Pipes		ļ	
C.1042	Grommet, for Heater Lead			
	RUBBER PLUGS AND BOOTS			
BD.5571	Rubber Plug, in Dash, for use when Screen Washer is		ı	REQUIRED ONLY FOR OPEN AND
C.5648	not fitted Rubber Plug, in Dash, for use when Screen Washer is not fitted		1	DROP HEAD COUPE MODELS.
C.5647	Rubber Plug, in Rear Seat Pan and Luggage Compart-		2	
C.5648	ment, for use when Radio is not fitted Rubber Plug, in Rear Seat Pan and Luggage Compart-		2	
	ment, for use when Radio is not fitted		2	
C.4650 C.5580	Rubber Boot, for Terminals on Starter Solenoid Rubber Boot, for Terminals on Petrol Pump		í	