Part No.	Description	Plate No.	No. per Unit	Remarks
C.14380	FRONT CARBURETTER, COMPLETE	8-!	1	<u> </u>
C.14500	(HD.6)		•	Fitted from Chassis No. 820001 to 820016 830001 to 831898 824001 to 824741
C.14381	REAR CARBURETTER, COMPLETE (HD.6)	8- 2	1	834001 to 835934 827001 to 827271 837001 to 837940
7089	Body only for Front Carburetter (AUC.8245)	8- 3	1	,
7088 7090	Body only for Rear Carburetter (AUC.8244)  Adaptor for Ignition Union on Front Carburetter	8- 4	1	
7091 561 <b>8</b>	(AUC.2044)  Gasket under Adaptor (AUC.2014)  Screw, securing Adaptor to Front Carburetter	8 5	1 2	
7105 7106 7069	Body (AUC.2175)  Washer, Shakeproof, on Screws (AUA.4643) Ignition Union (AUC.4490) Suction Chamber Assembly (AUC.8073) (com-	8– 6 8– 7	2 ! 2	
7093 6961	prising Suction Chamber and Piston) Screw, holding Jet Needle in Piston (AUC.2057) Damper Assembly in Suction Chamber (AUC.8102)	8- 8	2 2	
7095 709 <del>4</del> 7038	Washer for Damper (AUC.4900) Spring, assisting return of Piston (AUC.4387) Skid Washer, under Spring, at bottom of Piston	8- 9 8-10 8-11	2 2 2	
7096	(AUC.3071) Screw, securing Suction Chamber to Carburetter (AUC.2175)	6.15	6	
7097 6957	Jet Needle (TL) Jet Assembly (AUC.8155) (comprising Jet Unit with Diaphragm and Cup)	8-12 8-13	2	
6958 6959	Jet Bearing (AUC.2001) Nut, locking Jet (AUC.2002)	8-14 8-15	2 2 2	
6960 7873 6993	Spring under Diaphragm (AUC.2006) Housing Assembly for Jet Unit (AUC.8221) Float Chamber Assembly for Rear Carburetter	8–16 8–17	2	
7114	(AUC.2009)  Float Chamber Assembly for Front Carburetter (AUC.2088)	8–18	1	
7115	Bolt, securing Float Chamber and Jet Housing to Carburetter (AUC.2110)		<b>8</b> 8	
7105 7116	Washer, Shakeproof, on Bolts (AUA.4643)  Lld for Float Chamber on Rear Carburetter (AUC.  4260)		ĭ	
7117	Lid for Float Chamber on Front Carburetter (AUC. 4261)	8–19	1	
1090 6970	Float (AUC.1123)  Needle and Seat, controlling petrol flow to Float Chamber (AUC.8170)	8-20 8-21	2	
7118 1153	Lever, operating Float Needle (AUC.1980) Knurled Pin, securing Lever to Float Chamber Lid (AUC.1152)	8-22 8-23	2	
7119 5832	Gasket under Float Chamber Lid (AUC.1147) Cap Nut, securing Lid to Float Chamber (AUC. 1867)	<b>8–24</b> <b>8–</b> 25	2 2	
1298	Serrated Washer (Fibre) on Cap Nut adjacent to Lid (AUC.1928)	8-26	2	
7120 479	Alum Washer on Cap Nut (AUC.1557) Filter in Inlet connection on Float Chamber (AUC. 2139)	8–27 8–28	2	
C.11488	Banjo Bolt, securing Feed Pipe to Float Chamber Lid (AUC.2698)	8-29	2	
C.11489 7962	Washer (Fibre) on Banjo Bolt (AUC.2!41) Thermostat Body Assembly on Front Carbur- etter (AUC.8961)	8–30 8–31	i	

#### **CARBURETTERS**

CARBURETTER (HD.6) (continued)   7863	Part No.	Description	Plate No.	No. per Unit	Remarks	
1956   Spring for Acceleration Needle (AUC.1917)   8-34   1   1   1   1   1   1   1   1   1		CARBURETTER (HD.6) (continued)				
Jie to Acceleration Needle (AUC.4759)   8-34		Acceleration Needle Assembly (AUC.8129)	8–32	1		
Spring Finger, holding Acceleration Needle after adjustment (AUC.3192)				1		
Dust Shield for Thermosta Body (AUC.1054)   S-26		Spring Finger, holding Acceleration Needle after		ł		
1617   Washer, Double Coil Spring, on Screws (AUC.3003)   8-38   2		Dust Shield for Thermostat Body (AUC.1054) Screw, securing Acceleration Needle to Thermo-				
Solenoid Assembly   for Acceleration   Needle	1617		8-38	2		
Spring Clip for Solenoid Terminals (AUC.4871)   S-40   2		Solenoid Assembly for Acceleration Needle (AUC.8177) (including Moulded Cap, Securing				
Durester (AUC.2085)   Sanja Bolt, securing Connecting Arm for attachment of Solenoid Body to Carburetter (AUC.2087)   Sanja Bolt, securing Connecting Arm and Bracket to Thermostat Body (AUC.2088)   Washer (Fibre) at the side of Bracket to Thermostat Body (AUC.4753)   Sanja Bolt Securing Connecting Arm and Bracket to Thermostat Body (AUC.4757)   Sanja Bolt Securing Connecting Arm to Carburstar (AUC.2086)   Washer (Fibre) between Connecting Arm and Carburetter (AUC.2086)   Carburetter (AUC.2089)   Carburetter (AUC.2089)   Carburetter (AUC.2089)   Carburetter (AUC.2089)   Sanja Bolt Securing Securing Arm and Connecting Arm (AUC.1957)   Carburetter (AUC.2089)   Carburetter (AUC.2089)   Sanja Bolt and Connecting Arm (AUC.1957)   Carburetter (AUC.2089)   Carburetter (AUC.2089)   Carburetter (AUC.2027)   Sanja Bolt and Connecting Arm (AUC.2027)   Sanja Bolt Securing Solow-run Valve (AUC.2027)   Sanja Bolt Securing Solow-run Valve (AUC.2027)   Sanja Bolt Securing Solow-run Valve (AUC.2027)   Sanja Bolt Auc.2028)   Carburetter (AUC.2027)		Spring Clip for Solenoid Terminals (AUC.4871)				
C.11498 Banjo Bolt, securing Connecting Arm and Bracket to Thermostat Body (AUC.2698)  7129 Washer (Fibre) at each side of Bracket to Thermostat Body (AUC.2698)  7127 Banjo Bolt, Securing Connecting Arm to Carburstat Body (AUC.2141)  7128 Washer (Fibre) as each side of Bracket to Thermostat Body (AUC.2141)  7129 Washer (Fibre) Banjo Bolt to Thermostat Body (AUC.2141)  7120 Washer (AUC.2089)  7120 Washer (Auc.1000)  7120 Washer (Auc.1000)  7210 Washer (Auc.1000)  722 Washer (Auc.1000)  723 Washer (Auc.1000)  724 Washer (Auc.1000)  725 Gland Washer (Neoprene) on Slow-run Valve (AUC.2027)  726 Washer (Brass) at top of Gland Washer (AUC.2030)  727 Washer (Brass) at top of Gland Washer (AUC.2030)  728 Washer (Brass) at top of Gland Washer (AUC.2030)  729 Washer (Brass) at top of Gland Washer (AUC.2030)  736 Throttle Spindle on Front Carburetter (AUC.3000)  737 Throttle Spindle on Rear Carburetter (AUC.3000)  738 Throttle Disc (Butterfly) (AUC.3000)  740 Serew, securing Throttle Disc to Spindle (AUC.3000)  750 Taper Pin, securing Stop to Throttle Spindle  750 (AUC.2106)  760 Throttle (AUC.2079)  760 Taper Pin, securing Stop to Throttle Spindle  760 Throttle (AUC.2016)  760 Taper Pin, securing Stop to Throttle Spindle  760 Throttle (AUC.2016)  760 Taper Pin, securing Stop to Throttle Spindle  760 Throttle (AUC.2016)  760 Throttle (AUC.2017)  760 Throttle (		buretter (AUC.2085)				
To Thermosta Body (AUC.2598)  Washer (Fibre) a teach side of Bracket to Thermostat Body (AUC.4753)  C.11489  Washer (Fibre) on Banjo Bolt to Thermostat Body (AUC.2141)  Banjo Bolt, securing Connecting Arm to Carburetter (AUC.2086)  Washer (Fibre) between Connecting Arm and Carburetter (AUC.2086)  Washer (Fibre) between Read of Banjo Bolt and Carburetter (AUC.2089)  Washer (Alum) between head of Banjo Bolt and Connecting Arm (AUC.1537)  Washer (Alum) between head of Banjo Bolt and Connecting Arm (AUC.1537)  Washer (Alum) between head of Banjo Bolt and Connecting Arm (AUC.1537)  Washer (Brass) at top of Gland Washer (AUC.2028)  Washer (Brass) at top of Gland Washer (AUC.2020)  Washer (Brass) at top of Gland Washer (AUC.2020)  Throttle Spindle on Front Carburetter (AUC.8423)  Throttle Spindle on Front Carburetter (AUC.8423)  Throttle Disc (Butterfly) (AUC.3280)  Throttle Disc (Butterfly) (AUC.3280)  Throttle Disc (Butterfly) (AUC.3280)  Throttle Disc (Butterfly) AUC.3280)  Taper Pin, securing Stop to Throttle Spindle  (AUC.2106)  Taper Pin, securing Stop to Throttle Spindle  (AUC.2106)  LEVER ON CARBURETTER SPINDLES, FOR THROTTLE RETURN SPRING  ANCHORAGE (AUC.2405)  Bolt through Lever (AUC.2694)  Auc on Bolt through Lever (AUC.2694)  Solid Nut on Bolt (AUC.2165)  2 Substantial Bands Research Spindle (AUC.2694)  Auc on Bolt through Lever (AUC.2694)  Solid Nut on Bolt (AUC.2165)		to Carburetter (AUC.2087)		_		
State Body (AÚC.4753)   Washer (Fibre) on Banjo Bolt to Thermostat Body   Rate (Fibre) on Banjo Bolt to Thermostat Body   Rate (Fibre) Both Securing Connecting Arm to Carburetter (AUC.2086)   Washer (Fibre) between Connecting Arm and   Rate (AUC.2086)   Carburetter (AUC.2086)   Rate (AUC.2086)   Rate (AUC.2086)   Rate (AUC.2087)   R		to Thermostat Body (AUC.2698)		•		
(AUC.2141)	7129		8_44	2		
	C.11489		8–45	ľ		
Washer (Fibre)   between   Connecting Arm   and   8-47   Carburetter (AUC.2089)	7127	Banjo Bolt, securing Connecting Arm to Carbur-	8–46	I		
Washer (Alum) between head of Banjo Bolt and Connecting Arm (AUC.1557)   Connecting Arm (AUC.1557)   Secondary Sec	7128	Washer (Fibre) between Connecting Arm and	8–47	1		
Valve for slow-running adjustment (AUC.2028)   8-49   2	7120	Washer (Alum) between head of Banjo Bolt and	8 <del>-4</del> 8	1		
Spring for Slow-run Valve (AUC.2027)   S-50   2	6967		8-49	2		
(AUC.2029) Washer (Brass) at top of Gland Washer (AUC.2030) 7964 Throttle Spindle on Front Carburetter (AUC. 8422) Throttle Spindle on Rear Carburetter (AUC. 8422) 1730 Throttle Disc (Butterfly) (AUC.3280) 1746 Screw, securing Throttle Disc to Spindle (AUC. 1358) 1750 Stop for Throttle (AUC.2079) 17050 Taper Pin, securing Stop to Throttle Spindle (AUC.2106)  7107 CONNECTING ROD BETWEEN CARBURETTERS (AUC.2411)  C.14371 LEVER ON CARBURETTER SPINDLES, FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.2694) Septiments of the Spindle (AUC.2166)  Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) 2		Spring for Slow-run Valve (AUC.2027)	8-50	2		
Throttle Spindle on Front Carburetter (AUC.     8422)		(AUC.2029) (Neoprene) on Slow-run Valve	8–51	2		
Throttle Spindle on Rear Carburetter (AUC.8423)   1   1730		Throttle Spindle on Front Carburetter (AUC.	8–52			
7046 Screw, securing Throttle Disc to Spindle (AUC. 4 1358) 7101 Stop for Throttle (AUC.2079) 7050 Taper Pin, securing Stop to Throttle Spindle (AUC.2106)  7107 CONNECTING ROD BETWEEN (AUC.2106)  7108 CARBURETTERS (AUC.2411)  C.14371 LEVER ON CARBURETTER SPINDLES, FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  8003 Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156)  2		Throttle Spindle on Rear Carburetter (AUC.8423)		1		
Stop for Throttle (AUC.2079)		Screw, securing Throttle Disc to Spindle (AUC.				
(AUC.2106)  7107 CONNECTING ROD BETWEEN 8-53 I CARBURETTERS (AUC.2411)  C.14371 LEVER ON CARBURETTER SPINDLES, 8-54 2 FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803 Bolt through Lever (AUC.2694) 2 5614 Nut on Bolt (AUC.2156) 2		Stop for Throttle (AUC.2079)		ļ		
CARBURETTERS (AUC.2411)  C.1437!  LEVER ON CARBURETTER SPINDLES, 8-54 2 FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803  Bolt through Lever (AUC.2694) 2 Nut on Bolt (AUC.2156) 2	7030			ı		
CARBURETTERS (AUC.2411)  C.1437!  LEVER ON CARBURETTER SPINDLES, 8-54 2 FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803  Bolt through Lever (AUC.2694) 2 Nut on Bolt (AUC.2156) 2						
FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803 Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) 2	7107		8–53	I		
FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803 Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) 2						
FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803 Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) 2						
FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  5803 Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) 2	C 14371	LEVER ON CARRIDETTER CRIME. FO	0 54	3		
5614 Nut on Bolt (AUC.2) 56) 2	C.173/ [	FOR THROTTLE RETURN SPRING	0-0 <del>1</del>	2		

Part No.	Description	Plate No.	No. per Unit	Remarks	
4833	COUPLING BETWEEN CONNECTING ROD AND CARBURETTER SPINDLES (AUC.4334)	855	2		
5801 673 4612	Bolt, securing Coupling (AUC.2669) Nut on Bolts (AUC.2673) Washer, under Nuts (AUC.4612)		4 4 4		
C.14614	OUTRIGGER SHAFT, CONNECTING REAR CARBURETTER SPINDLE TO THROTTLE CONTROLS	8–56	l		
C.14386	LEVER ASSEMBLY CONNECTING OUTRIGGER SHAFT TO THROTTLE CONTROL ROD	8–57	i		
4833 5801 673 4812	COUPLING BETWEEN REAR CARBUR- ETTER SPINDLE AND OUTRIGGER SHAFT (AUC.4334)  Bolt securing Coupling (AUC.2669) Nut on Bolts (AUC.2673) Washer under Nuts (AUC.4612)	8–58	! 2 2 2		
C.7461	INSULATORS BETWEEN CARBURET- TERS AND INLET MANIFOLD	8–59	2		
C.2368	Gasket at each side of Insulators	8–60	4		

Part No.	Description	Plate No.	No. per Unit	Remarks
C.12280	OVERFLOW PIPE FROM FLOAT CHAMBER LID	8–61	2	
C.15992	Clip, securing Overflow Pipes	8–62	I	
C.12336	SUCTION PIPE FROM FRONT CARBURETTER TO DISTRIBUTOR VACUUM CONTROL	8-63	I	Fitted from Chassis No. 820001 to 820016 830001 to 831898 824001 to 824741 834001 to 835934 827001 to 827271 837001 to 837940
C.12812	PETROL FEED PIPE ASSEMBLY LINKING CARBURETTERS	8–64	i -	
C.11575 C.11576	Olive on Petrol Pipe Nut, securing Petrol Pipe to Flexible Pipe		ŀ	Fitted from Chassis No. 820001 to 820016 830001 to 831898 824001 to 824741 834001 to 835934 827001 to 827271 837001 to 837940
C.3629	FLEXIBLE PETROL PIPE FROM CAR- BURETTER LINK PIPE TO FEED PIPE	8-65	1 -	
C.14364	BRACKET ASSEMBLY, ON CARBUR- ETTERS, ANCHORING RETURN SPRING	8-66	2	
C.14366	THROTTLE RETURN SPRING FROM LEVERS ON CARBURETTERS TO ANCHOR BRACKETS	8–67	2	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13268	BRACKET, BETWEEN CARBURETTERS, MOUNTING THROTTLE SWITCH		ļ	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION OR OVERDRIVE UNIT IS FITTED AT CHASSIS No. 820001 to 820016 830001 to 831898 824001 to 824741 834001 to 835934 827001 to 827271 837001 to 837940
C.12473 UFN.131/L FG.105/X	Stud for fixing of Throttle Switch Bracket to Manifold Nut, securing Bracket Washer, Spring, under Nut		     	REQUIRED ONLY WHEN AUTO-
NN.119/L AW.102/T	Nut securing Throttle Switch to Bracket Washer, under Nuts		2 2	FITTED.
C.14372	LEVER, ON CONNECTING ROD, FOR THROTTLE SWITCH (AUC.8215)		1	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION OR OVERDRIVE UNIT IS FITTED.
C.14387	LEVER, CONNECTING OUTRIGGER SHAFT TO KICK DOWN ROD (AUC.3125)		I	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION IS FITTED.

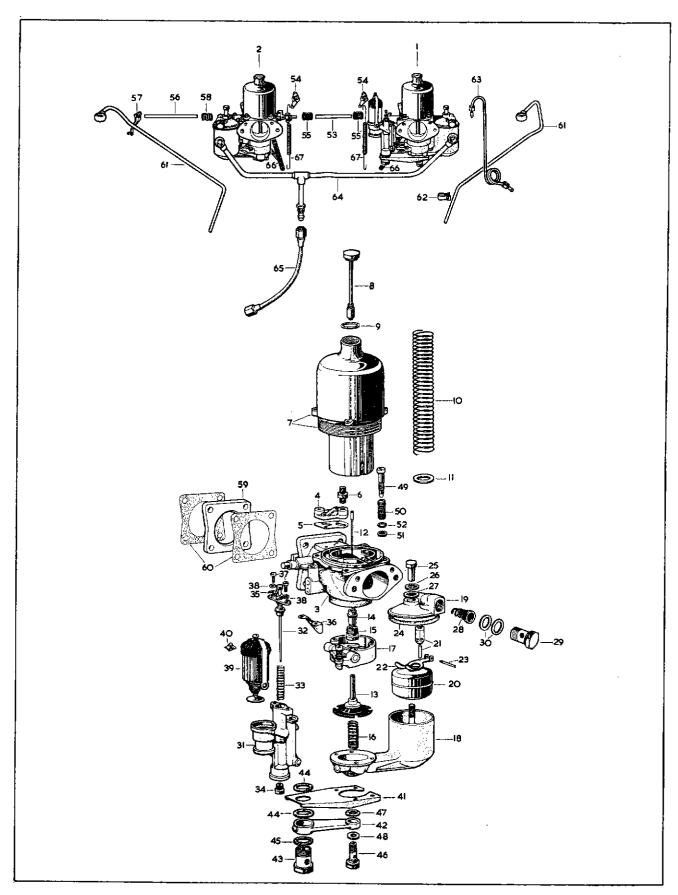


PLATE 8

C.16227	FRONT CARBURETTER, COMPLETE (HD.6)	9 <b>–</b> I		
	•	,_ ,	l	Fitted to Chassis No. 820017 and subs. 831899 and subs. 824742 and subs. 835935 and subs. 827272 and subs.
C.16228	REAR CARBURETTER, COMPLETE (HD.6)	9- 2	1	837941 and subs.
8032 8033 7868	Body only for Rear Carburetter (AUC.8264) Body only for Front Carburetter (AUC.8265) Adaptor (AUC.8260)	9- 3 9- 4	   	
7091 7961	(AUC.8190)  Gasket under Adaptor (AUC.2014)  Screw, securing Adaptor to Front Carburetter Body (AUC.5156)	9- 5	2	
7105 7069	Washer, Shakeproof, on Screws (AUA.4643) Suction Chamber Assembly (AUC.8073) (comprising Suction Chamber and Piston)	<del>9</del> – 6	2 2	
7093 6961 7095 7094 7038	Screw, holding Jet Needle in Piston (AUC.2057)  Damper Assembly in Suction Chamber (AUC.8102)  Washer for Damper (AUC.4900)  Spring, assisting return of Piston (AUC.4387)  Skid Washer, under Spring, at bottom of Piston (AUC.	9 7 9 8 9 9 910	2 2 2 2 2	
7096	Screw, securing Suction Chamber to Carburetter (AUC.2175)		6	
7097	Jet Needle (TL)	9–11	2	
6957	Jet Assembly (AUC.8155) (comprising Jet Unit with Diaphragm and Cup)	<del>9</del> –12	2	
6958 6959	Jet Bearing (AUC.2001) Nut, locking Jet (AUC.2002) Spring under Diaphragm (AUC.2006)	9-13 9-14 9-15	2 2 2	
6960 7873 6993	Housing Assembly for Jet Unit (AUC.8221) Float Chamber Assembly for Rear Carburetter	9-16	2 1	
7114	(AUC.2009)  Float Chamber Assembly for Front Carburetter (AUC.2088)	9–17	J	
7115	<b>Bolt,</b> securing Float Chamber and Jet Housing to Carburetter Body (AUC.2110)		8	
7105 7116	Washer, Shakeproof, on Bolts (AUA.4643) Lid for Float Chamber on Rear Carburetter (AUC.4260)		8 i	
7117	Lid for Float Chamber on Front Carburetter (AUC.4261)	9–18 9–19	í 2	
1090 6970	Float (AUC.1123)  Needle and Seat, controlling petrol flow to Float Chamber (AUC.8170)	9–20		
7118 1153	Lever, operating Float Needle (AUC.1980)  Knurled Pin, securing Lever to Float Chamber Lid (AUC.1152)	9-21 9-22	2 2	
7119	Gasket under Float Chamber Lid (AUC.1147)	9-23		
5832 1298	Cap Nut, securing Lid to Float Chamber (AUC.1867) Serrated Washer (Fibre) on Cap Nut adjacent to Lid (AUC.1928)	9–24 9–25	2	
7120 479	Alum Washer on Cap Nut (AUC.1557) Filter in inlet connection on Float Chamber Lid (AUC. 2139)	9-26 9-27		
C.11488	Banjo Bolt, securing Feed Pipe to Float Chamber Lid (AUC.2698)	9–28	2	
C.11489 7962	Washer (Fibre) on Banjo Bolt (AUC.2141) Thermostat Body Assembly on Front Carburetter (AUC.8961)	9-29 9-30		
7963	Acceleration Needle Assembly (AUC.8129)	9-31		
6956 7121	Spring for Acceleration Needle (AUC.1041)  Jet for Acceleration Needle (AUC.4759)	9-32 9-33		
7121 7123	Spring Finger, holding Acceleration Needle after adjustment (AUC.3139)	9–34	1	
6955 7124	Dust Shield for Thermostat Body (AUC.1054) Screw, securing Acceleration Needle to Thermostat	9-35 9-36	_	
1617	Body (AUA.1453) Washer, Double Coil, Spring, on Screws (AUC.3003)	9-37	2	

# CARBURETTERS AND PETROL FILTER FOR XK 150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
	CARBURETTER (HD.6) (continued)			
6876	Solenoid Assembly for Acceleration Needle (AUC. 8177) (including Moulded Cap, Securing Strap, Screw, Valve Plunger and Spring)	9-38	I	
7122 7125	Spring Clip for Solenoid Terminals (AUC.4871) Bracket, fixing Thermostat Body to Front Carburetter	9-39 9-40	2 I	
7126	(AUC.2085)  Connecting Arm for attachment of Solenoid Body to Carburetter (AUC.2087)	9-41	1	
C.11488	Banjo Bolt, securing Connecting Arm and Bracket to Thermostat Body (AUC.2698)	9-42	F	
7129	Washer (Fibre) at each side of Bracket to Thermostat Body (AUC.4753)	9-43	2	
C.11489	Washer (Fibre) on Banjo Bolt to Thermostat Body (AUC.2 4 )	9–44	l l	
7127	Banjo Bolt, securing Connecting Arm to Carburetter (AUC.2086)	9–45	1	
7128	Washer (Fibre) between Connecting Arm and Carbur- etter (AUC.2089)	9-46	1	
7120	Washer (Alum) between head of Banjo Bolt and Con- necting Arm (AUC.1557)	9-47	1	
5967	Valve for slow-running adjustment (AUC,2028)	9-48	2	
6966 6968	Spring for Slow-run Valve (AUC.2027) Gland Washer (Neoprene) on Slow-run Valve (AUC.	9-49 9-50	2 2	
6969	2029) Washer (Brass) at top of Gland Washer (AUC.2030)	9-51	2	
796 <del>4</del>	Throttle Spindle on Front Carburetter (AUC.8422)		ļ.	
7965	Throttle Spindle on Rear Carburetter (AUC.8423)		1	
1730 7046	Throttle Disc (Butterfly) (AUC.3280)		2	
7101	Screw, securing Throttle Disc to Spindle (AUC.1358) Stop for Throttle (AUC.2079)		4	
7050	Taper Pin, securing Stop to Throttle Spindle (AUC. 2106)		i	
7107	CONNECTING ROD BETWEEN CARBURETTERS (AUC.2411)	9–52	1	
			2	
C.14371	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)	9-53	-	
C.14371 5803	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)	9-53	-	
803 614	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156)	9-53	- !	
	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  Bolt through Lever (AUC.2694)	9-53	; ;	
5803 5614	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156)	9-53 9-54	2	
5803 6614 9966	FOR THROTTLE RETURN SPRING ANCHORAGE (AUC.8405)  Bolt through Lever (AUC.2694) Nut on Bolt (AUC.2156) Washer under Nut (AUC.8396)  COUPLING BETWEEN CONNECTING ROD AND CARBURETTER SPINDLES		}	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14614	OUTRIGGER SHAFT, CONNECTING REAR CARBURETTER SPINDLE TO THROTTLE CONTROLS	9–55	I	
C.14386	LEVER ASSEMBLY CONNECTING OUTRIGGER SHAFT TO THROTTLE CONTROL ROD	9–56	I	
4833	COUPLING BETWEEN REAR CARBUR- ETTER SPINDLE AND OUTRIGGER SHAFT (AUC.4334)	9–57	1	
5801 673 4812	Bolt securing Coupling (AUC.2669) Nut on Bolts (AUC.2673) Washer under Nuts (AUC.4612)		2 2 2	
C.7 <del>4</del> 61	INSULATOR BETWEEN CARBURET- TERS AND INLET MANIFOLD	9–58	2	
C.2368	Gasket at each side of Insulators	9-59	4	
C.12280	OVERFLOW PIPE FROM FLOAT CHAMBER LID	9–60	2	
C.15992	Clip, securing Overflow Pipes	9-61		
C.14210	SUCTION PIPE FROM FRONT CARBURETTER TO DISTRIBUTOR VACUUM CONTROL	9–62		Fitted to Chassis No. 820017 and subs. 831899 and subs. 827272 and subs.
C.14212	Neoprene Tube connecting Suction Pipe to Adaptor on Front Carburetter	9-63	1	83794  and subs. 824742 and subs. 835935 and subs.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.15868	PETROL FEED PIPE ASSEMBLY LINKING CARBURETTERS	9–64	I	Fitted to Chassis No. 820017 and subs. 831899 and subs.
C.11575 C.11576	Olive, on Petrol Pipe Nut, securing Petrol Pipe to Flexible Pipe		1	827272 and subs. 827272 and subs. 837941 and subs. 824742 and subs. 835935 and subs.
C.14492	FLEXIBLE PETROL PIPE FROM CAR- BURETTER LINK PIPE TO FILTER	9–65	I	
C.13681	PETROL FILTER ASSEMBLY (AC.7950001)	9–66	ı	820017 and subs.
7297 7298	Filter Casting Sealing Washer between Filter Casting and Glass	9–67 9–68	 	831899 and subs. > 827272 and subs. 837941 and subs.
7299 7300 7301	Bowl Filter Gauze Glass Bowl Retaining Strap Assembly	9–69 9–70 9–71	   	824742 and subs. 835935 and subs.
UFS.131/6R UFN.131/L FG.105/X	Screw, Set, securing Filter to R.H. Front Wing Valance Nut on Setscrews Washer, Spring, under Nuts		2 2 2	
C.14730	INTERMEDIATE PIPE FROM FILTER		1 .	Fitted from Chassis No.
C.14685	TO PETROL TANK FEED PIPE Union Nut			820017 to 820039 831899 to 832080 \$ 827272 to 827358
C.11575	Olive		i	837941 to 838246 824742 to 824884 835935 to 836191
C.15940	INTERMEDIATE PIPE FROM FILTER TO FLEXIBLE PIPE	9–72	į ·	Fitted to Chassis No. 820040 and subs.
C.11576 C.11575	Union Nut Olive		1	832081 and subs. 827359 and subs. 838247 and subs. 824885 and subs.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.3629	FLEXIBLE PIPE FROM INTERMEDIATE PIPE TO FRONT FEED PIPE	9_73	ı	Fitted to Chassis No. 820040 and subs. 832081 and subs.
C.13705	Banjo Bolt, securing Intermediate and Flexible Pipes	9_74	2	> 827359 and subs. 838247 and subs.
C.784	to Filter <b>Fibre Washer</b> on Banjo Bolts	<del>9</del> –75	4	824885 and subs. 836192 and subs.
C.14364	BRACKET ASSEMBLY, ON CAR- BURETTERS, ANCHORING RETURN SPRING	9–76	2	
C.14366	THROTTLE RETURN SPRING FROM LEVERS ON CARBURETTERS TO ANCHOR BRACKETS	9–77	2	
C.14665	BRACKET BETWEEN CARBURETTERS, MOUNTING THROTTLE SWITCH		1	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION OR OVERDRIVE UNIT IS FITTED AT CHASSIS No. 820017 and subs. 831899 and subs. 824742 and subs. 835925 and subs. 827272 and subs. 837941 and subs.
C.12473 UFN.131/L FG.105/X	Stud for fixing of Throttle Switch Bracket to Manifold Nut, securing Bracket Washer, Spring, under Nut		 	REQUIRED ONLY WHEN AUTO-
NN.119/L AW.102/T	Nut, securing Throttle Switch to Bracket Washer, under Nuts		2 2	MATIC TRANSMISSION IS FITTED.
C.14372	LEVER, ON CONNECTING ROD, FOR THROTTLE SWITCH (AUC.8215)		I	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION OR OVERDRIVE UNIT IS FITTED.
C.14387	LEVER, CONNECTING OUTRIGGER SHAFT TO KICK DOWN ROD (AUC. 3125)		ŧ	FOR USE ONLY WHEN AUTO- MATIC TRANSMISSION IS FITTED.

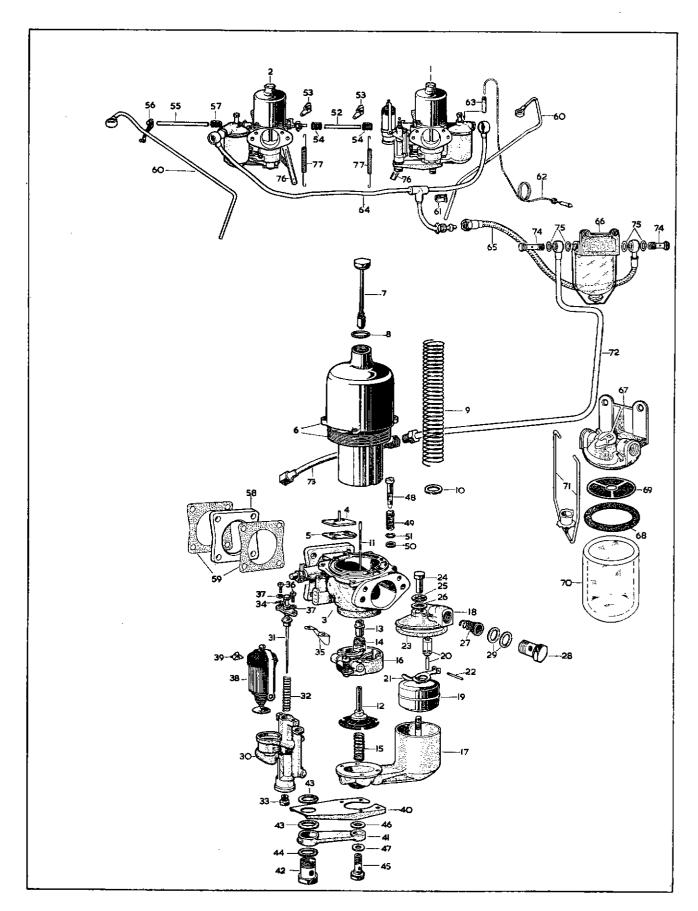


PLATE 9

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.14092	FRONT CARBURETTER ASSEMBLY	10 1	1		
	(HD.8)				
7867	Body only (AUC.8258)	10- 2	1		
7090	Adaptor for Ignition Union (AUC.2044)	10- 3	!		
7091	Gasket under Adaptor (AUC.2014)	10- 4	ļ		
618	Screw, securing Adaptor (AUC.21/5)		2		
7105 7106	Washer, Shakeproof, on Screws (AUA.4643) Ignition Union (AUC.4490)	10- 5	ī		•
7869	Suction Chamber and Piston Assembly (AUC:8076)	10- 6	į		
7093	Screw, holding Jet Needle in position (AUC.2057)		İ		
7870	Damper Assembly in Suction Chamber (AUC. 8110)	10- 7	ı		
7095	Washer for Damper (AUC.4900)	10- B	i		
7871	Spring assisting return of Piston (AUC.2107)	10- 9	ļ.		
7872	Skid Washer, under Spring, at bottom of Piston (AUC.1048)	10-10			
5618	Screw, securing Suction Chamber to Carburetter Body (AUC.2175)		4		
5980	Jet Needle (UE)	10-11	į.		
7860		10–12	ı		
.0.0	with Diaphragm and Cup)	10 13			
595 <b>8</b> 5959	Jet Bearing (AUC.2001) Nut, locking Jet Bearing (AUC.2002)	10-13 10-14	i		
960	Spring under Jet Diaphragm (AUC.2006)	10-15	i		
7873	Jet Housing Assembly (AUC.8221)	10-16	Ì		
7114	Float Chamber Assembly (AUC.2088)	10–17	1		
7117	Lid for Float Chamber (AUC.4261)	10-1B	ļ		
1090	Float (AUC.1123)	10-19	ļ		
5970	Chamber (AUC.8170)	10-20	ı		
7118	Lever operating Float Needle (AUC.1980)	10-21	į		
153	Pin securing Lever to Float Chamber Lid (AUC. 1152)	10-22	<u> </u>		
7119	Gasket under Float Chamber Lid (AUC.114/)	10-23 10-24	ł		
5832 1298	Cap Nut securing Lid (AUC.1867) Serrated Washer (Fibre) on Cap Nut adjacent to		i		
1270	Lid (AUC.1928)	10-22	•		
7120	Alum Washer on Cap Nut (AUC.1557)	10-26	ļ		
479	Filter in Inlet connection on Float Chamber Lid (AUC.2139)	10-27	,		
C.11488	Banjo Bolt securing Feed Pipe to Float Chamber Lid (AUC.2698)		-		
C.11489	Fibre Washer on Banjo Bolt (AUC.2141)	10-29	2		
5971	Thermostat Body Assembly (AUC.8160)	10-30	ļ		
875 1054	Acceleration Needle Assembly (AUC.8121) Spring for Acceleration Needle (AUC.1041)	10-31 10-32	i		
5 <del>9</del> 56 7121	Jet for Acceleration Needle (AUC.1759)	10-33	i		
7123	Spring Finger holding Acceleration Needle after		Ì		
•	adjustment (AUC.3139)				
6955	Dust Shield for Thermostat Body (AUC.1054)	10-35	1		
7124	Screw, securing Acceleration Needle to Thermostat Body (AUA.1453)	10–36	2		
7105	Washer, Shakeproof, on Screws (AUA.4643)	10-37	2		
5876	Solenoid Assembly for Acceleration Needle	10–38	1		
7103	(AUC.8177)		2		
7122	Spring Clip for Solenoid Terminals (AUC.4871)  Bracket fixing Thermostat Body to Front Car-	10-39	2 I		
7125	buretter (AUC.2085)	10-37	•		
7126	Connecting Arm between Thermostat Body and	10-40	l		
	Carburetter (AUC.2087)				
C.  [488	Banjo Bolt, securing Connecting Arm and Bracket	10-41	l		
7120	to Thermostat Body Fibre Washer at each side of Bracket to Thermo-	10.43	2		
'12 <del>9</del>	stat Body (AUC.4753)	10-72	2		
C.11489	Fibre Washer on Banjo Bolt to Thermostat Body	10-43	· 1		
127	(AUC.2141) Banjo Bolt, securing Connecting Arm to Car-	10-44	E		
128	buretter (AUC.2086)  Fibre Washer between Connecting Arm and Car-		1		
7120	buretter (AUC.2089)  Alum Washer between head of Banjo Bolt and	10-46	1		
120	Connecting Arm (AUC.1557)		•		
5967	Valve for slow-running adjustment (AUC.2028)	10-47	. 1		
		10-48	· 1		
5966	Spring for slow-run Valve (AUC.2027)		:		
5966 5968 5969	Gland Washer for slow-run Valve (AUC.2029)  Dished Washer (Brass) at top of Gland Washer	10-49 10-50	į		

FOR XK 150 'S' MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.14093	CENTRE CARBURETTER ASSEMBLY (HD.8)	10–51	1		
861	Body only (AUC.8259)		,		
869	Suction Chamber and Piston Assembly (AUC. 8076)		i		
093	Screw, holding Jet Needle in position (AUC.2057)		1		
7870	Damper Assembly in Suction Chamber (AUC. 8110)		i		
095	Washer for Damper (AUC.4900)				
787 (	Spring, assisting return of Piston (AUC.2107)		1		
872	Skid Washer, under Spring, at bottom of Piston (AUC.1048)		i		
618	Screw, securing Suction Chamber to Carburetter (AUC.2175)		4		
980	Jet Needle (UE)		Ī		
860	Jet Assembly (AUC.8156) (comprising Jet Unit with Diaphragm and Cup)	÷	i		
958	Jet Bearing (AUC.2001)		1	•	
959	Nut, locking let Bearing (AUC.2002)		i		
960	Spring under Jet Diaphragm (AUC.2006)		i		
873	Jet Housing Assembly (AUC.8221)		i		
993	Float Chamber Assembly (AUC.2009)		i		
116	Lid for Float Chamber (AUC.4260)		Ī		
090	Float (AUC.1123)		ĺ		
970	Needle and Seat controlling petrol flow to Float Chamber (AUC.8170)		İ		
118	Lever, operating Float Needle (AUC.1980)		J		
153	Pin, securing Lever to Float Chamber Lid (AUC. 1152)		İ		
119	Gasket under Float Chamber Lid (AUC.1147)		1		
832	Cap Nut securing Lid (AUC.1867)		ı		
298	Serrated Washer (Fibre) on Cap Nut, adjacent to Lid (AUC.1928)		1		
120	Alum Washer on Cap Nut (AUC.1557)		1		
79	Filter in Inlet connection on Float Chamber Lid (AUC.2139)		i		
11488	Banjo Bolt, securing Feed Pipe to Float Chamber Lid (AUC.2698)		I		
.11489	Fibre Washer on Banjo Bolt (AUC.2141)		2		
967	Valve for slow-running adjustment (AUC.2028)		ī		
966	Spring, for slow-run Valve (AUC.2027)		i		
968	Gland Washer for slow-run Valve (AUC.2029)		i		
969	Dished Washer (Brass) at top of Gland Washer (AUC.2030)		i		

C.14094 REAR CARBURETTER ASSEMBLY (HD.8)

10-52

All items for Rear Carburetter are identical with Centre Carburetter C.14093.

Part No.	Description	Plate No.	No. per Unit ———	Remarks	<u>-</u>
7867	BODY FOR FRONT CARBURETTER (AUC.8258)		1		
7861	BODY FOR CENTRE AND REAR CARBURETTERS (AUC.8259)		2		
7862 7863 7864 7865	Piston Lift Pin (AUC.2065) Spring for Lift Pin (AUC.2066) Seating Washer for Lift Pin (AUC.4943) Brass Washer at top of Seating Washer (AUC.		3 3 3 3		
7866	4944) Circlip, securing Washers and Spring on Lift Pin (AUC.1250)	·	3	·	
C.14098	LEVER, ON CARBURETTER SPINDLES,	10-53	3		
	CONNECTING CONTROL RODS TO SLAVE SHAFTS (AUC.3124)		_		
5803 5614 7966	Bolt through Levers Nut on Bolt Washer under Nut		3 3 3		
C.14104	CONTROL ROD LINKING LEVERS ON CARBURETTER SPINDLES AND SLAVE SHAFTS	10–54	3		
C.13824	Clip, securing Control Rods to Levers	10–55	6		
C.14103	LEVER, ON SLAVE SHAFTS, CON- NECTING CONTROL RODS TO CARBURETTER SPINDLES (AUC.4054)		3		
5803 5614 7966	Bolt through Levers Nut, on Bolts Washer under Nuts		3 3 3		
C.14145	THROTTLE SLAVE SHAFT ASSEMBLY, FRONT	10–57	7 1		
C.14147	THROTTLE SLAVE SHAFT ASSEMBLY, REAR	, 10–58	8 I		
C.14359	Distance Piece, on Rear Slave Shaft, behind Lever for Centre Carburetter	10–5	9 I		

Part No.	Description	Plate No.	No. per Unit	Remarks
C.11635	COUPLING BETWEEN FRONT AND REAR SLAVE SHAFTS	10–60	1	
5803 5614 7966	Bolt through Coupling Nut on Bolts Washer under Nuts		2 2 2	
C.14128	LEVER, ON REAR SLAVE SHAFT, FOR CONNECTION OF CONTROL ROD TO ACCELERATOR PEDAL	10–61	I	
5803 5614 7966	Bolt through Lever Nut on Bolt Washer under Nut		     	
C.8486	INSULATOR BETWEEN CARBURET- TERS AND INLET MANIFOLD	10–62	3	
C.7221	Gasket at each side of Insulator	1063	6	
C.14364	BRACKET ASSEMBLY ANCHORING THROTTLE RETURN SPRINGS	10–64	3	·
C.14366	THROTTLE RETURN SPRING	10–65	3	
C.14577	OVERFLOW PIPE FOR FRONT CARBURETTER	10–66	I	
C.14576	OVERFLOW PIPE FOR CENTRE CARBURETTER	10–67	l	
C.14578	OVERFLOW PIPE FOR REAR CARBURETTER	10–68	1	
C.14090	Clip securing Overflow Pipes	1069	1	

Part No.	Description	Plate No.	No, per Unit	Remarks
C.12336	SUCTION PIPE FROM FRONT CARBURETTER TO DISTRIBUTOR VACUUM CONTROL	10–70	I	
C.14351	PETROL FEED PIPE ASSEMBLY LINK- ING CARBURETTERS TO FILTER		ı	Fitted from Chassis No. 820005 to 820038 830336 to 832075 824789 to 824863 835961 to 836186 827334 to 827354 837993 to 838245
C.15283	PETROL FEED PIPE ASSEMBLY LINK- ING CARBURETTERS TO FILTER	. 10–71	I	Fitted to Chassis No. 820039 and subs. 832076 and subs. 824864 and subs. 836187 and subs. 827355 and subs. 838246 and subs.
C.13681	PETROL FILTER ASSEMBLY (AC.7950001)	10–72	ı	
7297 7298 7299 7300 7301	Filter Casting Sealing Washer Filter Gauze Glass Bowl Retaining Strap Assembly	10-73 10-74 10-75 10-76 10-77	       	
UFS.131/7R FG.105/X C.14353	Screw, Set, securing Filter to Air Cleaner Washer, Spring, on Setscrews Distance Piece on Setscrews		2 2 2	Fitted from Chassis No. 820005 to 820038 830336 to 832075 824789 to 824863 835961 to 836186 827334 to 827354 837993 to 838245
UFN.131/L FG.105/X	Nut, securing Filter Washer, Spring, under Nuts		2 2	Fitted to Chassis No. 820039 and subs. 832076 and subs. 824864 and subs. 836187 and subs. 827355 and subs. 838246 and subs.
C.14372	LEVER FOR OVERDRIVE SWITCH	10-78	1	

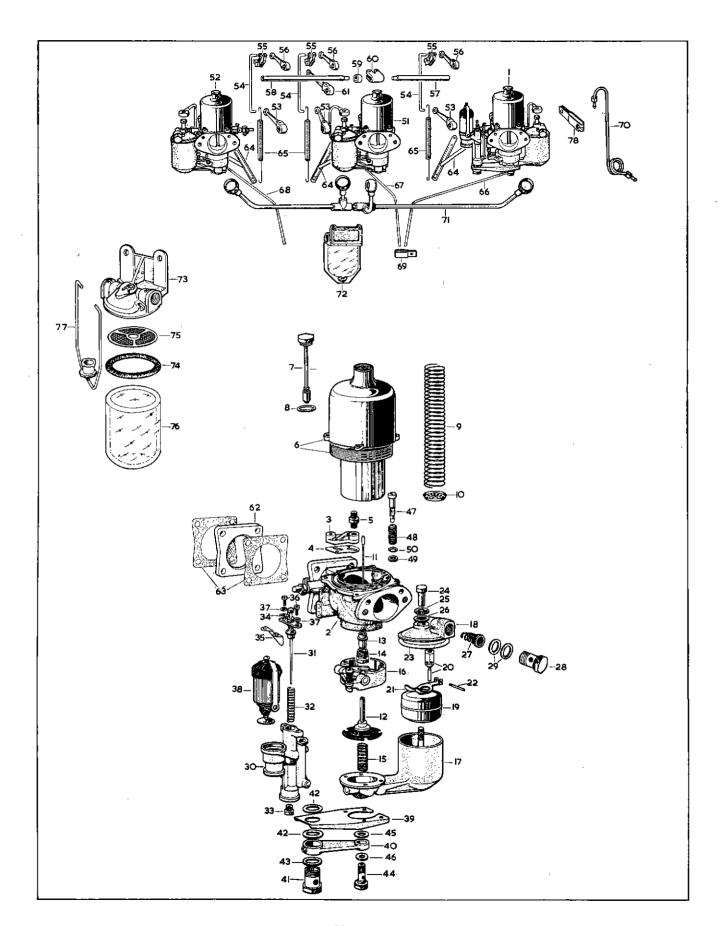


PLATE 10

### AIR CLEANER INSTALLATION

#### FITTED TO RIGHT HAND DRIVE XK 150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.13769	AIR CLEANER AND SILENCER ASSEMBLY (A.C. DELCO 7955076)		t		
7375 7376 7377 7374	Silencer Body Assembly (7955077) Element (7955078) Cover (7955080) Nut, securing Cover to Body (1527688)	-   1     - 2     - 3     - 4			
C.13770	BRACKET ASSEMBLY SUPPORTING	!1- 5	2		
	AIR CLEANER		_		
UFS.131/4D	Screw, Set, securing Bracket to Air Cleaner and Battery Box		5 5		
FG.105/X	<b>Washer,</b> Spring, on Setscrews				
C.13768	AIR INTAKE	11– 6	ı		
C.4475	Gasket between Air Intake and Carburetters	11- 7	2		
OD.105/4]	Dowel, positioning Air Intake to Carburetters	11-8	2		
CS.131/8D C.725	Screw, Set, securing Air Intake to Carburetters Washer, Shakeproof, on Setscrews		2 2		
C.12401	HOSE CONNECTING AIR CLEANER TO AIR INTAKE	11– 9	I		
C.2905/9	Clip, securing Hose to Air Cleaner and Intake	11-10	2		

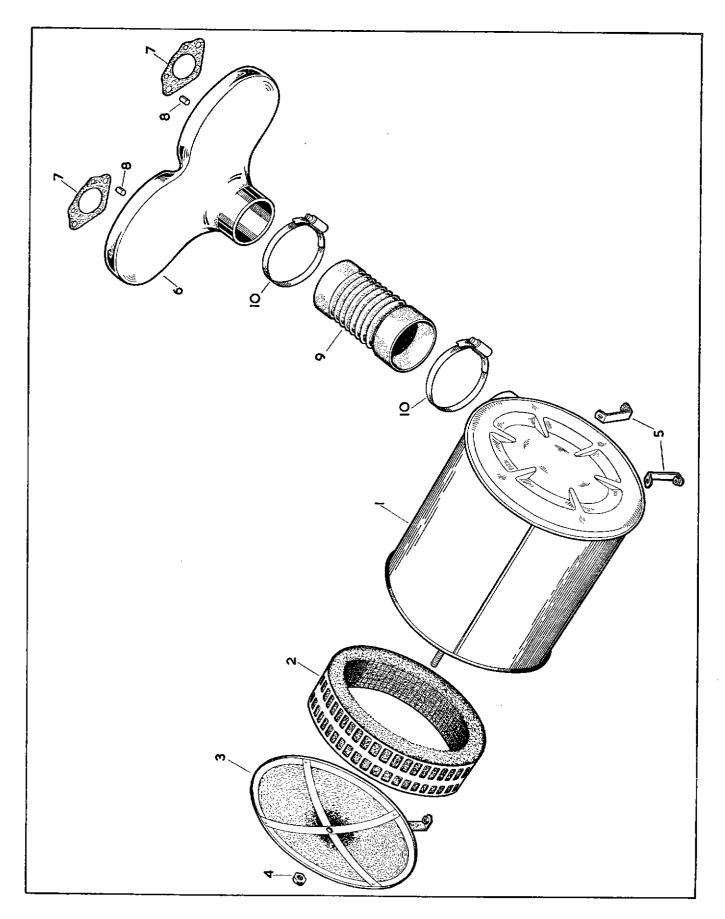


PLATE 11

### AIR CLEANER INSTALLATION

#### FITTED TO LEFT HAND DRIVE XK 150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13069	AIR CLEANER ASSEMBLY (A.C. DELCO 7223739)	12- i	I	
C.13072	BRACKET SUPPORTING AIR CLEANER AT REAR	12- 2	ı	
CS.131/5D NS.121/5D C.725	Screw, Set, securing Bracket to Air Intake Screw, Set, securing Bracket to Air Cleaner Washer, Shakeproof, on Setscrews		1 2 3	
C.13073	BRACKET SUPPORTING AIR CLEANER AT FRONT		ı	
C.8136 NN.131/L C.725	Distance Piece between Bracket and Air Cleaner Nut securing Bracket Washer, Shakeproof, under Nuts	12- 4	1 2 2	
C.8139	AIR INTAKE	12- 5	ı	
C.4475 OD.105/4J	Gasket, between Air Intake and Carburetters Dowel, positioning Air Intake to Carburetters	12- 6 12- 7	2 2	
CS.131/8D C.725	Screw, Set, securing Air Intake to Carburetters Washer, Shakeproof, on Setscrews		2 2	
C.1788	RUBBER CONNECTION BETWEEN AIR CLEANER AND AIR INTAKE	12- 8	з і	·

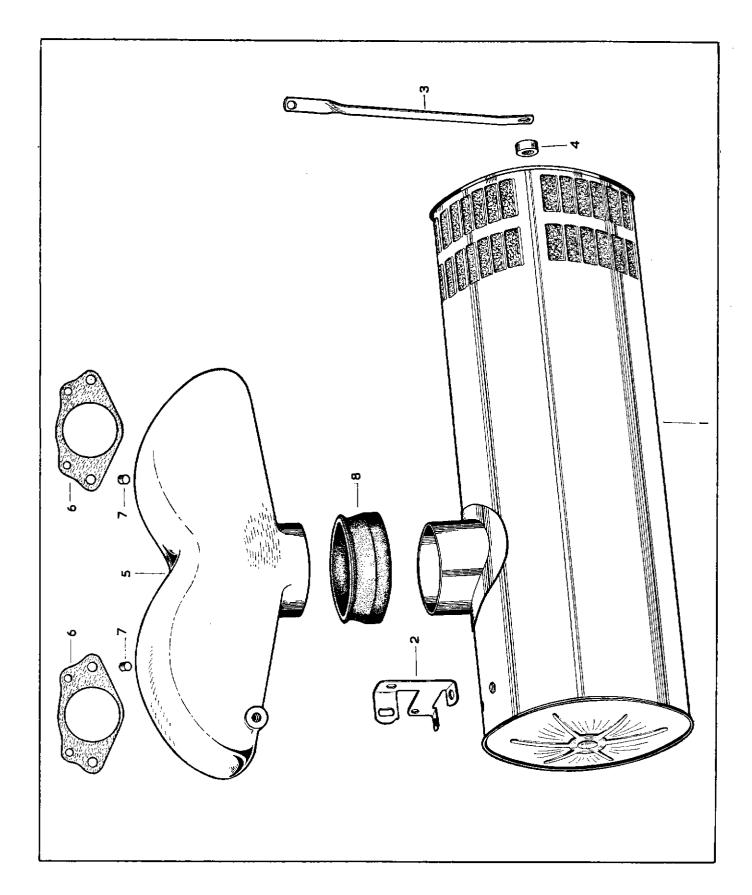


PLATE 12

#### AIR CLEANER

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14312	AIR CLEANER ASSEMBLY		I	Fitted from Chassis No. 820005 to 820038 830336 to 832075 824789 to 824863 835961 to 836186 827334 to 827354 837993 to 838245
C.14313 C.14317 C.14318 C.14319 C.14320 BD.541/5 C.14315 C.8667/1	Base Assembly, complete with Trumpets Mesh Element (E/AC.9505) Wire Screen at each side of Elements (E/AC.9506) Distance Piece (1\frac{3}{4}\) long) at bottom of Bolt Distance Piece (1\frac{1}{2}\) long) at top of Bolt Special Washer at top of small Distance Piece Lid only Nyloc Nut, securing Lid		1 3 6 2 2 2 1 2	
C.15277	AIR CLEANER ASSEMBLY		ī	Fitted to Chassis No. 820039 and subs. 832076 and subs.
C.15278	Page Accomply, complete with Townses and In	12 1		824864 and subs. 836187 and subs. 827355 and subs. 838246 and subs.
	Base Assembly, complete with Trumpets and Intake Mesh		Į.	
C.15282 C.15258	Distance Piece on Bolts Paper Element Assembly (5403)	13- 2 13- 3	2 1	
C.15284	Lid only	13- 4	1	
C.8667/I BD.541/3	Nyloc Nut securing Lid Special Washer under Nuts	13 5 13 6	2 2	
C.7164	Gasket between Air Cleaner and Carburetters	13- 7	3	
C.4202/2 FG.105/X	Nut, securing Air Cleaner to Carburetters Washer, Spring, under Nuts		6 6	

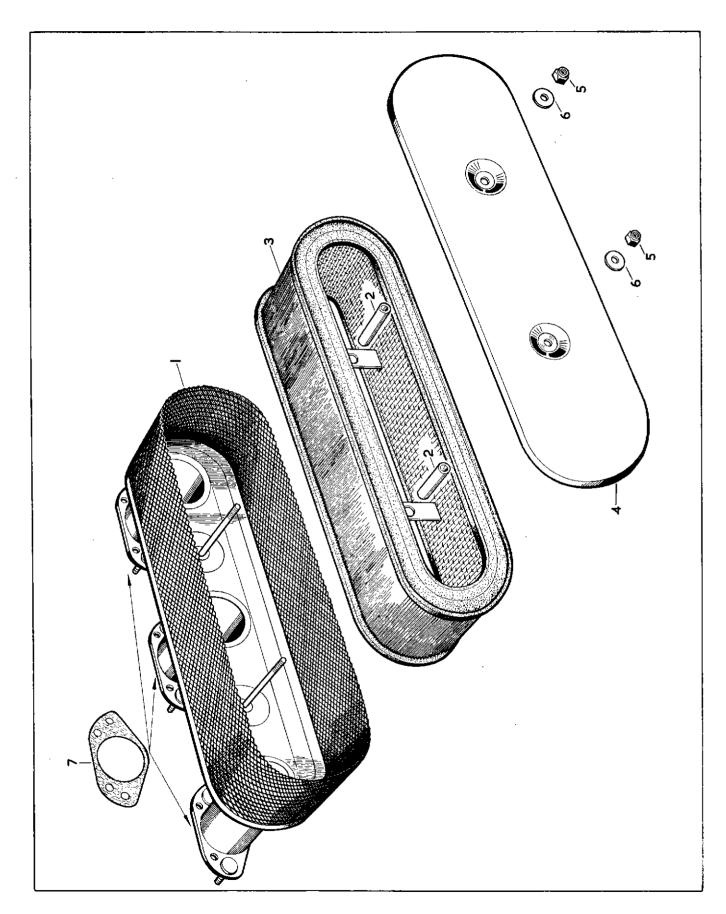


PLATE 13

### ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13746	ACCELERATOR PEDAL ASSEMBLY		I	
C.11671	Rubber Pad, on Accelerator Pedal		I	
C.13743	BRACKET ASSEMBLY MOUNTING ACCELERATOR PEDAL			
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 1	
C.6969 C.3968/I FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, Self-Locking, securing Fulcrum Pin Washer, Plain, under Nut		!	
C.13748	ACCELERATOR PEDAL SHAFT		ı	
	ASSEMBLY		ľ	
BD.1814/2 UFS.125/8R FW.104/T UFN.125/L C.724	Pop Rivet, securing Pedal Shaft to Dash at Spherical Bearing Screw, Set, securing Pedal Shaft to Dash at Bracket Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		3 2 2 2 2	
C.12486 L.103/6U C.386	Roller, on Shaft, for Accelerator Pedal Split Pin, retaining Roller Washer, Plain, under Split Pin			
C.13755	CONTROL ROD LINKING ACCELER- ATOR PEDAL SHAFT WITH INTER- MEDIATE LEVER		1	
C.13814	INTERMEDIATE LEVER ASSEMBLY AT TOP OF DASH		I	
C.13403 UFS.125/5R C.724	Bracket and Bearing Assembly mounting end of Lever Screw, Set, securing Lever and Bracket to Dash Washer, Shakeproof, on Setscrews		1 4 4	

### (R.H. DRIVE CARS ONLY) ACCELERATOR CONTROLS

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13755	CONTROL ROD LINKING INTER- MEDIATE LEVER WITH THROTTLE SPINDLE		1	
C.13407	BRACKET FOR THROTTLE SPINDLE		1	
C.13407	SUPPORT		·	
C.8016 C.3477	Grommet, in Bracket Bush (Graphite Impregnated) in Grommet		! !	
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Bracket to Dash Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2 2	
310	THROTTLE RETURN SPRING BETWEEN PEDAL SHAFT AND BRACKET ON PEDAL SEAL RETAINER		I	

PLATE 14 WILL BE ISSUED AT A LATER DATE

### ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 830001 TO 831139, 837001 TO 837627, 834001 TO 835718

Part No.	Description	Plate No.	No. per Unit	Remarks
C.4956	ACCELERATOR PEDAL ASSEMBLY		ı	
C.3473 C.8667/2	Rubber Pad on Accelerator Pedal Nut, Self Locking, securing Accelerator Pedal to Bracket		1	
FW.105/T	on Clutch Housing <b>Washer</b> , Plain, under Nut		I	
C.13206	BRACKET, ON UNDERSIDE OF TOE BOARD FOR MOUNTING OF FUL- CRUM LEYER		I	
UFS.125/5R UFN.125/L C.724	Screw, Set, securing Bracket to Toe Board Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2	
C.13203	FULCRUM LEVER ASSEMBLY FOR CONNECTION OF CONTROL RODS BETWEEN PEDAL AND CROSS SHAFT		I	
C.6969 C.3968/I FW.104/T	Fulcrum Pin, securing Fulcrum Lever in Bracket Nut, Self Locking, on Fulcrum Pin Washer, Plain, under Nut			
C.13406	PUSH ROD, LINKING ACCELERATOR		ı	
C.4989	PEDAL WITH FULCRUM LEVER Rubber Gaiter on Push Rod		ı	
C.13216	CONTROL ROD, LINKING FULCRUM LEVER WITH CROSS SHAFT		ı	
BD.1708/5 L.103/4U FW.104/T	Washer, Double Coil Spring, on Control Rod Split Pin, retaining Control Rod Washer, Plain, under Split Pin		2 2 2	

## (L.H. DRIVE CARS ONLY) ACCELERATOR CONTROLS

FITTED FROM CHASSIS No. 830001 TO 831139, 837001 TO 837627, 834001 TO 835718

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13404	CROSS SHAFT ASSEMBLY ON SCUTTLE		1	
C.13403	BRACKET ASSEMBLY MOUNTING CROSS SHAFT		2	
UFS.125/5R C.724	Screw, Set, securing Brackets to Scuttle Washer, Shakeproof, on Setscrew		4	
C.13316 BD.1708/2 L.103/6U C.386	Spacing Collar for mounting of Cross Shaft Washer, Double Coil Spring, on Cross Shaft Split Pin, retaining Cross Shaft Washer, Plain, under Split Pin			
C.13202	CONTROL ROD LINKING CROSS SHAFT WITH LEVER ON THROTTLE SPINDLE		l	
UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	
C 12407	BRACKET FOR THROTTLE SPINDLE		1	
C.13407 C.8016 C.3477	Grommet, in Support Bracket Bush (Graphite Impregnated) in Grommet		l 1	
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Support Bracket to Scuttle Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2	
310	THROTTLE RETURN SPRING		ı	
C.14393	Bracket, at Bonnet Hinge Mounting, anchoring Return Spring		1	

### PLATE 15 WILL BE ISSUED AT A LATER DATE

### ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 831140 AND SUBS., 837628 AND SUBS., 835719 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.13746	ACCELERATOR PEDAL ASSEMBLY		1		
C.11671	Rubber Pad on Accelerator Pedal		1		
					-
C.13743	BRACKET ASSEMBLY MOUNTING ACCELERATOR PEDAL		1		
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 !		
C.6969 C.3968/I FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, Self Locking, securing Fulcrum Pin Washer, Plain, under Nut				
C.14190	CROSS SHAFT ASSEMBLY ON DASH		t		
C.13308 BD.1814/2 UFS.125/3R	Bearing Assembly, supporting Cross Shaft at R.H. side Pop Rivet, securing Bearing to Dash Screw, Set, securing Cross Shaft Bracket to L.H. side		1 3 2		
C.724 FW.104/T	of Dash  Washer, Shakeproof, on Setscrews  Washer, Plain, under Shakeproof Washers		2		
C.12486 L.103/6U C.386	Roller, on Cross Shaft, for Accelerator Pedal Split Pin, retaining Roller Washer, Plain, under Split Pin		I I		
•					
C.14216	CONTROL ROD LINKING LEVER ON CROSS SHAFT WITH INTERMEDIATE LEVER		I		
UFN.125/L C.724	Nut, securing Control Rod to Levers Washer, Shakeproof, under Nuts		2 2		

### ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 831140 AND SUBS., 837628 AND SUBS., 835719 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14193	INTERMEDIATE LEVER ASSEMBLY AT R.H. SIDE OF DASH		1	
UFS.125/4R C.724	Screw, Set, securing Intermediate Lever to Dash Washer, Shakeproof, on Setscrews		4 4	
C.13755	CONTROL ROD LINKING INTER- MEDIATE LEVER WITH THROTTLE SPINDLE		Ī	
310 C.14393	THROTTLE RETURN SPRING  Anchor Bracket for Throttle Return Spring		(   1	
C.13407 C.8016 C.3477 UFS.125/5R	BRACKET FOR THROTTLE SPINDLE SUPPORT  Grommet in Bracket Bush (Graphite Impregnated) in Grommet  Screw, Set, securing Bracket to Dash Washer Plain on Saternove		 	
FW.104/T UFN.125/L C.724	Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2	

## PLATE 16 WILL BE ISSUED AT A LATER DATE

#### **AUTOMATIC TRANSMISSION**

### ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 827001 TO 827193, 824001 TO 824584

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13746	ACCELERATOR PEDAL ASSEMBLY	•	1	
C.11671	Rubber Pad, on Accelerator Pedal		ı	
C.13743	BRACKET ASSEMBLY, MOUNTING ACCELERATOR PEDAL		i	
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 1	
C.6969 C.3968/I FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, securing Fulcrum Pin Washer, Plain, under Nut			
C.13748	ACCELERATOR PEDAL SHAFT ASSEMBLY		1	
BD.1814/2	Pop Rivet, securing Pedal Shaft to Dash at Spherical Bearing		3	
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Pedal Shaft to Dash at Bracket Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2	
C.12486 L.103/6U C.386	Roller, on Shaft, for Accelerator Pedal Split Pin, retaining Roller on Shaft Washer, Plain, under Split Pin		 	
310	THROTTLE RETURN SPRING BETWEEN PEDAL SHAFT AND BRACKET ON PEDAL SEAL RETAINER		ı	
C.13755	CONTROL ROD LINKING PEDAL SHAFT WITH CROSS SHAFT		1	

#### AUTOMATIC TRANSMISSION

### ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 827001 TO 827193, 824001 TO 824584

Part No.	Description	Plate <b>N</b> o.	No. per Unit	Remarks
C.13818	CROSS SHAFT ASSEMBLY		1	
C.13310 UFS.131/6R C.725	Lever, for Kick Down Control Pinch Bolt, securing Lever on Shaft Washer, Shakeproof, on Pinch Bolt		   	
UFS.125/5R C.724	Screw, Set, securing Cross Shaft to Dash at Brackets Washer, Shakeproof, on Setscrews		4	
C.13308 BD.1814/2	Spherical Bearing, supporting Cross Shaft at L.H. Side Pop Rivet, securing Spherical Bearing		1 3	
C.13816	CONTROL ROD LINKING CROSS SHAFT WITH THROTTLE SPINDLE		1	i.
C.13458 C.13459 C.6925 UFN.225/L	Guide for Control Rod Spherical Seat for Control Rod Guide Spring, on Control Rod Nut, on Control Rod		  2    2	
UFN.125/L C.724 L.102/4U FW.104/T BD.1708/2	Nut, securing Control Rod to Throttle Spindle Washer, Shakeproof, under Nut Split Pin, securing Control Rod to Cross Shaft Washer, Plain, under Split Pin Washer, Double Coil Spring, under Plain Washer			
C.13407	BRACKET FOR THROTTLE SPINDLE		1	
C.13407	SUPPORT		•	
C.8016 C.3477	Grommet, in Bracket Bush (Graphite Impregnated) in Grommet		-	
C.13630	Stop Bracket, for Throttle Lever		1	
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Support and Stop Brackets to Dash Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2	
C.13450	CONTROL ROD LINKING CROSS SHAFT WITH INTERMEDIATE KICK-DOWN LEVER		ı	
	Nut, securing Control Rod		2	

#### **AUTOMATIC TRANSMISSION**

### ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 827001 TO 827193, 824001 TO 824584

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13451	INTERMEDIATE KICK-DOWN LEVER ASSEMBLY		I	
C.13453	SHAFT ASSEMBLY FOR MOUNTING OF INTERMEDIATE KICK-DOWN LEVER		ı	
C.8667/2 FW.104/T	Nut, Self Locking, securing Lever on Shaft Washer, Plain, under Nut		-	
UFS.125/5R UFN.125/L C.724	Screw, Set, securing Shaft to Dash Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2	
C.13455	KICK-DOWN CONTROL ROD FROM INTERMEDIATE LEVER TO TRANS- MISSION UNIT		ı	
C.13309 L.102/4U AW.102/T	Felt Washer, at fixings of Kick-Down Rod Split Pin, securing Kick-Down Rod Washer, Plain, under Split Pins		2 2 2	
310	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		I	
C.14366	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		I	REQUIRED ONLY WHEN IT IS NECESSARY TO LIGHTEN PEDAL PRESSURE.
C.13499 UFS.119/6R C.723/A	Bracket, anchoring Return Spring Screw, Set, securing Bracket to Chassis Frame Washer, Shakeproof, on Setscrew			

# PLATE 17 WILL BE ISSUED AT A LATER DATE

## ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 820001 AND SUBS., 827194 AND SUBS., 824585 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13746	ACCELERATOR PEDAL ASSEMBLY		ı	
C.11671	Rubber Pad, on Accelerator Pedal		I	
C.13743	BRACKET ASSEMBLY, MOUNTING ACCELERATOR PEDAL		l	
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 I	
C.6969 C.3968/I FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, Self Locking, securing Fulcrum Pin Washer, Plain, under Nut		 	
C.13748	ACCELERATOR PEDAL SHAFT ASSEMBLY		1	
BD.1814/2	Pop Rivet, securing Pedal Shaft to Dash at Spherical Bearing		3	
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Pedal Shaft to Dash, at Bracket Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2	
C.12486 L.103/6U C.386	Roller, on Shaft, for Accelerator Pedal Split Pin, retaining Roller Washer, Plain, under Split Pin			
				•
310	THROTTLE RETURN SPRING BETWEEN PEDAL SHAFT AND BRACKET ON PEDAL SEAL RETAINER		ŧ	
C.13755	CONTROL ROD LINKING PEDAL SHAFT WITH INTERMEDIATE LEVER		I	

## ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 820001 AND SUBS., 827194 AND SUBS., 824585 AND SUBS.

C.14195   INTERMEDIATE LEVER ASSEMBLY ON DASH	Part No.	Description	Plate No.	No. per Unit	Remarks
C.13816 CONTROL ROD LINKING INTER- MEDIATE LEVER WITH THROTTLE SPINDLE C.13459 Guide for Centrol Red C.13459 Spherical Seast for Control Red 1 C.13459 Spherical Seast for Control Red 2 UFN.125/L Nut, securing Control Red 2 UFN.125/L Nut, securing Control Red 1 C.724 UFN.1047 Washer, Shakeproof, under Nut Spile Pin, securing Control Red Intermediate Lever Washer, Pain, under Spile Pin Washer, Double Cold Spring, under Plain Washer  C.13407 BRACKET FOR THROTTLE SPINDLE SUPPORT C.3477 Browner, Double Cold Spring, under Plain Washer  C.3476 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet  UFN.125/L Screw, Sec., securing Support and Stop Brackets to Dash Nut, on Secrews Washer, Shakeproof, under Nuts  C.14216 CONTROL ROD LINKING INTER- MEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Red 2 UFN.125/L Nut, securing Control Red 2 UFN.125/L Nut, securing Support and Stop Brackets to Dash Nut, on Secrews Washer, Shakeproof, under Nuts  C.14216 CONTROL ROD LINKING INTER- MEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Red 2	C.14195			I	
MEDIATE LEVER WITH THROTTLE SPINDLE  C.13458 C.13458 C.13459 Spherical Seat for Control Rod LOPIN.225/L UPN.125/L UPN.125/L UPN.125/L UPN.125/L UPN.125/L UPN.25/L  UPN.25/SP UPN.2					
MEDIATE LEVER WITH THROTTLE SPINDLE  C.13458 C.13458 C.13458 C.13459 Spherical Seat for Control Rod Guide Spherical Seat for Control Rod I Nut, on Control Rod Nut, on Control Rod I Nut, securing Control Rod to Throttle Spindle C.724 UFN.125/L L.102/4U Split Pin, securing Control Rod to Intermediate Lever Washer, Plain, under Split Pin BD.1708/2  BRACKET FOR THROTTLE SPINDLE SUPPORT  C.8016 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet  C.3477 Bush (Graphite Impregnated) in Grommet  UFS.125/SR UFS.125/SR UFN.125/L C.724  C.13400  C.13410  C.13					
C.13459 Spherical Seat for Control Rod Guide C.6925 Spring, on Control Rod   2  UFN.125/L Nut, securing Control Rod   2  UFN.125/L Nut, securing Control Rod   1  VFN.125/L Split Pin, securing Control Rod to Throttle Spindle   1  VFN.1047 Washer, Plain, under Split Pin   1  BD.1708/2 Washer, Plain, under Split Pin   1  BD.1708/2 BRACKET FOR THROTTLE SPINDLE   1  C.13407 BRACKET FOR THROTTLE SPINDLE   1  SUPPORT  C.8016 Grommet, in Bracket   1  C.3477 Bush (Graphite Impregnated) in Grommet   1  C.13630 Stop Bracket, for Throttle Lever   1  UFS.125/5R Screw, Set, securing Support and Stop Brackets to Dash   2  UFN.125/L C.724 Washer, Shakeproof, under Nuts   2  C.14216 CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT   1  UFN.125/L Nut, securing Control Rod   2	C.13816	MEDIATE LEVER WITH THROTTLE		I	
C.724 Washer, Shakeproof, under Nut Split Pin, securing Control Rod to Intermediate Lever Washer, Plain, under Split Pin Washer, Plain, under Split Pin Washer, Double Coil Spring, under Plain Washer  C.13407 BRACKET FOR THROTTLE SPINDLE SUPPORT  C.8016 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet I C.3477 Bush (Graphite Impregnated) in Grommet I C.13408 Stop Bracket, for Throttle Lever I STOPPORT  UFS.125/SR Support and Stop Brackets to Dash Sure, Securing Support and Stop Brackets to Dash Yut, on Setscrews Washer, Shakeproof, under Nuts 2  C.14216 CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod 2	C.13459 C.6925	Spherical Seat for Control Rod Guide Spring, on Control Rod		l	
C.8016 C.3477 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet  C.13630 Stop Bracket, for Throttle Lever  UFS.125/5R UFN.125/L C.724  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L  Nut, securing Control Rod  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT	C.724 L.102/4U FW.104/T	Washer, Shakeproof, under Nut Split Pin, securing Control Rod to Intermediate Lever Washer, Plain, under Split Pin		 	
C.8016 C.3477 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet  C.13630 Stop Bracket, for Throttle Lever  UFS.125/5R UFN.125/L C.724  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L  Nut, securing Control Rod  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT					
C.8016 C.3477 Grommet, in Bracket Bush (Graphite Impregnated) in Grommet  C.13630 Stop Bracket, for Throttle Lever  UFS.125/5R UFN.125/L C.724  CONTROL ROD LINKING INTERMEDIATE LEVER Washer, Shakeproof, under Nuts  C.14216  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L  Nut, securing Control Rod  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT					
C.3477 Bush (Graphite Impregnated) in Grommet  C.13630 Stop Bracket, for Throttle Lever  UFS.125/SR UFN.125/L Nut, on Setscrews C.724 Susher, Shakeproof, under Nuts  C.14216 CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod  2  C.1425/L Nut, securing Control Rod  2  C.14216 CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT	C.13407			I	
UFS.125/5R UFN.125/L C.724  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod 2  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod 2				-	
UFN.125/L C.724  Nut, on Setscrews Washer, Shakeproof, under Nuts  C.14216  CONTROL ROD LINKING INTERMEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L  Nut, securing Control Rod  2	C.13630	•		•	
MEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod 2	UFN.125/L	Nut, on Setscrews		2	
MEDIATE LEVER WITH KICK-DOWN CROSS SHAFT  UFN.125/L Nut, securing Control Rod 2					
UFN.125/L Nut, securing Control Rod 2 C 724 Washer, Shakeproof, under Nuts 2	C.14216	MEDIATE LEVER WITH KICK-DOWN		ı	
CITAT VI BORDET, OTBECOPT OUT THOSE THOSE THOSE	UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	

## ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 820001 AND SUBS., 827194 AND SUBS., 824585 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14192	CROSS SHAFT ASSEMBLY FOR KICK- DOWN CONTROL		1	
C.13308 BD.1814/2	Spherical Bearing, supporting Cross Shaft at R.H. Side Pop Rivet, securing Spherical Bearing		] 3	
UFS.125/4R C.724	Screw, Set, securing Cross Shaft to Dash at L.H. Side Washer, Shakeproof, on Setscrews		2 2	
C.13455	KICK-DOWN CONTROL ROD FROM CROSS SHAFT TO TRANSMISSION UNIT		1	Fitted from Chassis No. 827194 to 827206
C.13309 L.102/4U AW.102/T	Felt Washer at fixings of Control Rod Split Pin, securing Kick-Down Control Rod Washer, Plain, under Split Pins		2 2 2	824585 to 824591
C.14819	KICK-DOWN CONTROL ROD (LONG) CONNECTING CROSS SHAFT WITH TRANSMISSION UNIT		ı	
C.14818	KICK-DOWN CONTROL ROD (SHORT) CONNECTING CROSS SHAFT WITH TRANSMISSION UNIT		ı	Fitted to Chassis No.  820001 and subs. 827207 and subs. 824592 and subs.
C.14820 UFN.219/L C.14822	Adjusting Nut, linking Control Rods Nut (R.H. Thread) locking Adjusting Nut Nut (L.H. Thread) locking Adjusting Nut		[ ] ]	
C.13309 L.102/4U AW.102/T	Felt Washer, at fixing of Control Rods Split Pin, securing Kick-Down Control Rods Washer, Plain, under Split Pins		2 2 2	
310	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		1	
C.14366	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		I	REQUIRED ONLY WHEN IT IS NECESSARY TO LIGHTEN PEDAL PRESSURE.
C.13499 UFS.119/6R C.723/A	Bracket, anchoring Return Spring Screw, Set, securing Bracket to Chassis Frame Washer, Shakeproof, on Setscrew			

PLATE 18 WILL BE ISSUED AT A LATER DATE

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 830001 TO 831139, 837001 TO 837627, 834001 TO 835718

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.4956	ACCELERATOR PEDAL ASSEMBLY		ı		
C.3473 C.8667/2	Rubber Pad on Accelerator Pedal Nut, Self-Locking, securing Accelerator Pedal to Bracket		1		
FW.105/T	on Clutch Housing <b>Washer,</b> Plain, under Nut		i		
C.13206	BRACKET, ON UNDERSIDE OF TOE BOARD, FOR MOUNTING OF FUL- CRUM LEVER				
UFS.125/5R UFN.125/L C.724	Screw, Set, securing Bracket to Toe-Board Nut, on Setscrews Washer, Shakeproof, under Nuts		3 3 3		
C.13203	FULCRUM LEVER ASSEMBLY FOR CONNECTION OF CONTROL RODS BETWEEN PEDAL AND CROSS SHAFT		1		
C.6969 C.3968/I FW.104/T C.13628	Fulcrum Pin, securing Fulcrum Lever in Bracket Nut, Self Locking, securing Fulcrum Pin Washer, Plain, under Nut Anchor Bracket, under Nut, for Throttle Return Spring		.		
C.13406	PUSH ROD LINKING ACCELERATOR PEDAL WITH FULCRUM LEVER		ı		·
C.4989	Rubber Gaiter on Push Rod		ı		
C.13495	CONTROL ROD, LINKING FULCRUM		ı		
UFN.125/L	LEVER WITH CROSS SHAFT		2		
C.724 C.13575	Nut, securing Control Rod Washer, Shakeproof, under Nuts Retainer, under Nut at Cross Shaft, for Throttle Return Spring		2 2 1		

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED FROM CHASSIS No. 830001 TO 831139, 837001 TO 837627, 834001 TO 835718

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13438	CROSS SHAFT ASSEMBLY		1	·
310	Throttle Return Spring, between Kick-Down Lever and Bracket at Fulcrum Lever		1	
C.13403	BRACKET ASSEMBLY MOUNTING CROSS SHAFT TO DASH		2	
UFS.125/5R C.724	Screw, Set, securing Brackets to Dash Washer, Shakeproof, on Setscrews		4 4	
C.13316 L.103/6U C.386 BD.1708/2	Spacing Collar, locating Cross Shaft Split Pin, retaining Cross Shaft Washer, Plain, under Split Pin Washer, Double Coil Spring, under Plain Washer		1 1 1 1	
C.13450	CONTROL ROD FROM CROSS SHAFT KICK-DOWN LEVER TO INTER- MEDIATE LEVER		1	
UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	
C.13451	INTERMEDIATE KICK-DOWN LEVER ASSEMBLY		1	
C.13453	SHAFT ASSEMBLY FOR MOUNTING OF INTERMEDIATE KICK-DOWN LEVER		1	
C.8667/2 FW.105/T	Nut, Self Locking, securing Lever on Shaft Washer, Plain, under Nut		1 1	
UFS.125/5R UFN.125/L C.724	Screw, Set, securing Shaft to Dash Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2	
C.13455	KICK-DOWN CONTROL ROD FROM INTERMEDIATE LEVER TO TRANS- MISSION UNIT		1	
C.13309 L.102/4U AW.102/T	Felt Washer, at fixings of Kick-Down Rod Split Pin, securing Kick-Down Rod Washer, Plain, under Split Pins		2 2 2	

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 831140 AND SUBS., 837628 AND SUBS., 835719 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.13746	ACCELERATOR PEDAL ASSEMBLY	-	1		
C.11671	Rubber Pad, on Accelerator Pedal		1	-	
					ŧ
C.13743	BRACKET ASSEMBLY MOUNTING ACCELERATOR PEDAL		1		
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 1 1		
C.6969 C.3968/1 FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, securing Fulcrum Pin Washer, Plain, under Nut		1 1 1		
C.14191	ACCELERATOR PEDAL SHAFT		1		·
	ASSEMBLY		'		
C.13308 BD.1814/2 UFS.125/5R C.724	Bearing Assembly supporting Shaft at R.H. side Pop Rivet, securing Bearing to Dash Screw, Set, securing Pedal Shaft to L.H. side of Dash Washer, Shakeproof, on Setscrews		1 3 2 2		
C.12486 L.103/6U C.386	Roller, on Shaft, for Accelerator Pedal Split Pin, retaining Roller Washer, Plain, under Split Pin		1 1 1		
		`			
C.13455	KICK-DOWN CONTROL ROD FROM PEDAL SHAFT LEVER TO TRANS- MISSION UNIT		. 1	Fitted from Chassis No.	
C.13309 L.102/4U AW.102/T	Felt Washer, at fixings of Kick-Down Rod Split Pin, securing Kick-Down Rod Washer, Plain, under Split Pins		2 2 2	831140 to 831266 837628 to 837654 835719 to 835750	

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 831140 AND SUBS., 837628 AND SUBS., 835719 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14819	KICK-DOWN CONTROL ROD (LONG) FROM PEDAL SHAFT LEVER TO TRANSMISSION UNIT		1	
C.14818	KICK-DOWN CONTROL ROD (SHORT) FROM PEDAL SHAFT LEVER TO TRANSMISSION UNIT		1	Fitted to Chassis No. 831267 and subs. 937655 and subs. 835751 and subs.
C.14820 UFN.219/L C.14822	Adjusting Nut, linking Control Rods Nut (R.H. Thread) locking Adjusting Nut Nut (L.H. Thread) locking Adjusting Nut		1 1 1	
C.13309 L.102/4U AW.102/T	Felt Washer, at fixing of Control Rods Split Pin, securing Kick-Down Rods Washer, Plain, under Split Pins		2 2 2	
310	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		1	
C.14366	RETURN SPRING BETWEEN LEVER ON TRANSMISSION UNIT AND BRACKET ON CHASSIS FRAME		1	REQUIRED ONLY WHEN IT IS NECESSARY TO LIGHTEN PEDAL PRESSURE.
C.13499 UFS.119/6R C.723/A	Bracket, anchoring Return Spring Screw, Set, securing Bracket to Chassis Frame Washer, Shakeproof, on Setscrew		1 1 1	
C.14216	CONTROL ROD LINKING PEDAL SHAFT WITH INTERMEDIATE LEVER		1	
UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	
C.14194	INTERMEDIATE LEVER ASSEMBLY ON DASH		1	
UFS.125/4R C.724	Screw, Set, securing Intermediate Lever to Dash Washer, Shakeproof, on Setscrews		4 4	

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

FITTED TO CHASSIS No. 831140 AND SUBS., 837628 AND SUBS., 835719 AND SUBS.

Part No.	Description	Plate No.	No. per Unit	Remarks	
310	THROTTLE RETURN SPRING BE- TWEEN INTERMEDIATE LEVER AND BRACKET ON DASH		1		
C.14393	Bracket, anchoring Throttle Return Spring		1		
C.13816	CONTROL ROD LINKING INTER- MEDIATE LEVER WITH THROTTLE SPINDLE		1		
C.13458 C.13459 C.6925 UFN.225/L	Guide for Control Rod Spherical Seat, for Control Rod Guide Spring, on Control Rod Nut, on Control Rod		1 2 1 2		
UFN.125/L C.724 L.102/4U FW.104/T BD.1708/2	Nut, securing Control Rod to Throttle Spindle Washer, Shakeproof, under Nut Split Pin, securing Control Rod to Intermediate Lever Washer, Plain, under Split Pin Washer, Double Coil Spring, under Plain Washer		1 1 1 1		
C 13407	DRACKET FOR TUROTTIE SPINISHE		1		
C.13407	BRACKET FOR THROTTLE SPINDLE SUPPORT		'		
C.8016 C.3477	Grommet, in Bracket Bush (Graphite Impregnated) in Grommet		1 1		
C.13630	Stop Bracket, for Throttle Lever		1		
UFS.125/5R FW.104/T UFN.125/L C.724	Screw, Set, securing Support and Stop Brackets to Dash Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts		2 2 2 2		

# PLATE 20 WILL BE ISSUED AT A LATER DATE

## ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

Part No.	Description	Plate No.	No. per Unit	Remarks
C.13746	ACCELERATOR PEDAL ASSEMBLY		1	
C.11671	Rubber Pad, on Accelerator Pedal		1	
C.13743	BRACKET ASSEMBLY MOUNTING ACCELERATOR PEDAL		1	
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 3 1 1	
C.6969 C.3968/1 FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, Self Locking, securing Fulcrum Pin Washer, Plain, under Nut		1 1 1	
C.14118	ACCELERATOR PEDAL SHAFT		1	
C.14110	ASSEMBLY		_	
BD.1814/2 UFS.125/5R FW.104/T UFN.125/L	Pop Rivet, securing Pedal Shaft to Dash at Spherical Bearing Screw, Set, securing Pedal Shaft to Dash at Bracket Washer, Plain, on Setscrews Nut, on Setscrews		3 2 2 2	
C.724 C.12486 L.103/6U	Washer, Shakeproof, under Nuts Roller, on Shaft, for Accelerator Pedal Split Pin, retaining Roller		2 1 1	
C.386	Washer, Plain, under Split Pin		·	
C.15997	STIFFENER, UNDER PEDAL SHAFT BRACKET		1	
C.13450	CONTROL ROD LINKING ACCELER ATOR PEDAL SHAFT WITH LEVER ON THROTTLE SLAVE SHAFT	<u>.</u>	1	
UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	

# ACCELERATOR CONTROLS (R.H. DRIVE CARS ONLY)

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14128	LEVER, ON REAR SLAVE SHAFT, FOR CONNECTION OF CONTROL ROD (AUC 4055)		1	
5803 5614 7966	Bolt clamping Lever on Slave Shaft Nut, on Bolt Washer, Spring, under Nut		1 1 1	
C.14145	FRONT SLAVE SHAFT FOR THROTTLE OPERATION		1	
C.14147	REAR SLAVE SHAFT FOR THROTTLE OPERATION		· 1	
C.14103	LEVER, ON THROTTLE SLAVE SHAFTS, FOR CONNECTION OF CONTROL RODS TO CARBURET- TERS (AUC.4054)		3	
5803 5614 7966	Bolt, securing Levers to Slave Shafts Nut, on Bolts Washer, Spring, under Nuts		3 3 3	
C.14359	Distance Piece, on Rear Slave Shaft, between boss on Air Pipe and Lever for Centre Carburetter		1	
C.11635	COUPLING, LINKING FRONT AND REAR SLAVE SHAFTS		1	
5803 6614 7966	Bolt through Coupling Nut on Bolts Washer, Spring, under Nuts		2 2 2	
C.14104	CONTROL ROD, LINKING LEVERS ON SLAVE SHAFTS WITH CAR- BURETTERS		3	
C.13824	Clip, securing Control Rods		6	

# PLATE 21 WILL BE ISSUED AT A LATER DATE

# ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

	Description	Plate No.	No. per Unit	Remarks
C.13746	ACCELERATOR PEDAL ASSEMBLY		1	
C.11671	Rubber Pad, on Accelerator Pedal		1	
	,			
C.13743	BRACKET ASSEMBLY, MOUNTING ACCELERATOR PEDAL		1	
UFS.125/4R C.724 UFS.125/8R UFN.225/L	Screw, Set, securing Bracket to Floor Washer, Shakeproof, on Setscrews Stopscrew, for Accelerator Pedal Nut, locking Stopscrew		3 2 1 1	
C.6969 C.3968/1 FW.104/T	Fulcrum Pin, securing Pedal in Bracket Nut, Self Locking, securing Fulcrum Pin Washer, Plain, under Nut		1 1 1	
C.14190	CROSS SHAFT ASSEMBLY ON DASH		1	
C.13308 3D.1814/2 JFS.125/3R	Bearing Assembly, supporting Cross Shaft at R.H. side Pop Rivet, securing Bearing to Dash Screw, Set, securing Cross Shaft Bracket to L.H. side of Dash		1 3 2	
C.724 FW.104/T	Washer, Shakeproof, on Setscrews Washer, Plain, under Shakeproof Washers		2 2	
C.12486 L.103/6U C.386	Roller, on Cross Shaft, for Accelerator Pedal Split Pin, retaining Roller on Shaft Washer, Plain, under Split Pin		1 1 1	
C.14167	CONTROL ROD LINKING LEVER ON CROSS SHAFT WITH INTERMEDIATE LEVER		1	
C.13806	Clip, securing Control Rod		2	

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14109	INTERMEDIATE LEVER ASSEMBLY AT R.H. SIDE OF DASH		1	
C.14115	Bearing Bracket Assembly, supporting end of Inter-		1	
C.13316	mediate Lever  Distance Washer, at each side of Bearing		2	
L.103/6U C.386	Split Pin, retaining Bearing Bracket Washer, Plain, under Split Pin		1 1	
BD.1708/2	Washer, Double Coil Spring, under Plain Washer		1	
UFS.125/5R	Screw, Set, securing Intermediate Lever to Dash		4	
C.724 FW.104/T	Washer, Shakeproof, on Setscrews Washer, Plain, under Shakeproof Washers		<b>4</b> 4	
C.13450	CONTROL ROD LINKING INTER- MEDIATE LEVER WITH LEVER ON THROTTLE SLAVE SHAFT		1	
UFN.125/L C.724	Nut, securing Control Rod Washer, Shakeproof, under Nuts		2 2	
C.14128	LEVER, ON REAR SLAVE SHAFT, FOR CONNECTION OF CONTROL ROD (AUC.4055)		1	
5803	Bolt, clamping Lever on Slave Shaft		1	
5614 7966	Nut, on Bolt Washer, Spring, under Nut		1	
C.14145	FRONT SLAVE SHAFT FOR THROTTLE OPERATION		1	
	•			
C.14147	REAR SLAVE SHAFT FOR THROTTLE OPERATION		1	

## ACCELERATOR CONTROLS (L.H. DRIVE CARS ONLY)

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.14103	LEVER, ON THROTTLE SLAVE SHAFTS, FOR CONNECTION OF CONTROL RODS TO CARBURETTERS (AUC.4054)		. <b>3</b>		
5803 5614 7 <del>96</del> 6	Bolt, securing Levers to Slave Shafts Nut, on Bolts Washer, Spring, under Nuts		3 3 3		
C.14359	Distance Piece, on Rear Slave Shaft, between Boss on Air Pipe and Lever for Centre Carburetter		1		
C.11635	COUPLING, LINKING FRONT AND REAR SLAVE SHAFTS		1		
5803 5614 7966	Bolt, through Coupling Nut, on Bolts Washer, Spring, under Nuts		2 2 2		
			·		
C.14104	CONTROL ROD, LINKING LEVERS ON SLAVE SHAFTS WITH CARBURETTERS		3		
C.13824	Clip, securing Control Rods		6		

#### PLATE 22 WILL BE ISSUED AT A LATER DATE

# FUEL SYSTEM FOR XK.150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8352 C.990/1 C.1617	PETROL TANK ASSEMBLY  Filter Assembly, at bottom of Tank  Washer, on Filter		1 1 1	Fitted from Chassis No. 830001 to 830559 827001 to 827093 837001 to 837467 824001 to 824452 834001 to 835588
C.14403 C.990/1 C.1617	PETROL TANK ASSEMBLY  Filter Assembly, at bottom of Tank  Washer, on Filter	73- 1 73- 2 73- 3	1 1 1	Fitted to Chassis No. 820001 and subs. 830560 and subs. 827094 and subs. 837468 and subs.
C.14401 C.2905/1	Ventilation Hose, from Tank to Petrol Filler Box Clip, securing Ventilation Hose	73- 4	1 2	824453 and subs. 835589 and subs.
BD.4368 C.2905/7	HOSE, CONNECTING TANK TO PETROL FILLER BOX Clip, securing Hose	73- 5	1 2	
C.8407	PETROL TANK ELEMENT UNIT (SMITH'S Y.86030)	73- 6	1	
C.937 NS.313/3H C.2296/9	Gasket, under Element Unit Screw, Set, securing Element Unit Copper Washer, on Setscrews	73- 7	1 6 12	
C.8368	STUD, SECURING PETROL TANK TO TIE TUBE ON CHASSIS FRAME REAR EXTENSION	73– 8	2	
C.741 C.8370 C.8374	Washer, Shakeproof, at top of Studs Rubber Pad, at bottom of Studs Washer, Special, at each side of Mounting Brackets on Petrol Tank	73- 9 73-10 73-11	2 2 4	
NN.131/L NN.231/L	Nut, securing Petrol Tank Locknut, on Studs	73–12 73–13	2 2	

# FUEL SYSTEM FOR XK.150 MODELS ONLY

7				
(	OLT SECURING PETROL TANK TO FUBULAR CROSS MEMBER ON CHASSIS FRAME REAR EXTENSION	73–14	2	
NN.131/L <b>N</b> u C.8374 <b>W</b> a	bber Pad, on Bolts ut, on Bolts asher, Special, under Nuts cknut, on Bolts	73–15 73–16 73–17 73–18	2 2 2 2	
C.8372 Fel C.8373 Fel	It Strip, seating Petrol Tank $(9'' \times 2'' \times \frac{1}{8}'')$ It Strip, seating Petrol Tank $(7'' \times 2'' \times \frac{1}{8}'')$ It Strip, seating Petrol Tank $(18'' \times 2'' \times \frac{1}{8}'')$ It Strip, seating Petrol Tank $(44'' \times 1'' \times \frac{1}{8}'')$		1 1 2 1	
C.7555 <b>PE</b>	ETROL PIPE (REAR) FROM TANK	73–19	1	
	ip, securing Rear Pipe to Bumper Bracket on Chassis		1	
NS.125/4D <b>Scr</b> NN.125/L <b>N</b> u	rame, Set, securing Clip at, on Setscrew asher, Shakeproof, under Nut		1 1 1	
F	ETROL PIPE (CENTRE) FROM REAR PIPE TO INLET SIDE OF PETROL PUMP		1	Fitted from Chassis No. 830001 to 831142 827001 to 827212
ı	ETROL PIPE (FRONT) FROM OUT- LET SIDE OF PETROL PUMP TO FLEXIBLE PIPE		1	837001 to 837628 824001 to 824609 834001 to 835717
i	ETROL PIPE (CENTRE) FROM REAR PIPE TO INLET SIDE OF PETROL PUMP	73–20	1	
				Fitted from Chassis No. 820001 to 820016 831143 to 831898 827213 to 827271
1	ETROL PIPE (FRONT) FROM OUT- LET SIDE OF PETROL PUMP TO FLEXIBLE PIPE	73–21	1	837629 to 837940 824610 to 824741 835718 to 835934
	njo Bolt, securing Front Pipe to Pump bre Washer, on Banjo Bolt	73–22 73–23	1 2	

## FUEL SYSTEM

FOR XK.150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
C.14341	PETROL PIPE (CENTRE) FROM REAR PIPE TO INLET SIDE OF PETROL PUMP	73–20	1	
				Fitted from Chassis No. 820017 to 820039 831899 to 832080 827272 to 827358
C.14342	PETROL PIPE (FRONT) FROM OUT- LET SIDE OF PETROL PUMP TO INTERMEDIATE PIPE	73-21	1	837941 to 838246 824742 to 824884 835935 to 836191
C.1506 C.11489	<b>Banjo Bolt,</b> securing Front Pipe to Pump <b>Fibre Washer,</b> on Banjo Bolt	73–22 73–23	1 2	j
C.14341	PETROL PIPE (CENTRE) FROM REAR PIPE TO INLET SIDE OF PETROL	73–20	1	]
	PUMP			Fitted to Chassis No. 820040 and subs. 832081 and subs. 827359 and subs. 838247 and subs.
C.14342	PETROL PIPE (FRONT) FROM OUT- LET SIDE OF PETROL PUMP TO FLEXIBLE PIPE	73–21	1	824885 and subs. 836192 and subs.
C.1506 C.11489	<b>Banjo Bolt,</b> securing Front Pipe to Pump <b>Fibre Washer,</b> on Banjo Bolt	73–22 73–23	1 2	
C.3727	Clip, securing Front Petrol Pipe to Chassis Frame Side		5	
C.1040/7 AS.402/4H AN.102/L C.723	Clip, securing Front Petrol Pipe to Dash Screw, Set, securing Clip Nut, on Setscrew Washer, Shakeproof, under Nut		1 1 1	
C.9688/1	PETROL PUMP (4644/1 — AUA 52)	73–24	1	
C.800 C.974 C.2539/1 FW.205/T	Stud, for mounting of Petrol Pump Grommet, on Studs Nut, on Studs Washer, Plain, on Studs	73–25 73–26 73–27 73–28	2 2 2 6	
C.3629	FLEXIBLE PETROL PIPE FROM FRONT PIPE TO CARBURETTER FEED PIPE	73–29	1	Fitted from Chassis No. 820001 to 820016 830001 to 831898 827001 to 827271 837001 to 837940 824001 to 834741 834001 to 835934

# FUEL SYSTEM FOR XK.150 MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
C.3629	FLEXIBLE PETROL PIPE FROM FRONT PIPE TO INTERMEDIATE PIPE	73–29	1	Fitted to Chassis No. 820040 and subs. 832081 and subs. 827359 and subs. 838247 and subs. 824885 and subs. 836192 and subs.
C.14730 C.14685	PETROL PIPE (INTERMEDIATE) FROM FRONT PIPE TO FILTER Union Nut, fixing Intermediate Pipe to Flexible		1	Fitted from Chassis No. 820017 to 820039 831899 to 832080 827272 to 827358
C.11575	Pipe Olive, on Intermediate Pipe		1	837941 to 838246 824742 to 824884 835935 to 836191
C.15940 C.11576 C.11575	PETROL PIPE (INTERMEDIATE) FROM FLEXIBLE PIPE TO FILTER  Union Nut, fixing Intermediate Pipe to Flexible Pipe Olive, on Intermediate Pipe	73–30	1 1 1	Fitted to Chassis No. 820040 and subs. 832081 and subs. 827359 and subs. 838247 and subs. 824885 and subs. 836192 and subs.
		<b></b>		
C.13681	PETROL FILTER ASSEMBLY (AC.7950001)	73–31	1	
UFS.131/6R UFN.131/L FG.105/X	Screw, Set, securing Filter to R.H. Wing Valance Nut, on Setscrews Washer, Spring, under Nuts		2 2 2	Fitted to Chassis No. 820017 and subs. 831899 and subs. 827272 and subs. 837941 and subs.
C.14492	FLEXIBLE PETROL PIPE FROM FILTER TO CARBURETTER FEED PIPE	73–32	1	835935 and subs.
C.13705	Banjo Bolt, securing Intermediate and Flexible Pipes to Filter	73–33	2	
C.784	Fibre Washer, on Banjo Bolts	73-34	4	J

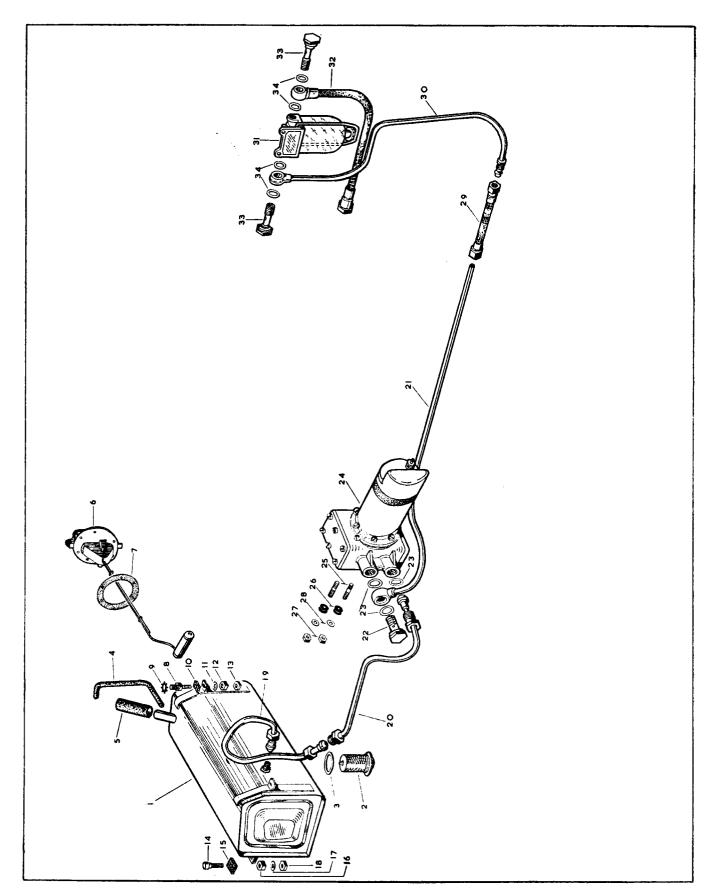


PLATE 73

# FUEL SYSTEM FOR XK.150 'S' MODELS ONLY

Filter Assembly, at bottom of Tank   1	Part No.	Description	Plate No.	No. per Unit	Remarks
Filter Assembly, at bottom of Tank	C.8352	PETROL TANK ASSEMBLY		1	FITTED ONLY TO L.H. DRIVE
Filter Assembly, at bottom of Tank	C.990/1 C.1617				🏲 from Chassis No.
Filter Assembly, at bottom of Tank					
990/i Filter Assembly, at bottom of Tank	C.1 <del>44</del> 03	PETROL TANK ASSEMBLY	74 1	1	
14401   Ventilation Hose, from Tank to Petrol Filler Box   74- 4   1   824789 and subs.   835961 and subs.	C.990/1 C.1617				830560 and subs. 827334 and subs.
### PETROL FILLER BOX  2905/7 Clip, securing Hose 2  #### PETROL TANK ELEMENT UNIT	C.14401 C.2905/1		74– 4		824789 and subs.
(SMITH'S Y.86030)  937 Gasket, under Element Unit 74- 7 1  S.313/3H Screw, Set, securing Element Unit 6  2296/9 Copper Washer, on Setscrews 12  8368 STUD, SECURING PETROL TANK TO 74- 8 2  TIE TUBE ON CHASSIS FRAME  REAR EXTENSION  741 Washer, Shakeproof, at top of Studs 74- 9 2  8370 Rubber Pad, at bottom of Studs 74-10 2  8374 Washer, Special, at each side of Mounting Brackets on 74-11 4  Petrol Tank  N.131/L Nut, securing Petrol Tank 74-12 2	BD.4368 C.2905/7	PETROL FILLER BOX	7 <b>4</b> – 5		
937 Gasket, under Element Unit 74-7 1 S.313/3H Screw, Set, securing Element Unit 6 2296/9 Copper Washer, on Setscrews 12  8368 STUD, SECURING PETROL TANK TO 74-8 1 TIE TUBE ON CHASSIS FRAME REAR EXTENSION  741 Washer, Shakeproof, at top of Studs 74-9 2 8370 Rubber Pad, at bottom of Studs 74-10 2 8374 Washer, Special, at each side of Mounting Brackets on Petrol Tank 74-11 4 Petrol Tank Nut, securing Petrol Tank 74-12 2	C.8407		74- 6	1	
Screw, Set, securing Element Unit Copper Washer, on Setscrews  8368  STUD, SECURING PETROL TANK TO TIE TUBE ON CHASSIS FRAME REAR EXTENSION  741  Washer, Shakeproof, at top of Studs Rubber Pad, at bottom of Studs Rubber Pad, at bottom of Studs Washer, Special, at each side of Mounting Brackets on Petrol Tank N.131/L Nut, securing Petrol Tank 74–12  2	C.937		7 <del>4-</del> 7	1	
TIE TUBE ON CHASSIS FRAME REAR EXTENSION  741 Washer, Shakeproof, at top of Studs 74-9 2 8370 Rubber Pad, at bottom of Studs 74-10 2 8374 Washer, Special, at each side of Mounting Brackets on 74-11 Petrol Tank  N.131/L Nut, securing Petrol Tank  74-12 2	NS.313/3H C.2296/9	Screw, Set. securing Element Unit		6	
8370 Rubber Pad, at bottom of Studs 74–10 2 8374 Washer, Special, at each side of Mounting Brackets on 74–11 4 Petrol Tank N.131/L Nut, securing Petrol Tank 74–12 2	C.8368	TIE TUBE ON CHASSIS FRAME	74– 8	2	
N.131/L Nut, securing Petrol Tank 74–12 2	C.741 C.8370 C.8374	Rubber Pad, at bottom of Studs Washer, Special, at each side of Mounting Brackets on	74-10	2	
TAZOTIE MOUNTAIN TO THE TOTAL ACTION AS A STATE OF THE TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STATE OF TAX A STAT	NN.131/L NN.231/L		74–12 74–13	2 2	

# FUEL SYSTEM FOR XK.150 'S' MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.8369	BOLT, SECURING PETROL TANK TO TUBULAR CROSS MEMBER ON CHASSIS FRAME REAR EXTENSION	74–14	2		
C.8370 NN.131/L C.8374 NN.231/L	Rubber Pad, on Bolts Nut, on Bolts Washer, Special, under Nuts Locknut, on Bolts	74–15 74–16 74–17 74–18	2 2 2 2		
C.8371 C.8372 C.8373 C.8414	Felt Strip, seating Petrol Tank $(9"\times2"\times\frac{1}{6}")$ Felt Strip, seating Petrol Tank $(7"\times2"\times\frac{1}{6}")$ Felt Strip, seating Petrol Tank $(18"\times2"\times\frac{1}{6}")$ Felt Strip, seating Petrol Tank $(44"\times1"\times\frac{1}{6}")$		1 1 2 1		
C.7555	PETROL PIPE (REAR) FROM TANK TO CENTRE PIPE	7 <del>4</del> _19	1		
C.1040/12	Clip, securing Rear Pipe to Damper Bracket on Chassis		1		
NS.125/4D NN.125/L	Frame Screw, Set, securing Clip Nut, on Setscrew		1 1		
C.724	<b>Washer,</b> Shakepro <b>o</b> f, under Nut		1	,	
C.14339	PETROL PIPE (CENTRE) FROM REAR PIPE TO INLET SIDE OF REAR PETROL PUMP	74–20	1		
C.14734	FLEXIBLE PETROL PIPE FROM CENTRE PIPE TO INLET SIDE OF FRONT PETROL PUMP	74-21	1		
C.14340	PETROL PIPE (FRONT) FROM OUTLET SIDE OF FRONT PETROL PUMP TO FORWARD FLEXIBLE PIPE	74-22	1		
C.14271	FLEXIBLE PETROL PIPE FROM OUT- LET SIDE OF REAR PETROL PUMP TO BRANCH ON FRONT PIPE	74–23	1		

## FUEL SYSTEM

#### FOR XK.150 'S' MODELS ONLY

Part No.	Description	Plate No.	No. per Unit	Remarks
C.9688/1	PETROL PUMP (4644/1 — AUA 52)	74-24	2	
C.800 C.974 C.2539/1 FW.205/T	Stud, for mounting of Petrol Pumps Grommet, on Studs Nut, on Studs Washer, Plain, on Studs	74–25 74–26 74–27 74–28	4 4 4 12	
C.11488	Banjo Bolt, securing Flexible Pipe to Outlet side of	74–29	1	
C.1506	Rear Petrol Pump  Banjo Bolt, securing Centre Pipe to Inlet side of Rear  Pump and Front Pipe to Outlet side of Front Petrol	74–30	2	
C.11489	Pump Fibre Washer, on Banjo Bolts	74–31	6	
C.3629	FLEXIBLE PETROL PIPE (FORWARD) FROM FRONT PIPE TO LOWER PIPE	74–32	1	
C.14357	PETROL PIPE (LOWER) FROM FOR- WARD FLEXIBLE PIPE TO PETROL FILTER	74–33	1	
:				
C.13681	PETROL FILTER ASSEMBLY (AC.7950001)	74–34	1	
C.13705 C.784	Banjo Bolt, securing lower Pipe to Petrol Filter Fibre Washer, on Banjo Bolt	74–35 74–36	. 1	
UFS.131/7R FG.105/X C.14353	Screw, Set, securing Petrol Filter to Air Cleaner Washer, Spring, on Setscrews Distance Piece, on Setscrews		2 2 1	Fitted from Chassis No. 820005 to 820038 830336 to 832075 827334 to 827354 837993 to 838245 824789 to 824863 835961 to 836186
UFN.131/L FG.105/X	Nut, securing Petrol Filter Washer, Spring, under Nuts		2 2	Fitted to Chassis No 820039 and subs. 832076 and subs. 827355 and subs. 8382464 and subs. 824864 and subs. 836187 and subs.

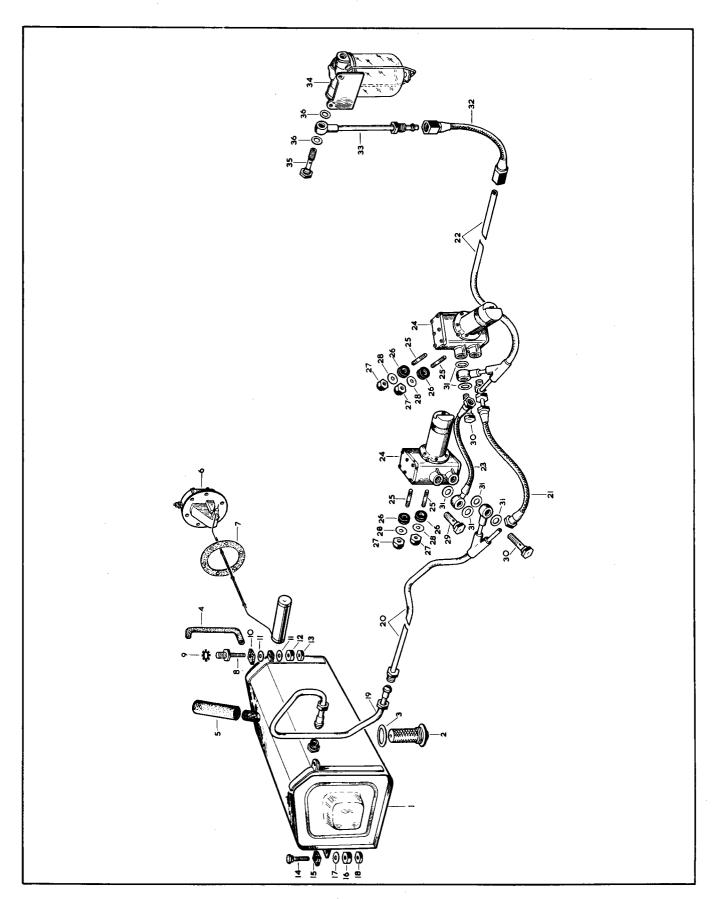


PLATE 74