STEERING UNIT

Part No.	Description	Plate No.	No. per Unit	Remarks
C.8469	RACK AND PINION ASSEMBLY, COMPLETE	66 1	1	R.H. DRIVE CARS ONLY.
C.8470	RACK AND PINION ASSEMBLY, COMPLETE		1	L.H. DRIVE CARS ONLY.
C.10626	Housing Assembly, for Pinion (Complete with	66- 2	1	R.H. DRIVE CARS ONLY.
C.10627	Bushes) Housing Assembly, for Pinion (Complete with		1	L.H. DRIVE CARS ONLY.
C.7652	Bushes) Tube Assembly, housing Rack	66- 3	1	
NS.131/5D	Screw, Set, securing Tube to Pinion Housing	66- 4	3	
C.725	Washer, Shakeproof, on Setscrews	66- 5	3	
C.7067 C.7606	Rack only Pinion only	66- 6 66- 7	1	
C.7653	Eccentric Sleeve, in Pinion Housing, for adjust-	66- 8	i	
C.7566	ment of Mesh between Pinion and Rack Bearing (Torrington B.1816) at each end of Pinion		2	
C.7060	Housing Plate, at end of Pinion Housing, locating Bearing		1	
0.7044	and Sleeve		4	
C.7061	Cover, at end of Housing Screw, Set, securing End Cover	66–11 66–12	1 4	
NS.131/6D C.725	Washer, Shakeproof, on Setscrews	66-13	4	
C.7654	Flange, for adjustment of Eccentric Sleeve	66-14	1	
C.7059	Oil Seal, behind Adjusting Flange	66-15	1	
C.7655	Retainer, Inner, between Oil Seal and Adjusting	6616	1	
C.7656 NS.131/6D	Flange Retainer, Outer, behind Oil Seal Screw, Set, securing Retainers and Adjusting Flange	66–17 66–18	1 4	
C.725	to Pinion Housing Washer, Shakeproof, on Setscrews	66–19	4	
C.3362/1	Grease Nipple, at top of Pinion Housing (Tec. NA. 6674)	00-20		
C.14002	Plunger, at top of Pinion Housing, applying Friction to Rack		1	
C.8477	Shim, under Screwed Support		As req'd	
C.14001	Screwed Support, for Plunger	66–23 66–24	1	
C.14005 C.14003	Cap, securing Plunger and Spring in Pinion Housing Shim, under Cap for adjustment of Tension on		As req'd	
C.14004	Plunger Belleville Washer, on Plunger, below Cap	66-26	6	
C.8321	Tie Rod Assembly, complete	66-27	2	
C.6623	Bellows (Rubber), between Tie Rods and Pinion		2	
C 2005 12	Housing		•	
C.2905/2 C.2905/4	Clip, securing Bellows to Tie Rods Clip, securing Bellows to Pinion Housing	66–29 66–30	2 2	
C.8053	Tab Washer, locking Ball Joint at ends of Rack	66-31	2	
C 40/2/	DINION HOUSING ASSEMBLY	"	1	R LL DRIVE CARS ONLY
C.10626	PINION HOUSING ASSEMBLY	66– 2	ľ	R.H. DRIVE CARS ONLY.
C.10627	PINION HOUSING ASSEMBLY		1	L.H. DRIVE CARS ONLY.
			_	,
C.10628	Bush, in ends of Pinion Housing	66–32	2	•

STEERING UNIT

Part No.	Description	Plate No.	No. per Unit	Remarks
C.7652	TUBE ASSEMBLY, HOUSING RACK	66- 3	1	
C.7103	Bearing, in end of Rack Tube	66–33	1	
C.8321	TIE ROD ASSEMBLY	66–27	2	
C.8322 C.8323	Ball Joint Assembly, at ends of Rack Ball Joint Assembly, at outer ends of Tie Rod	66–34 66–35	2 2	
C.3362/1	Tube Grease Nipple, in Outer Ball Joint Assembly (Tec. NA.6674)	66–36	2	
C.3020	Gaiter, protecting Outer Ball Joints	66–37	2	
C.8150/9 C.3165	Nut, Self-Locking, on Outer Ball Pins Clamp, retaining Outer Ball Joints in Tie Rod Tube	66–38 66–39	2 2	
NB.131/10D	Bolt, through Clamps	66-40	2	
NN.131/L	Nut, on Bolts	66-41	2	
FG.105/X FW.105/T	Washer, Spring, under Nuts Washer, Plain, under Spring Washers	66-42 66-43	2 2	
C.8322	INNER BALL JOINT ASSEMBLY	66–34	2	
C.7569	Shim, between Ball Cup and Screwed Socket (.004" thick)	66–44	As req'd	
C.11723	Shim, between Ball Cup and Screwed Socket (.010" thick)		As req'd	
C.8472 C.10027	Spring, behind Shims Tab Washer, securing Ball Housing	66–45 66–46	2 2	
C 7700	MOUNTING FOR PACK AND	// 1 ^m	2	
C.7799	MOUNTING FOR RACK AND PINION ASSEMBLY	66–47	2	
C.8024 C.8249 NS.231/7D NN.231/L	Shim, under Mounting (.048" thick) Shim, under Mounting (.048" thick) Screw, Set, securing Mountings to Frame Nut, on Setscrews	66 -48 66-49 66-50	8 [*] 8	
C.725 C.7834	Washer, Shakeproof, under Nuts Screw, Set, securing Pinion Housing to Mounting at	66–51	8 2	These Setscrews and Bolts must be secured with Locking Wire
C.8021 C.8022 C.8023	Bolt, securing Pinion Housing to Mounting at rear Bridge Piece, on Bolts Sleeve on Bolts	66–52 66–53 66–54	2 1 2	Secured with Edening Time
NN.231/L C.725 C.7834 C.8021 C.8022	Screw, Set, securing Mountings to Frame Nut, on Setscrews Washer, Shakeproof, under Nuts Screw, Set, securing Pinion Housing to Mounting at front Bolt, securing Pinion Housing to Mounting at rear Bridge Piece, on Bolts	66–51 66–52 66–53	8 8 2 2 1	These Setscrews and Bolts m secured with Locking Wire

STEERING UNIT

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.7832	PLATFORM ASSEMBLY FOR SUPPORT OF RACK TUBE	6655	1		
NS.231/5D C.725 NS.137/6D	Screw, Set, securing Platform to Mounting Washer, Shakeproof, on Setscrews Screw, Set, securing Rack Tube to Platform	66-56 66-57	4 4 2		
C.726 FW.106/T	Washer, Shakeproof, on Setscrews Washer, Plain, under Shakeproof Washers	66-58 66-59	2 2		

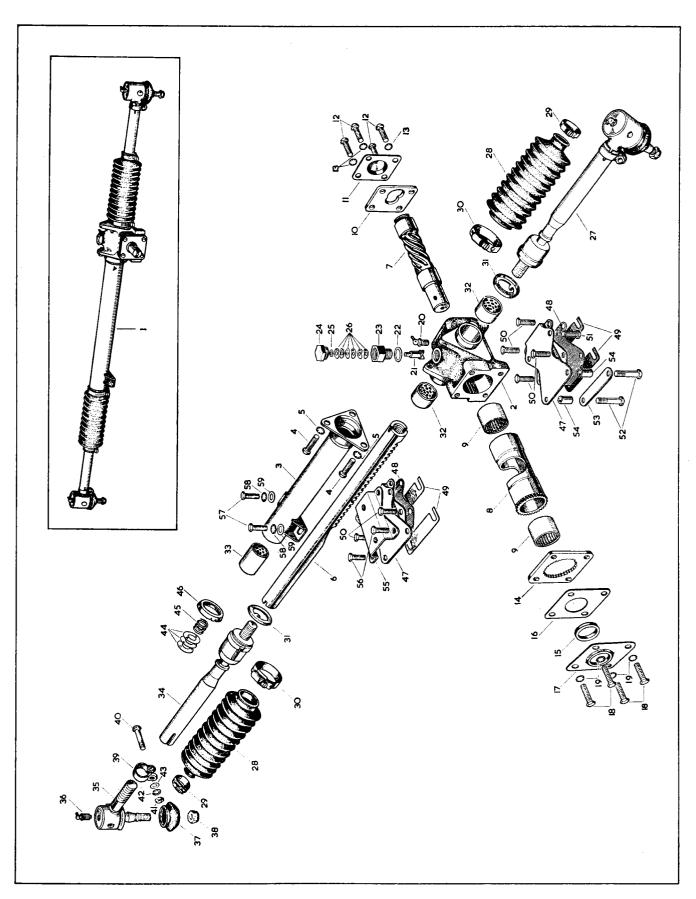


PLATE 66

Part No.	Description	Plate No.	No. per Unit	Remarks
C.12857	UPPER STEERING COLUMN ASSEMBLY		1	DROP HEAD AND FIXED HEAD COUPES ONLY Fitted from Chassis No. 837001 to 837070 824001 to 824075 834001 to 834599
C.12852 C.12851 C.10263 C.10264 C.10790 C.10788 C.8084 C.8085 C.10253 C.10257	Outer Tube Assembly Inner Column, Female Felt Bearing, Upper Felt Bearing, Lower Washer, retaining Felt Bearings Spring Clip, retaining Washers Inner Column, Male Stop Button, in Male Inner Column Spring Clip, retaining Stop Button Locknut, clamping Male Inner Column on Telescopic Device		1 1 1 4 2 1 1 1	
C.13666	UPPER STEERING COLUMN ASSEMBLY		1	DROP HEAD AND FIXED HEAD COUPES ONLY Fitted from Chassis No. 827001 to 827068 837071 to 837414 824076 to 824413 834600 to 835547
C.12852 C.13641 C.10263 C.10264 C.10790 C.10788 C.13642 C.13662 C.10253 C.13639 C.13638	Outer Tube Assembly Inner Column, Female Felt Bearing, Upper Felt Bearing, Lower Washer, retaining Felt Bearings Spring Clip, retaining Washers Inner Column, Male Stop Button, in Inner Column Spring Clip, retaining Stop Button Locknut, clamping Male Inner Column on Telescopic Device Split Collet, inside Locknut		1 1 1 1 4 2 1 1 1	
C.14682	UPPER STEERING COLUMN ASSEMBLY		1]
C.14070 C.14674 C.10263 C.10264 C.10790 C.10788 C.13642 C.14675 C.10253 C.13858	Outer Tube Assembly Inner Column, Female Felt Bearing, Upper Felt Bearing, Lower Washer, retaining Felt Bearings Spring Clip, retaining Washers Inner Column, Male Stop Button, in Inner Column Circlip, locking Stop Button Locknut, clamping Male Inner Column on Telescopic Device Split Collet, inside Locknut	67-1 67-2 67-3 67-4 67-5 67-6 67-7 67-8 67-9 67-10	1 1 4 2 1 1 1 1	Fitted to Chassis No. 820001 and subs. 830001 and subs. 827069 and subs. 837415 and subs. 824414 and subs. 835548 and subs.
	NOTE.—C.14682 incorporates a Female Inner Column which is tapped to receive a screwed type Stop Button. If either of these items is required individually to service an Upper Steering Column fitted from Chassis No. 830001 to 830649 827069 to 827098 837415 to 837479 824414 to 824467 835548 to 835589 then BOTH PARTS should be used as a pair. The Complete Upper Steering Column C.14682 will be Issued from Jaguar Spares Division to service Steering Columns fitted to the above cars.			

Part No.	Description	Plate No.	No. per Unit	Remarks
C.12823	HORN SLIP RING ASSEMBLY (LUCAS 348479)		1	
C.10317 C.8153 C.10319 C.10320 C.8156 C.8761	Slip Ring only (348276) Cable Assembly (861622) Rotor, bottom half (348275) Rotor, top half (348274) Spring, for Cable Tension (348627) Contact for Cable Assembly (348266)	67–12 67–13 67–14 67–15 67–16 67–17	1 1 1 1 1	Supplied complete only, to Part No. 8295 (54300638)
C.8157	CONTACT ASSEMBLY FOR HORN SLIP RING (348262)		1	
C.8158 C.8159 C.8161 C.8160 C.10650	Contact Holder (348269) Contact (348268) Bolt, securing Contact to Holders (139444) Nut, on Bolt (348270) Sleeve, insulating Contacts (348272)	6718 6719 6720 6721 6722	2 1 1 1	
C.13024 C.12194	Insulating Strip (Fibre) protecting Contact from above (348486) Eyelet, connecting Cable to Horn Push (188818)	67–23 67–24	1	
C.11746	EARTH CONTACT FOR OPERATION OF HORN (348313)	67–25	1	
UCS.313/3R UCN.113/L C.721	Screw, Set, securing Earth Contact to Bracket on Outer Tube Nut, on Setscrew Washer, Shakeproof, under Nut		1 1 1	
C.13958	DIRECTION INDICATOR CONTROL ASSEMBLY (31776/A—37SA)	67–26	1	
C.14307 7521 7522 7523	Cover Assembly (comprising Front and Rear Covers) Fixing Clip (with Screws, etc.) (54330333) Contact Set (348443) Spring, centring Pawl (348323)		1 1 1	Fitted to Chassis No. 820001 and subs. 830001 and subs. 827069 and subs. 837415 and subs. 824414 and subs. 835548 and subs.
C.16120	STRIKER FOR RETURN OF DIREC- TION INDICATOR CONTROL TO NEUTRAL POSITION (54332927)	67–27	1	
C.14007/1 C.723/A C.3377	Screw, Set, securing Striker Washer, Shakeproof, on Setscrews Washer, Plain, under Shakeproof Washers		2 2 2	

Part No.	Description	Plate No.	No. per Unit	Remarks
C.7842	STEERING WHEEL (17")	67-28	1	
C.1037 C.1024	Grub Screw in Hub of Steering Wheel Dust Cover (Telescopic) between Locknut and bottom	67-29 67-30	4	
C.3366 C.8576	of Steering Wheel Cup (Large) at bottom of Telescopic Dust Cover Cup (Small) at top of Telescopic Dust Cover	67-31 67-32	1	
C.7878	Split Cone on Male Inner Column for seating of Steering Wheel		2 halves	
C.7879 C.9017 C.11520	Nut, securing Steering Wheel to Male Inner Column Washer, under Nut Tab Washer, locking Nut	67–34 67–35 67–36	1 1 1	
C.12975	BRACKET ASSEMBLY, MOUNTING STEERING COLUMN TO DASH FRONT	67–37	1	R.H. DRIVE CARS ONLY.
C.12979	BRACKET ASSEMBLY, MOUNTING STEERING COLUMN TO DASH FRONT	·	1	L.H. DRIVE CARS ONLY.
C.12982	RUBBER SEAL BETWEEN MOUNTING BRACKET AND DASH FRONT	67–38	1	R.H. DRIVE CARS ONLY.
C.12983	RUBBER SEAL BETWEEN MOUNTING BRACKET AND DASH FRONT		1	L.H. DRIVE CARS ONLY.
C.11957 C.12858	End Cap at lower end of Steering Column Outer Tube Rubber Washer, under End Cap	67-39 67-40	1 1	
NS.125/5D FW.104/T NN.125/L C.724 NS.131/5D NN.131/L C.725 NB.131/15D FW.105/T C.12974 NN.131/L C.725	Screw, Set, securing Mounting Bracket to Dash Washer, Plain, on Setscrews Nut, on Setscrews Washer, Shakeproof, under Nuts Screw, Set, clamping Mounting Bracket Nut, on Setscrew Washer, Shakeproof, under Nut Bolt, securing Steering Column to Dash, upper Washer, Plain, on Bolt Distance Tube, on Bolt Nut, on Bolt Washer, Shakeproof, under Nut		4 4 4 1 1 1 1 2 1	

Part No.	Description	Plate No.	No. per Unit	Remarks	
C.12985	LOWER STEERING COLUMN ASSEMBLY	67–41	1 -		
8379 5426	End Yoke for Universal Joint (KO.5/4/GB.343) Journal Assembly, for Universal Joint		1 1		
C.10836/1	COUPLING FOR LOWER STEERING COLUMN	67 _4 2	1		
C.10837	UPPER JAW FOR LOWER STEERING COLUMN	67-43	1		
C.10838	Cap Screw, securing Coupling to Lower Steering Col-	67 -44	4		
C.11820/3	umn and Upper Jaw Lockwasher (Painut) on Cap Screws	67-45	4		
UFB.131/13R UFN.131/L C.725	Bolt, securing Upper Jaw to Upper Steering Column Nut, on Bolt Washer, Shakeproof, under Nut	67–46 67–47 67–48	1 1 1		
C.6330 NN.125/L C.724	Taper Pin, securing Lower Jaw to Pinion Shaft Nut, on Taper Pin Washer, Shakeproof, under Nut	67–49 67–50 67–51	1 1 1		

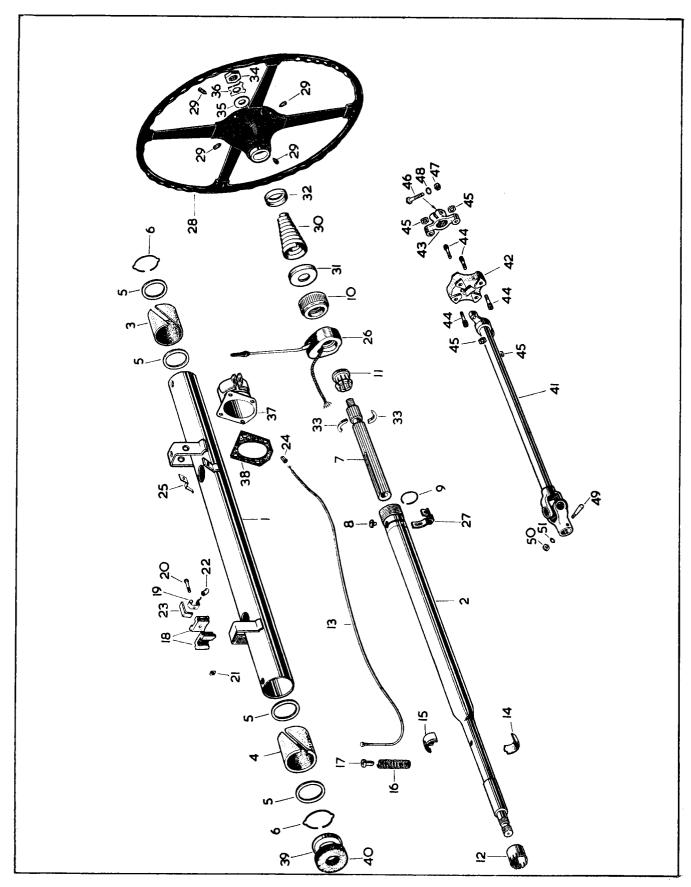


PLATE 67